

# HABITAT WALL HUNG VANITY UNIT

INTEGRATED BASIN - 500 / 900 / 1200 / 1500 SINGLE / 1500 DOUBLE











Habitat 900 in Fremantle veneer with integrated basin



Habitat 1500 Double in Fremantle veneer with integrated basins

## SPECIFICATIONS

<b>Recommended use</b>	Domestic
<b>Size availability:</b>	500 x 370 x 412mm 900 x 485 x 412mm 1200 x 485 x 412mm 1500 x 485 x 412mm
<b>Material:</b>	<p><b>Top:</b> White Solid Surface</p> <p><b>Cabinet:</b> All white or black matte/satin polyurethane OR white matte polyurethane + choice of six NAVurban veneers OR entirely in a NAVurban veneer:</p> <div style="display: flex; justify-content: space-around; align-items: flex-start;"> <div style="text-align: center;">   <small>Black matte/satin polyurethane</small> </div> <div style="text-align: center;">   <small>White matte/satin polyurethane</small> </div> <div style="text-align: center;">   <small>NAVurban 'Tablelands'</small> </div> <div style="text-align: center;">   <small>NAVurban 'Fremantle'</small> </div> <div style="text-align: center;">   <small>NAVurban 'Blackheath'</small> </div> <div style="text-align: center;">   <small>NAVurban 'Fitzroy'</small> </div> <div style="text-align: center;">   <small>NAVurban 'The Oaks'</small> </div> <div style="text-align: center;">   <small>NAVurban 'Yarra Walnut'</small> </div> </div>
<b>Plug &amp; waste:</b>	Requires 32mm plug & waste with overflow (not supplied)
<b>Interior:</b>	<p>Chosen NAVurban veneer and CIBO Black moisture resistant (MR) MDF</p> <p>Top drawer in 1200 and 1500 single vanities: Drawer dividers in chosen NAVurban veneer</p> <p><b>Note:</b> If alternative finish option of 'All matte/satin white polyurethane' has been selected, interior detail is in White moisture resistant (MR) MDF and CIBO Black moisture resistant (MR) MDF.</p> <p>If alternative finish option of 'All matte/satin black polyurethane' has been selected, interior detail is in CIBO Black moisture resistant (MR) MDF.</p>
<b>Fixing requirement:</b>	Wall hung vanity
<b>Mechanisms:</b>	Fingerpull handle(s) Soft closing drawer(s) and door(s)

## DETAILED CLEANING GUIDE – TOP/BASIN

### Solid Surface material

For everyday cleaning CIBO recommends wiping Solid Surface material with a damp, soapy sponge or cloth using a mild detergent, followed by a wipe over with a clean, damp cloth.

### Deep clean – Stubborn stains, light marks and scuffs


For more stubborn stains and marks you will need to occasionally give your Solid Surface material a more thorough clean using a mild abrasive cleanser. Firmly wipe the surface with a damp cloth or sponge and the mild abrasive cleanser using a wide circular motion. Finish by rinsing and wiping the surface with a clean damp cloth or sponge.

Please note, using abrasive cleansers on Solid Surface material may alter the sheen level. By routinely cleaning the entire surface a consistent sheen should return in time.





# HABITAT WALL HUNG VANITY UNIT INTEGRATED BASIN



## Side View - all Vanities

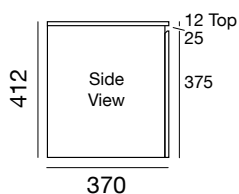



## 500mm

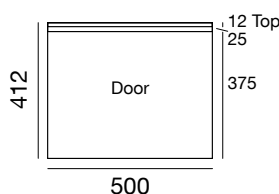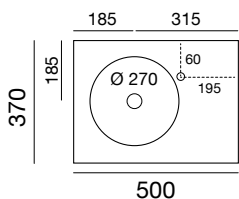



## 900mm - Left hand side basin\*

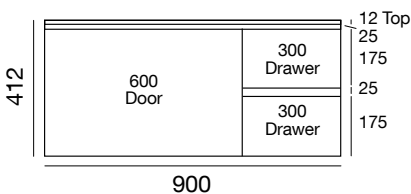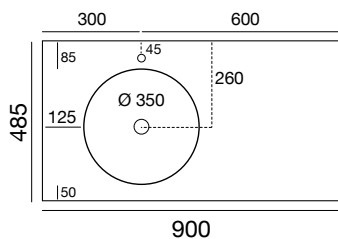



## 1200mm - Left hand side basin\*

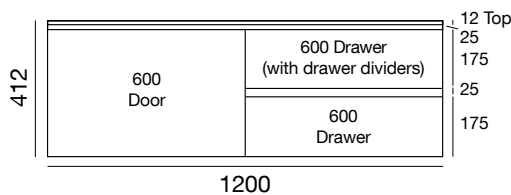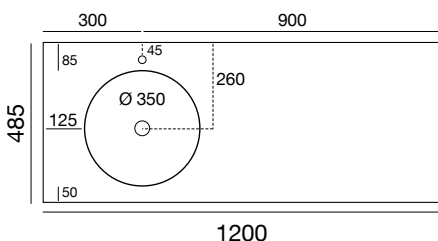

## 1500mm - Left hand side basin\*

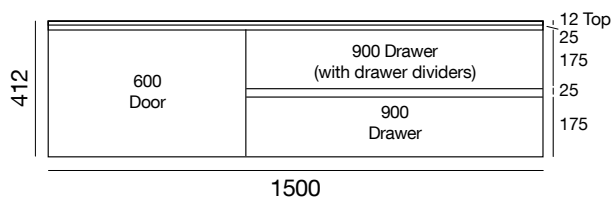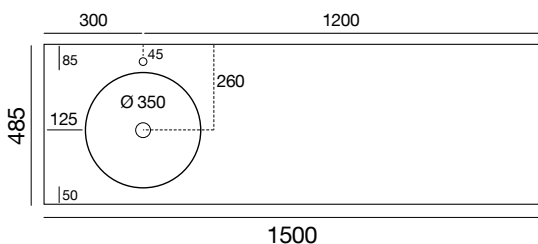

## 1500mm double

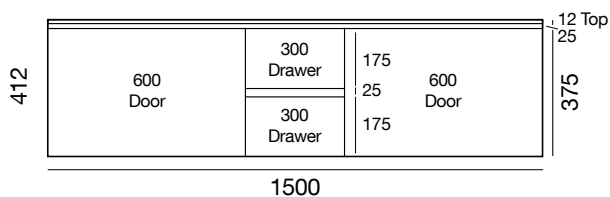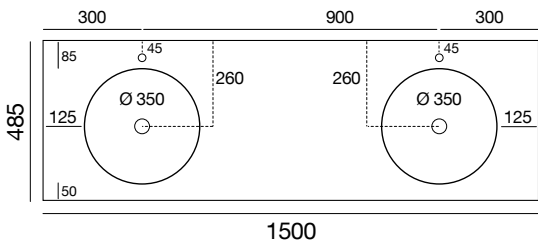

\*Also available with right hand side basin with left hand side drawers.

Dimensions are nominal measurements only

To see the complete CIBO range go to [www.reece.com.au/bathrooms](http://www.reece.com.au/bathrooms)





# HABITAT WALL HUNG VANITY UNIT INTEGRATED BASIN

## INSTALLATION INSTRUCTIONS

### PLEASE INSPECT YOUR CIBO PRODUCT ON DELIVERY (OR PICKUP), PRIOR TO INSTALLATION

A visual inspection must be made of the product on delivery (or pick up) by the person receiving it, prior to installation.

Please pay careful attention when removing the wrapping materials. If the product has marks, chips or imperfections deemed unacceptable and/or has been damaged in transit, the product should not be installed.

Please contact place of purchase immediately to advise of your concerns (prior to installation).

### For detailed Installation Instructions visit [www.cibodesign.com.au](http://www.cibodesign.com.au)

1. Remove cabinet drawer(s) before installing to avoid damage. Ensure that drawer runners are covered, i.e., with bubble wrap/plastic (to prevent debris from getting into the mechanism). If the top has not been fixed to the vanity, then please remove from vanity.
2. Using a hole saw, drill necessary holes in back of the vanity for the water supply pipes and wastes etc.
3. Carefully move the cabinet into place. Pack the vanity to the required height ensuring the vanity top is level from side to side and front to back. Packers may be required behind the unit to ensure the top is level and also to prevent the unit from twisting.
4. Once the vanity is level, fasten it to the wall using washers around the appropriate fixings i.e., screws, bolts (not supplied by CIBO). It is the installer's responsibility to determine what fixing materials are needed. Fixings should be made as high as possible on unit, with more emphasis placed on the top fixings.
5. Sweep debris from the interior of the unit and remove bubble wrap/plastic from drawer runners. Replace drawer(s).
6. If the top was removed in step 1, place the top upon the unit ensuring that the front and ends of the top line up with the front and ends of the unit. This may leave gaps behind the top and the wall. This needs to be filled with silicone. Also fix the top to the vanity with silicone.
7. The unit must be sealed along the back edge of the top and down the sides against the wall with bathroom quality silicone. The best method of applying silicone is to cut the appropriate sized tip at a 65° angle and to evenly run a bead around the unit ensuring all gaps are filled. Seal around the cabinet with silicone.
8. Spray soapy water on the silicone joint (on the wall and top) to stop silicone sticking to the wall, and wipe off the excess.
9. The pipes can now be connected, and where necessary the basin siliconed to the vanity. Basins need to be sealed completely around the join.

### PLEASE NOTE:

Accurate sealing of cabinet is vital for ensuring longevity of the vanity unit. It is the responsibility of the installer to adjust the drawer(s) after installation.

### UNDER NO CIRCUMSTANCES SHOULD VANITIES AND/OR TOPS BE TILED INTO THE WALL.

CIBO vanities and basin/tops must be fitted to finished/completed wall coverings e.g., tile, masonry or other cladding method deemed acceptable, as per the building code (of Australia) 2013.

The CIBO Warranty does not cover any vanity and/or top and/or basin that has been tiled 'into' a wall i.e., fitting or fixing a vanity to a wall and tiling around it, and/or tiling down and/or around the vanity and top/basin.