



KADO

Kado Lux Floor Waste 97mm DN80

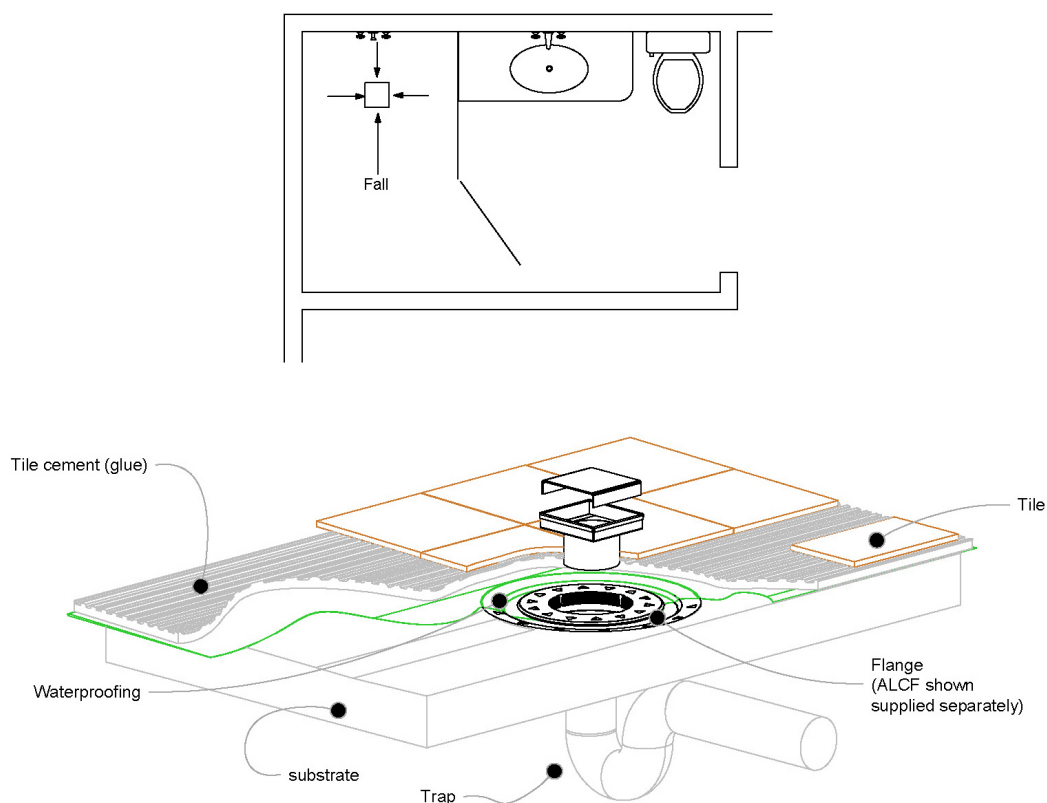

NOTE, this method requires the channel system to be above and separate from the waterproofing

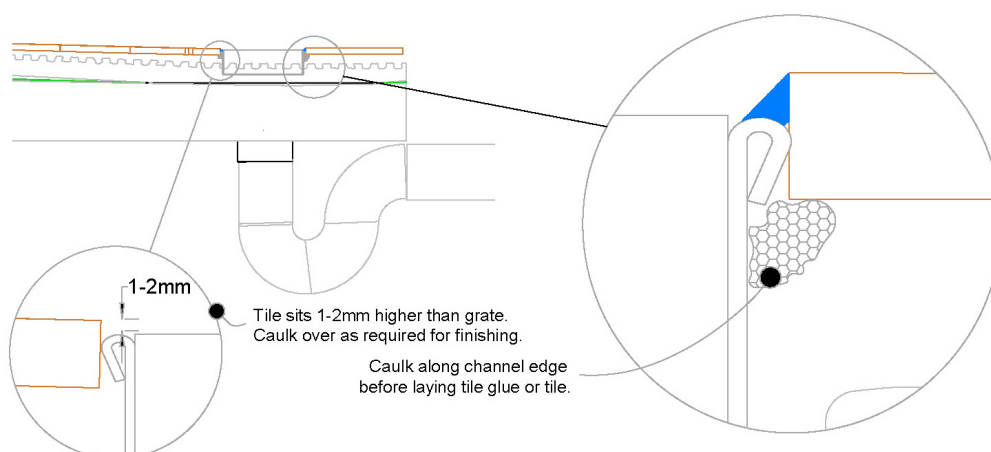

Installation and preparation of the shower or bathroom floor should be as per AS3500 and AS3740.

There are variations of acceptable installations in different jurisdictions around Australia. Check with your local regulator if you are unsure of your local requirements.

Only WaterMark certified products are allowed to be installed. Products without WaterMark certification will be deemed non compliant and removal will be required. This will likely be expensive and time consuming.

Plumbers, please ensure a copy of the installation instructions is left with the end user for future reference.