


## Milli Pure Basin/Hob Hostess Install Conversion Kit

- Tapware is to be installed by a Licenced Plumber in accordance with AS/NZS 3500:2003
- Recommended working water pressure 300 - 500 Kpa.
- Maximum water temperature is 65 deg.C.
- Maximum Bench Thickness 32mm
- 33 – 36mm Hole Clearance (Tapware).
- 22 – 28mm Hole Clearance (Outlet).

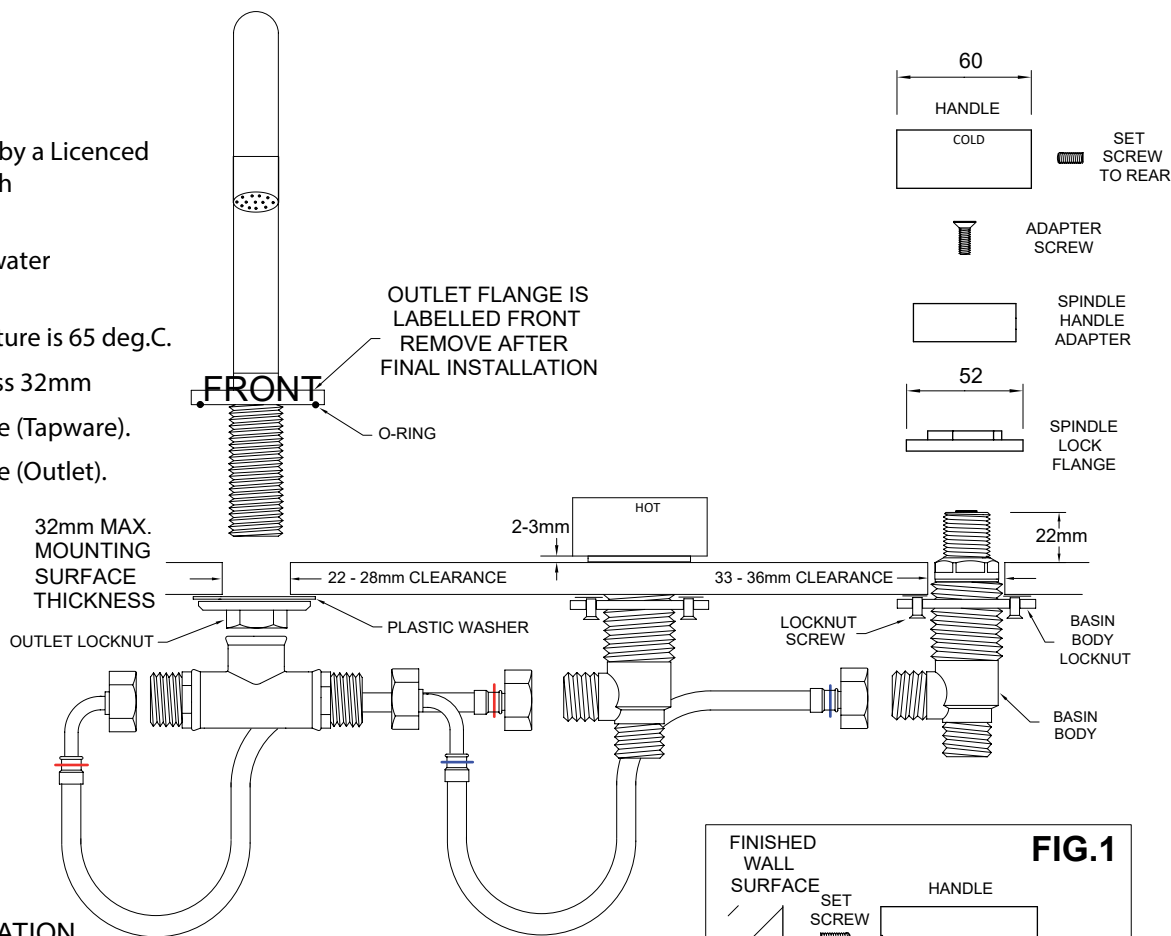

### UNDER MOUNT INSTALLATION

- The Basin Bodies are supplied with the Spindles fitted ready for installation. (No need to separate)
- Fit the Basin Bodies to the mounting surface as shown.
- Attach the Spindle Lock Flanges to suspend the assembly.
- Adjust the assembly to ensure the distance from the Top surface to end of Spindle is 22mm. (As shown)
- Working from underneath adjust the Basin Body locknuts to contact the underside of the mounting surface.
- Ensure the Locknut Screws are well tightened to fully secure the assembly.

### OUTLET FIT OFF

- Hole size for Outlet to be between 22-28mm.
- Outlet must be secured with the “**FRONT**” label facing the user. Remove label after final installation.
- Fit Outlet and ensure the O-ring is intact, secure by tightening the Outlet locknut.

### HOSTESS CONNECTION

- For Hostess style installation discard the Copper Tee Piece.
- Fit the provided ½”Bsp brass Tee piece to the Outlet using appropriate sealant or thread tape.
- Connect the elbow end of the 400mm Flexible Hoses to each side of the Brass Tee piece.
- Attach the other end of the Flexible Hoses to the corresponding Basin Bodies.
- Flexible hoses **must not** be kinked or twisted.
- Extensions to the 400mm Flexible Hoses can be used if required. (Not supplied)
- Ensure the Flexible hoses are saddled or braced to prevent any obstruction.

### HANDLE FIT OFF (See FIG.1)

- Attach the Spindle Handle Adapter and ensure the Set Screw Engagement Slot is positioned to the rear.
- Fit and tighten the Adapter Screw to secure the Spindle Handle Adapter.
- Attach Handle to Spindle Handle Adapter.
- Align the Handle so that the Set Screw locates into the Engagement Slot at the rear.
- Fine tune the Handle position and then tighten the Set Screw using a 2.5mm Allen Key. (Tighten well)
- Note; The Handle should have 2-3mm clearance from the Finished Mounting Surface.
- After completing the installation, establish water supply, check function of Tapware and ensure no water leaks.

