

POSH

SOLUS SHAVING CABINET



SPECIFICATIONS

Recommended Use	Domestic, Hotel and Commercial
Unit Material	MDF MR E0 (Medium Density Fibreboard, Moisture Resistant, Rated Emission Level E0), 4mm Copper-Free Mirror.
Colour Variations (see page 2)	Textured Woodgrain: <i>Riven:</i> Light grain texture. <i>Nuance:</i> Deep wide grain texture. <i>Ravine:</i> Deep wide grain texture. Natural Woodgrain: Matte smooth. Gloss Silk: Sheen gloss smooth.
Interior Finish	White
Fixing	Bolted/Screwed to the wall by a licensed tradesperson- Fixings not included.
Inclusions	Soft-Close Door Hinges. Adjustable Glass Shelves.
Warranty	2 Years



To see the complete POSH range go to www.reece.com.au/bathrooms

STANDARD SIZES	500mm	600mm	750mm	900mm	1050mm	1200mm	1200mm
Width (mm)	500	600	750	900	1050	1200	1200
Depth (mm)	150	150	150	150	150	150	150
Height (mm)	800	800	800	800	800	800	800
Number of Doors	1	2	2	2	2	2	3
Number of Shelves	2	2	2	2	4	4	6

CLEANING RECOMMENDATIONS

To maintain the appearance of any mirrored surfaces, particularly when used in wet or moisture-prone areas it is important to follow the following care recommendations: Do NOT use ammonia based cleaning products such as glass cleaner - These may erode the mirrors silver backing. Be sure to read the label of any such cleaning products before use.

For best results - use a slightly moistened micro fibre cloth to remove dry dirt or grime, then buff clean with dry micro fibre cloth or use a soft dry cloth with a tight weave (which is more soft and non-abrasive). This will leave you with a clean, smear-free finish. By using alkaline (ammonia) or acid (vinegar) based products you do not only risk damaging the silver backing of the mirror, but also tend to leave behind streaks and smears.

Protection against 'black-spotting' - Alkaline, acid and moisture elements can cause the silver backing of a mirror to darken, this is usually referred to as 'black-spotting'. An easy way to protect your mirror against black-spotting is to regularly oil any exposed edges (i.e polished or bevelled edges), this will act as a seal to protect against such elements. Always remember to keep your mirror dry and wipe off any water, moisture or steam.

Disclaimer: Products in this specification manual must by regulation be installed by licensed and registered trade people. The manufacturer/distributor reserves the right to vary specifications or delete models from their range without prior notification. Dimensions and set-outs listed are correct at time of publication however the manufacturer/distributor takes no responsibility for printing errors.

Tech Page Version 3

POSH

SOLUS SHAVING CABINET

Textured Finishes

Riven



Cherished Wood



Concrete Formwood



Rural Oak



Seasoned Oak




Sublime Teak



Washed Knotty Ash

Nuance

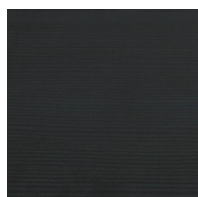

Black



Chamois



Cherry Riftwood



Domain



Espresso Ligna



Parchment



Blackened Linewood



Chalky Teak



Tawny Linewood




Smoke Elm

Ravine



Antico Oak

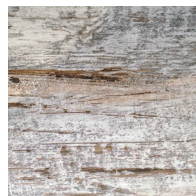

Distressed Wood



Natural Oak



Notaio Walnut



Prime Oak

Gloss Silk or Natural Finishes



Gesso Lini




Rocco Lini



Truffle Lini


Silk Finishes

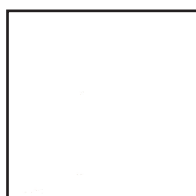


Polar White

POSH

SOLUS SHAVING CABINET

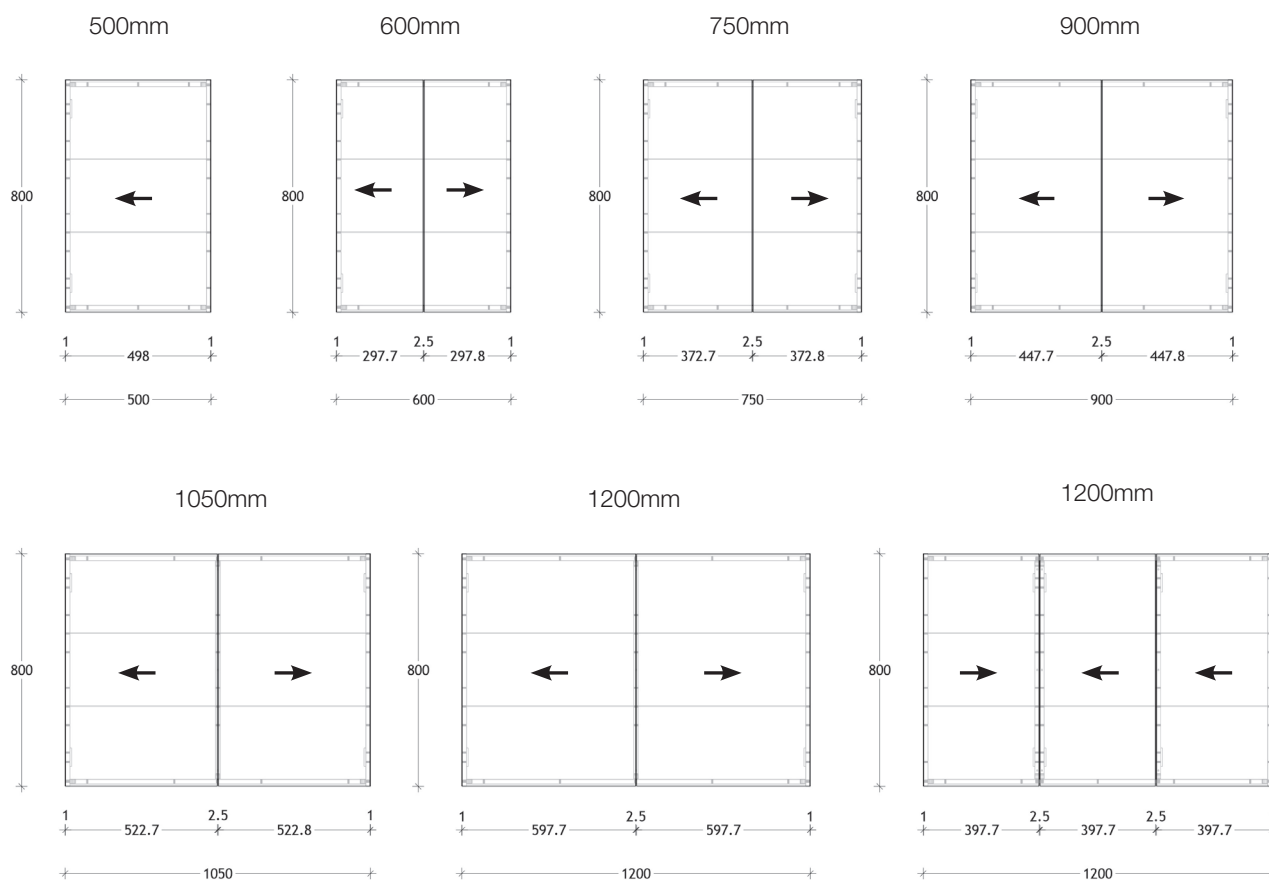

Side

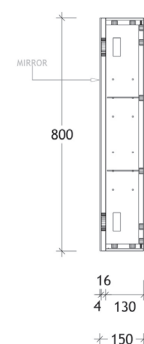

INSTALLATION INSTRUCTIONS

Mirror must be installed by a qualified trades person.

Important - In fixing to timber framed walls or partitioning, care should be taken to properly reinforce wall.

Installation Procedure -

1. Ensure the wall is plumb.
2. Mark out positions of fixing screws and pre-drill.
3. Place mirror in position and partially secure to the wall. Check that mirror is level. Make minor adjustments and then fully tighten screws.

Dimensions are nominal measurements only.

Don't risk it, use a licensed plumber.™