


Alape Metaphor Counter Basin White

INSTALLATION INSTRUCTIONS

1. Position supplied cut out template onto the benchtop and mark off.
2. Cut hole into benchtop to template size and drill the fixing holes.
3. Fit selected tapware and supplied waste kit to basin.
4. Screw down fixing elements and align the basin over the cutout
5. Tighten screws to fix the basin
6. If desired all visible external edges can be joint sealed using flexible sealant ensuring to wipe off any excess.

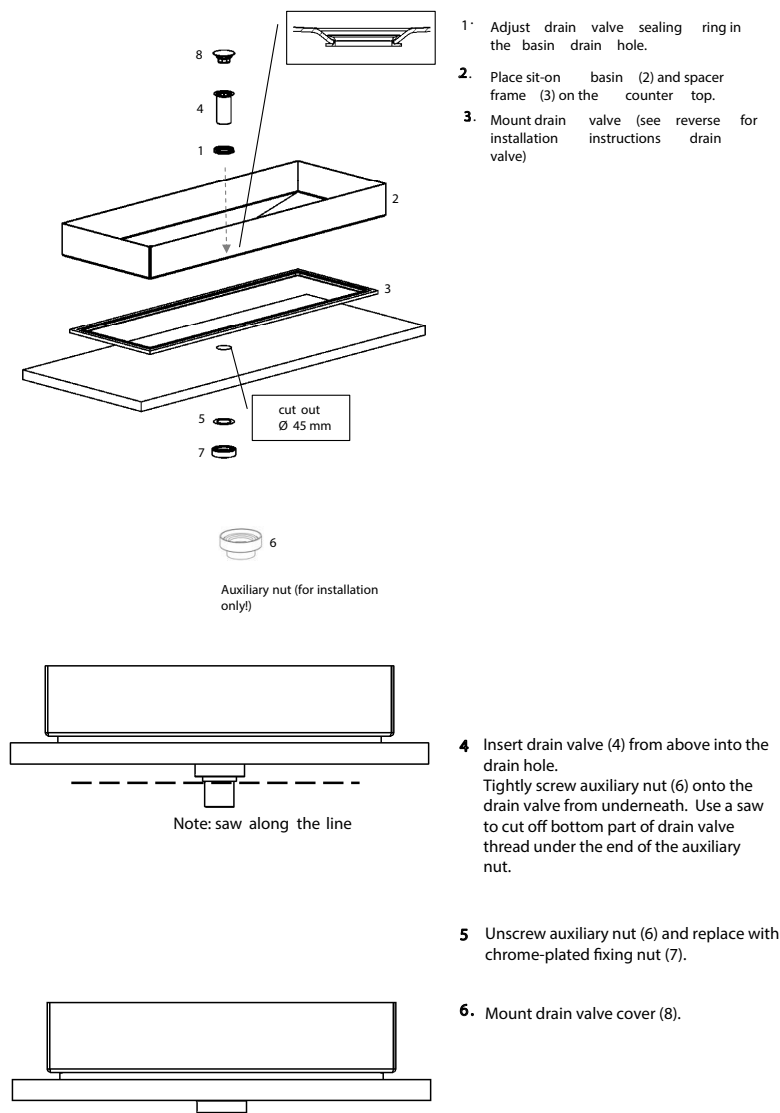

Plumbers, please ensure a copy of the installation instructions is left with the end user for future reference.