

Posh Solus Powder Room Vanity Unit Wall Hung Right Hand Basin 1 Taphole White

NOTE:


Vanity Unit must be installed by a qualified tradesman.

Please read instructions carefully. Remove wall wrapping material, staples and packing straps from the carton. See Hardware and Furniture List for guidance. Be sure you have all parts before you start assembling. Place all wooden furniture on a clean and flat soft surface such as carpet or a rug to prevent from being scratched.

IMPORTANT:

If fixing to timber framed walls or partitioning, care should be taken to properly reinforce wall.

Please check Vanity Unit for damage before installing. If there is damage, please notify the Reece branch where the product was purchased to organise a replacement product. Installation of the Vanity Unit is deemed as accepting the condition of the Vanity Unit.


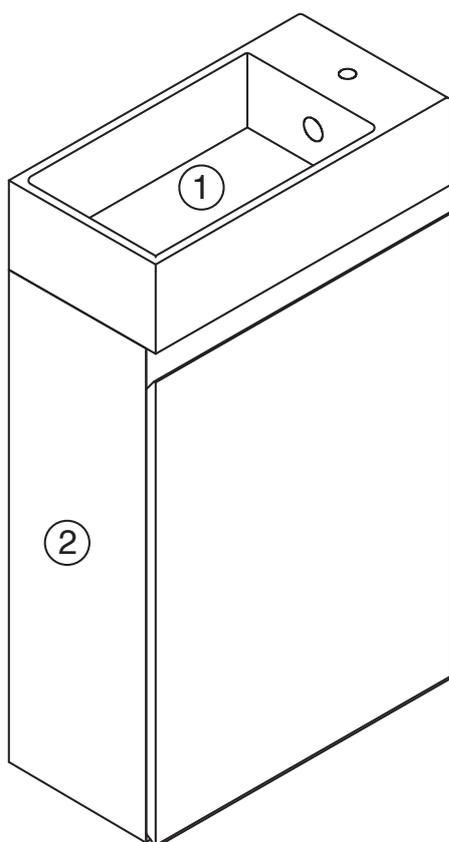


PARTS INCLUDED

- | | |
|-----------|-----|
| 1. BASIN | 1pc |
| 2. VANITY | 1pc |
| 3. SHELF | 1pc |

HARDWARE LIST

- | | |
|------------------|-----|
| A. SHELF SUPPORT | 4pc |
|------------------|-----|

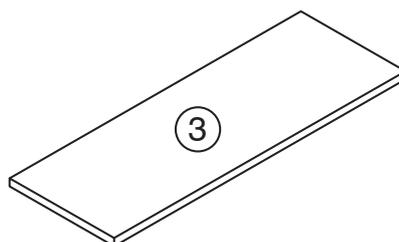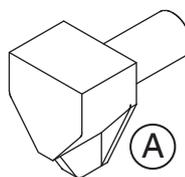

Plumbers, please ensure a copy of the Installation Instructions are left with the end user for future reference

Posh Solus Powder Room Vanity Unit Wall Hung Right Hand Basin 1 Taphole White

FOR ASSEMBLY:

- First, check the content to make sure the nothing is missing
- Sort out the parts and fittings as shown
- Assemble product step by step
- It is preferable to rest the product on a soft surface to avoid damage during assembly
- Do not overtighten screws and fittings
- Re-tighten all screws and fittings periodically
- You will need a Phillips Screwdriver to complete this assembly

INSTALLATION INSTRUCTIONS:

1. Ensure wall is vertical and plumb. Measure and mark out position of vanity wall mount fixing and screw fixing to wall.

Critical: Ensure wall mount fixing is level before fitting vanity unit. If fixing to timber framed cavity walls or partitioning, care should be taken to ensure the wall is suitably reinforced to support the vanity unit

2. Rough in plumbing waste and water hot/cold supply locations for basin in wall and vanity unit
3. Lift vanity into position onto wall mount fixing and locate basin onto vanity top. Locate fasteners for basin in wall. Seal basin to vanity with flexible waterproof sealant and fix basin with fasteners to wall
4. External edges, where vanity meets wall, should be sealed using flexible waterproof sealant
5. All final door and drawer adjustments are the responsibility of the installer at the time of installation

CLEANING RECOMMENDATIONS:

We recommend the use of soapy water or approved cleaners. This product should not be cleaned with abrasive materials. Damage caused by any improper treatment is not covered by the product warranty. Refer to Warranty Conditions

Posh Solus Powder Room Vanity Unit Wall Hung Right Hand Basin 1 Taphole White

