

# **Posh Bristol MK2 Basin Mixers**

#### **Important Note**


Mixer must be installed to the requirements of AS/NZS 3500 by a qualified plumber. Your mixer comes to you already factory assembled and tested. We do not recommend the dismantling of any internal part of the mixer. The mixers are factory tested and sealed so as to give the best performance.

#### **INSTALLATION INSTRUCTIONS**

- 1. Please flush out new pipe work prior to connecting the new mixer.
- 2. All mixers should be installed with isolating stop cocks (Arco brand recomended).
- 3. This tap is suitable for high pressure applications where both hot and cold water supply pressures are at 150kPa or above.
- 4. Place the sealing washer into position.
- 5. Fit the tap body (7) into the mounting hole making sure first that the flexible hoses (10, 11) are firmly tightened into the base of the body.
- 6. Do not use teflon tape on threads.
- 7. From underneath apply your washer prior to positioning the horse shoe plate.
- 8. Lock the mixer onto the basin or benchtop by tightening the lock nut (5).
- 9. Connect the flexible hoses to the hot and cold isolating stops, hand tighten plus half a turn of the nut to provide a watertight joint. Ensure that hoses are not under tension, twisted or kinked and if bent have a minimum radius of 30mm.
- 10. Check for leaks.

### Servicing - Replacement of Cartridge

- 1. Remove cap (3) and unscrew the grub screw (2) using allen key.
- 2. Lift off handle (1) and remove the cartridge dome (4), unscrew brass locking nut (5) and lift out cartridge (6).
- 3. Replace the cartridge (6), replace the brass locking nut (5), replace the cartridge dome (4) and replace handle (1). Tighten grub screw (2) and push in indicator cap (3).

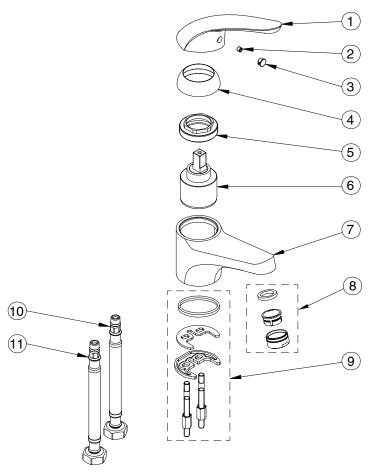

## **Exploded View**

Item	Description
1-3.	Basin Mixer Handle Complete
4.	Cartridge Dome
5.	Cartridge Lock Nut
6.	Cartridge
7.	Mixer Body
8.	Aerator Complete
9.	Basin Mixer Fixing Kit
10.	Flexible Hose (Hot)
11.	Flexible Hose (Hot)

