



Wall Basin Bath Outlet

1

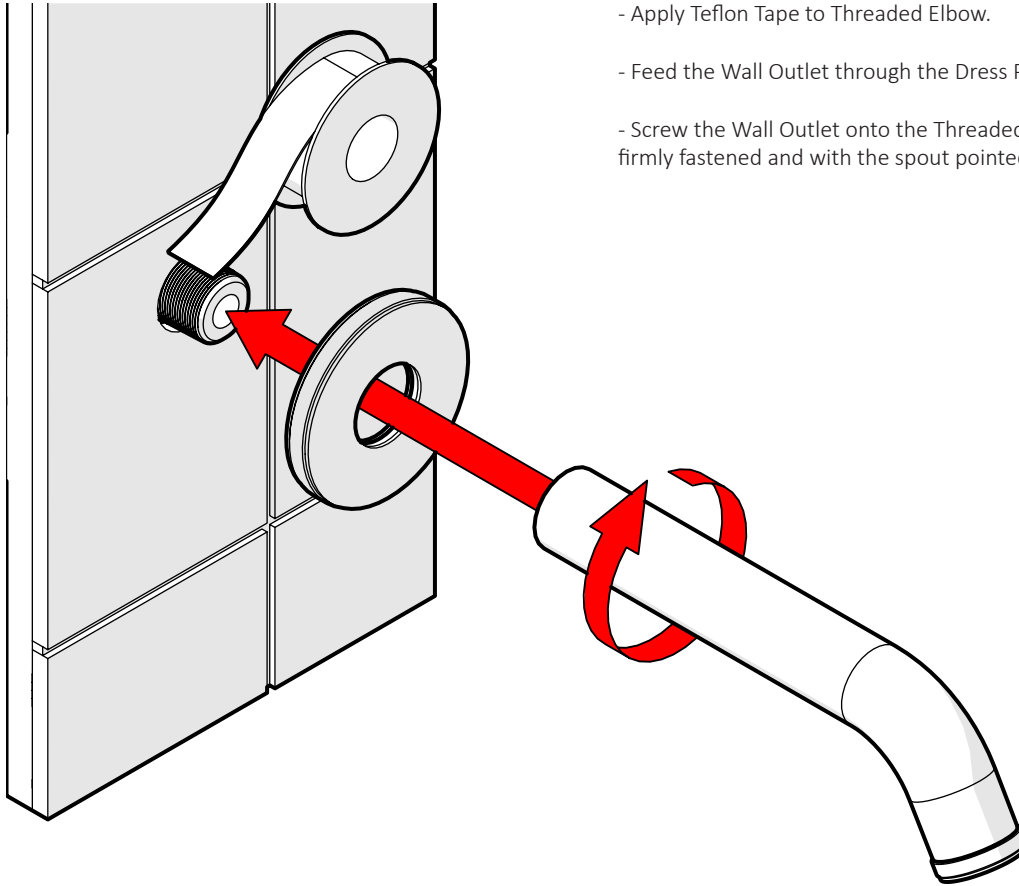

- Apply Teflon Tape to Threaded Elbow.
- Feed the Wall Outlet through the Dress Plate.
- Screw the Wall Outlet onto the Threaded Elbow until firmly fastened and with the spout pointed downwards.

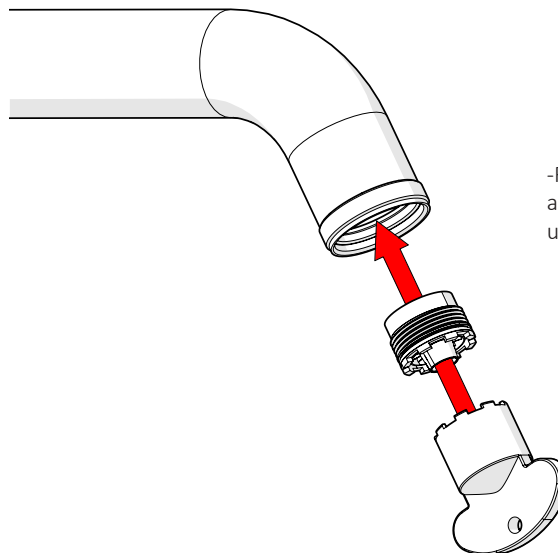

- For Bath application remove pre-installed aerator. And replace with Max flow aerator using supplied key.

Bath



Basin



Care Details

We recommend the use of soapy water or approved cleaners. This product should not be cleaned with abrasive materials. Damage caused by any improper treatment is not covered by the product warranty. Refer to Warranty Conditions

Installation should comply with Australian standard AS3500.1 or relevant local authority requirements. Showers may not be suitable for use within:

- Gravity-fed water systems
- Some instantaneous hot water systems

Any flow controller incorporated in the outlet to be tightened to prevent removal by hand. As Per AS3718

Plumbers, please ensure a copy of the installation instruction is left with the end user for future reference.

