



ESPIRE WALL HUNG VANITY



To see the complete SHOWERAMA range go to
www.reece.com.au/bathrooms

SPECIFICATIONS

Recommended Use	Domestic, Hotel and Commercial
Mounting	Wall Hung
Cabinet Material	MDF - Moisture Resistant Board
Cabinet Laminex Colours	Available in a wide variety of colours and finishes, refer to Materials and Finishes on the web page.
Basin Type	1 Piece Moulded Cultured Marble Wave Top
Basin Colour Options	White
Door Hinge Design	Metal Soft Close
Drawer Runner Design	Metal Soft Close
Drawer Bank Positon	Right Hand Side Standard - Left Hand Side is Optional
Handle Type	Bevel Finger Pull
Tap Hole Options	0, 1 or 3 Tap Holes
Plug and Waste	Suits 40mm Plug and Waste (not supplied)
Features	Australian Made, Soft Close Doors and Full Extension Soft Close Drawers, Laminex Colours, Extra Height Cabinet, Varying Drawer Sizes, Cultured Marble Wave Top, 16mm Back.

Dimensions are nominal measurements only.

VARIATIONS	610	760	910	1215	1500	1500	1800	1800
	Single Bowl	Single Bowl	Single Bowl	Single Bowl	Single Bowl	Double Bowl	Single Bowl	Double Bowl
Width -Top (mm)	600	750	900	1195	1495	1495	1795	1795
Width - Cabinet (mm)	590	740	887	1185	1481	1481	1774	1774
Depth - Cabinet (mm) Including Top	455	455	455	455	455	455	455	455
Height - Cabinet (mm)	530	530	530	530	530	530	530	530
Weight of Cabinet (kg)	28	32	36	45	57	57	70	70
Weight of Vanity Top (kg)	14	14	16	22	30	30	37	37
Bowl Capacity (Litres)	8	8	8	8	8	8	8	8
Number of Doors	2	1	2	2	2	2	4	4
Number of Drawers	0	2	2	4	4	4	4	4





Disclaimer: Products in this specification manual must by regulation be installed by licensed and registered trade people. The manufacturer/distributor reserves the right to vary specifications or delete models from their range without prior notification. Dimensions are nominal measurements only. Dimensions and set-outs listed are correct at time of publication however the manufacturer/distributor takes no responsibility for printing errors.

Tech Page Version 1

Technical drawings of the cabinet showing front and side views with dimensions:



- Front View (Right):** Shows a cabinet with a total width of 600 and a total height of 530 (100 + 430). The main body is 590 wide and 430 high. The top panel is 100 high. The interior is divided into two equal sections, each 293 wide.
- Side View (Left):** Shows the cabinet's depth. The total depth is 455, and the main body depth is 430. The total height is 895 (Cabinet Only).

Technical drawing of a rectangular box with dimensions and hole locations. The overall dimensions are 600 (width) by 455 (height). The top flange has a width of 53 on each side and a height of 12. The main body has a height of 100. The bottom flange has a height of 60. The central opening has a width of 494 and a height of 90. There are three holes in the top flange, each with a diameter of 100, spaced 100 units apart. There is one hole in the center of the main body, with a diameter of 100.

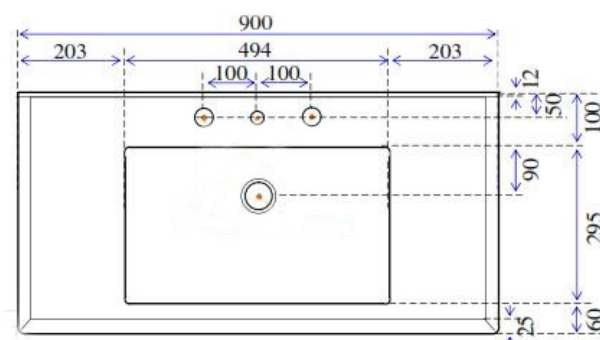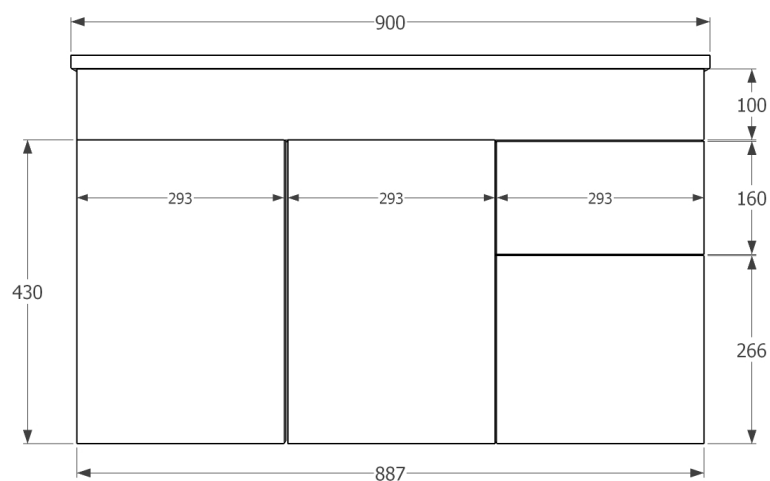
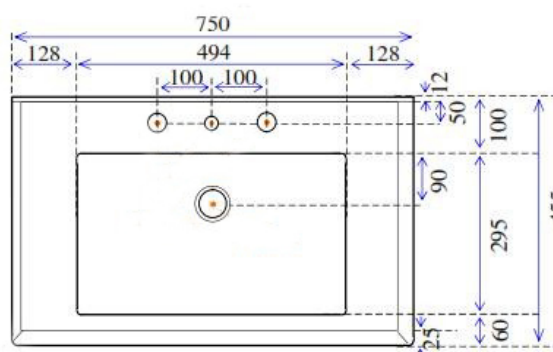
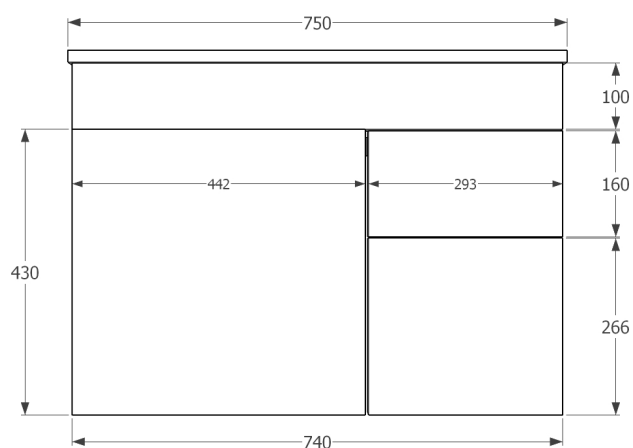







ESPIRE WALL HUNG VANITY

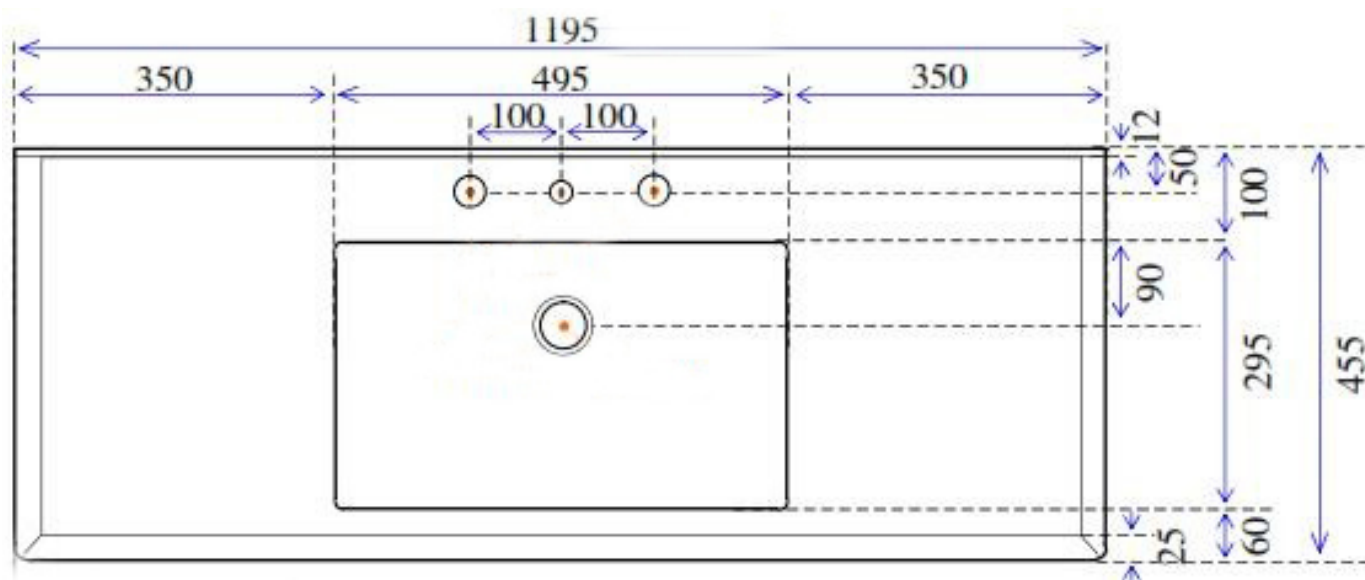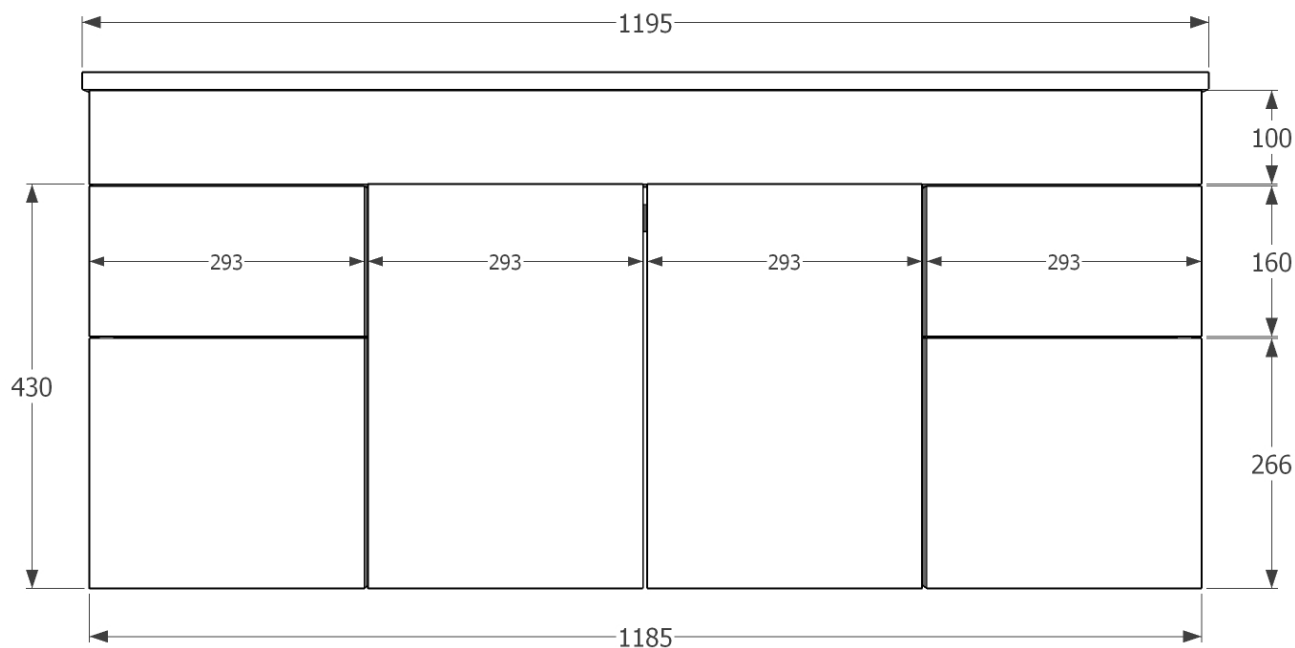

ESPIRE WALL HUNG VANITY

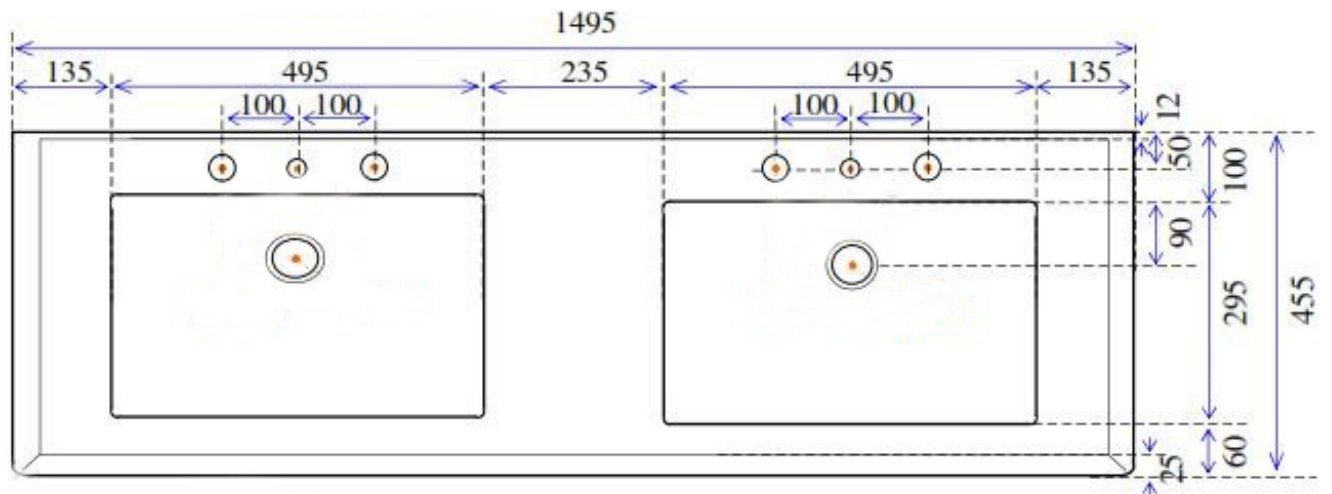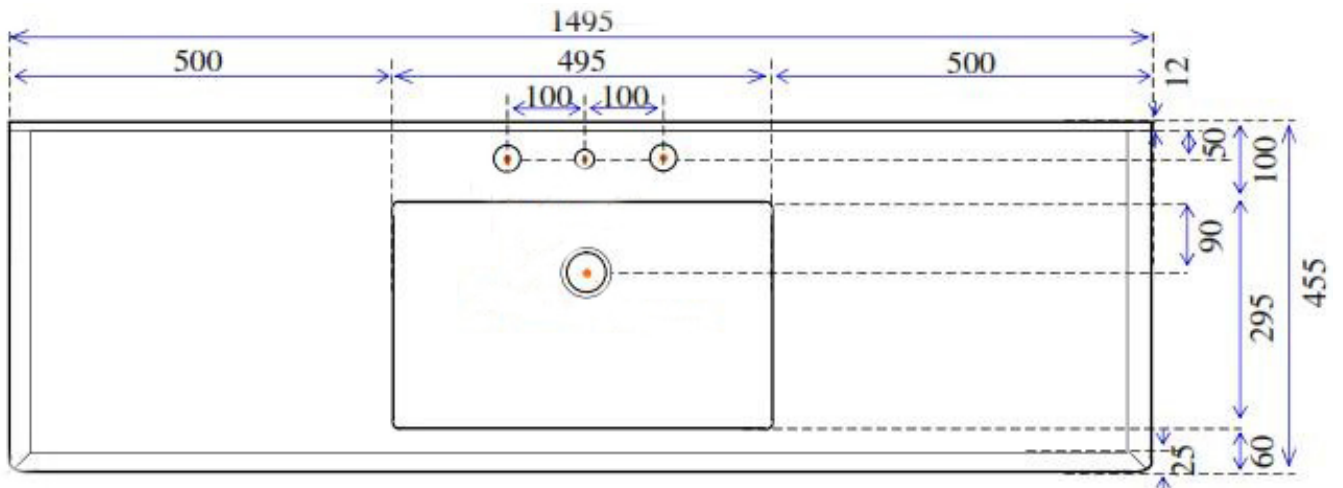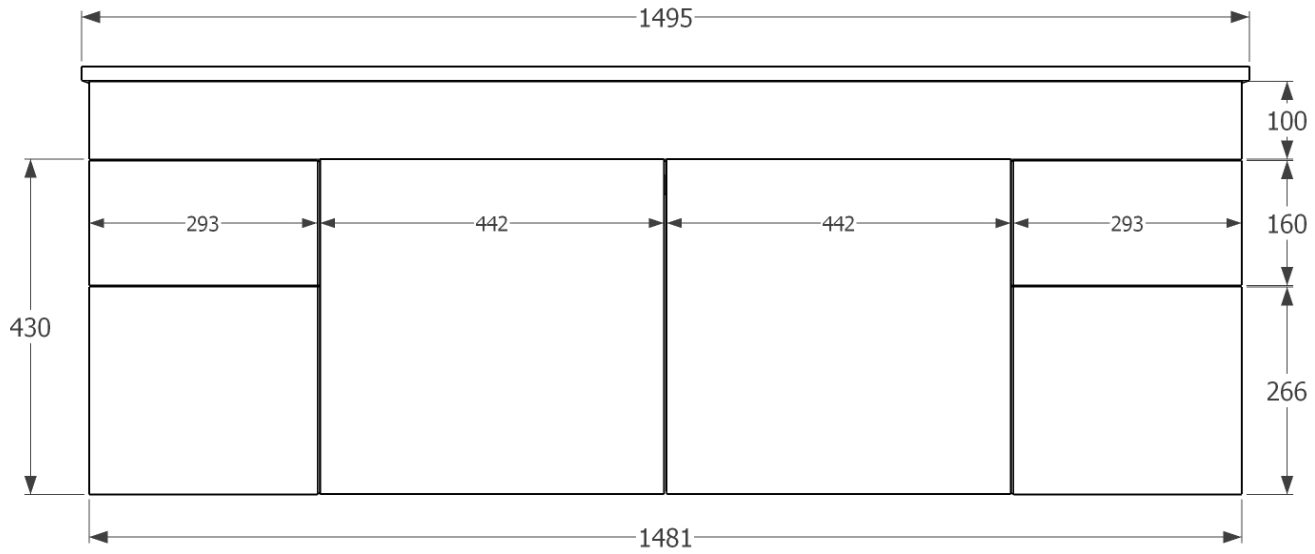

ESPIRE WALL HUNG VANITY

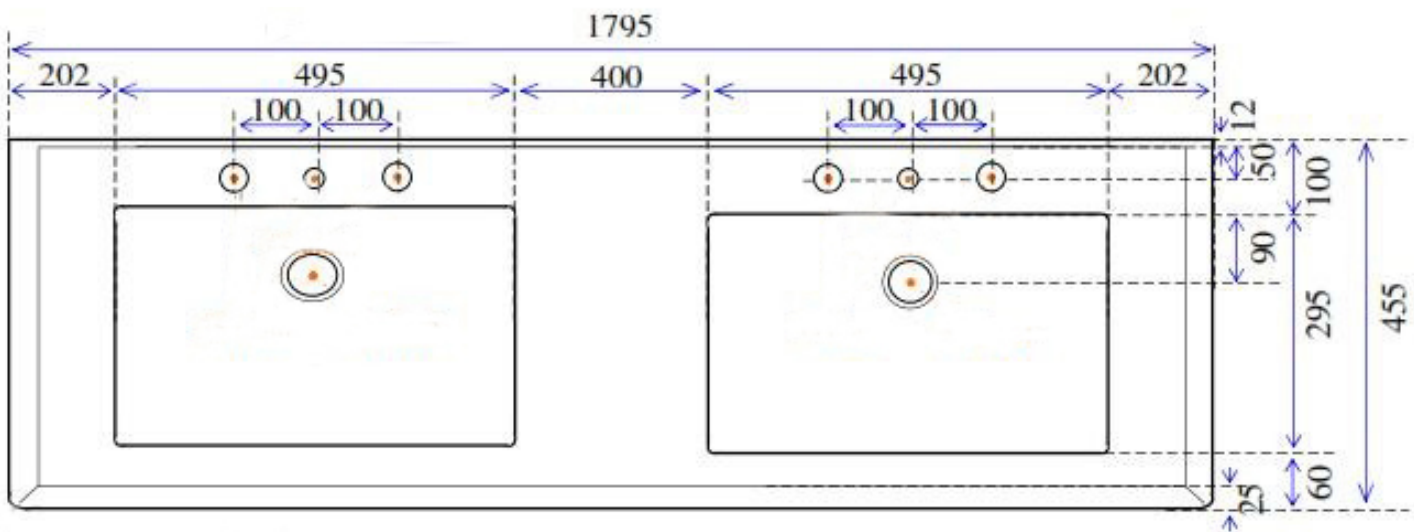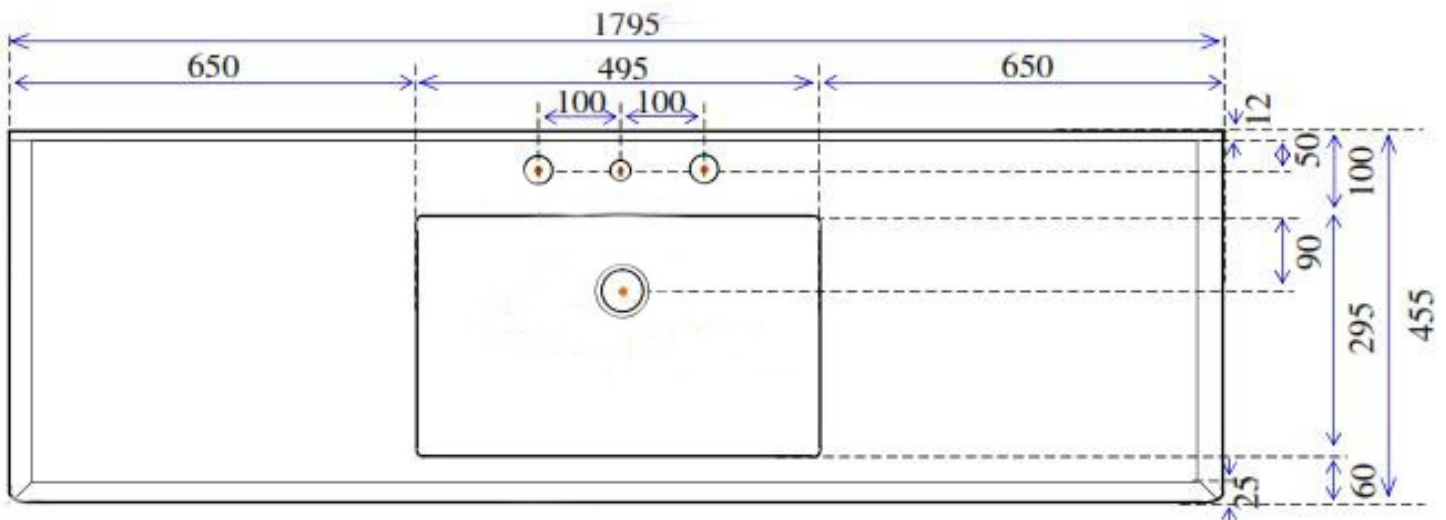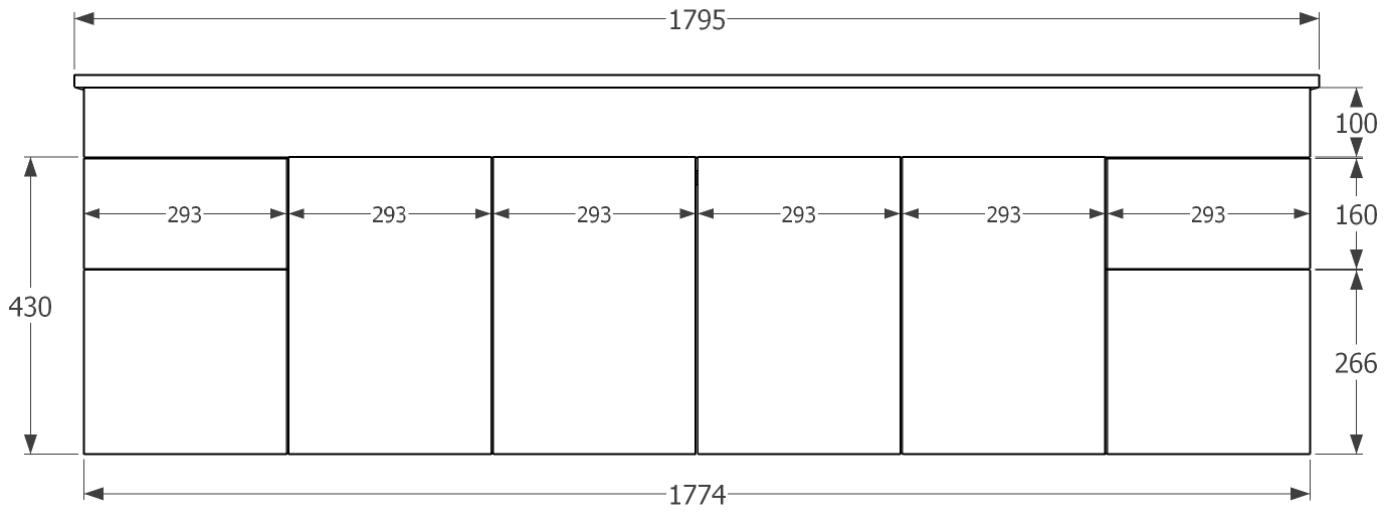

ESPIRE WALL HUNG VANITY

CLEANING RECOMMENDATIONS

Cultured Marble Tops:

If minor accidental scratches, abrasions or burns occur, the Cultured Marble surface can be restored by gentle polishing with Showerama Bathroom Polish that can be purchased from your Reece Store.

To preserve the cultured marble surface, clean with a soft cloth using warm soapy water or household liquid detergent.

Avoid products containing acids and chlorine. Water temperature should never exceed 50 degrees Celsius.

Spillage of strong solvents as found in some cosmetic products and hair dyes should be wiped off immediately.

Vanity Cabinets:

Showerama's cabinets are moisture resistant but not waterproof. Cabinet surfaces should be cleaned with a damp cloth and dried.

INSTALLATION INSTRUCTIONS

NOTE:

Showerama recommend the vanity unit is NOT TILED IN around the base as this means the base of the cabinet is below floor level and is then prone to water damage which is NOT COVERED under the Warranty.

Important:

Prior to installation it is important to unpack & inspect your products to ensure no damage has occurred in transit and that the product IS CORRECT. If damage has occurred, or a visible defect exists, do not proceed with installation and contact supplier IMMEDIATELY.

No claims for damages/defects will be recognized after installation.

Freight damage is not claimable if it is signed for as in good condition and/or free of damage.

Installation Procedure:

1. Ensure that wall is plumb. Measure and mark out position of wall fixing and screw mounting board to wall.
If fixing to timber framed walls or partitioning, care should be taken to ensure that the wall is adequately reinforced especially when fixing "Wall Hung" vanity units.
2. Place vanity into position and ensure it is level (make minor adjustment if required). Drill pilot holes in the back of the unit and fix unit to the wall using suitable screws. Ensure that the screws are fixed securely into a solid wall or noggin. Minor adjustments may need to be made to align drawer runners and hinges.
3. All final door and drawer adjustments are the responsibility of the installer at the time of installation.
4. External edges where the unit meets the floor and wall should be sealed using flexible waterproof sealants.