


## Posh Solus Counter Basin 500mm x 400mm 1 Taphole

### INSTALLATION INSTRUCTIONS:

1. Position basin onto bench top and mark off for counter installation.
2. Cut holes in the bench top to suit waste and tapware (cut out detail).
3. Fit selected waste to the basin. Ensure the waste is sealed on the top and the bottom.
4. Apply a waterproof sealant (not supplied) to the rim of the basin and to the bench top.
5. Fit the basin onto the bench top and press firmly all around to achieve a strong seal.
6. Remove any surplus sealant.

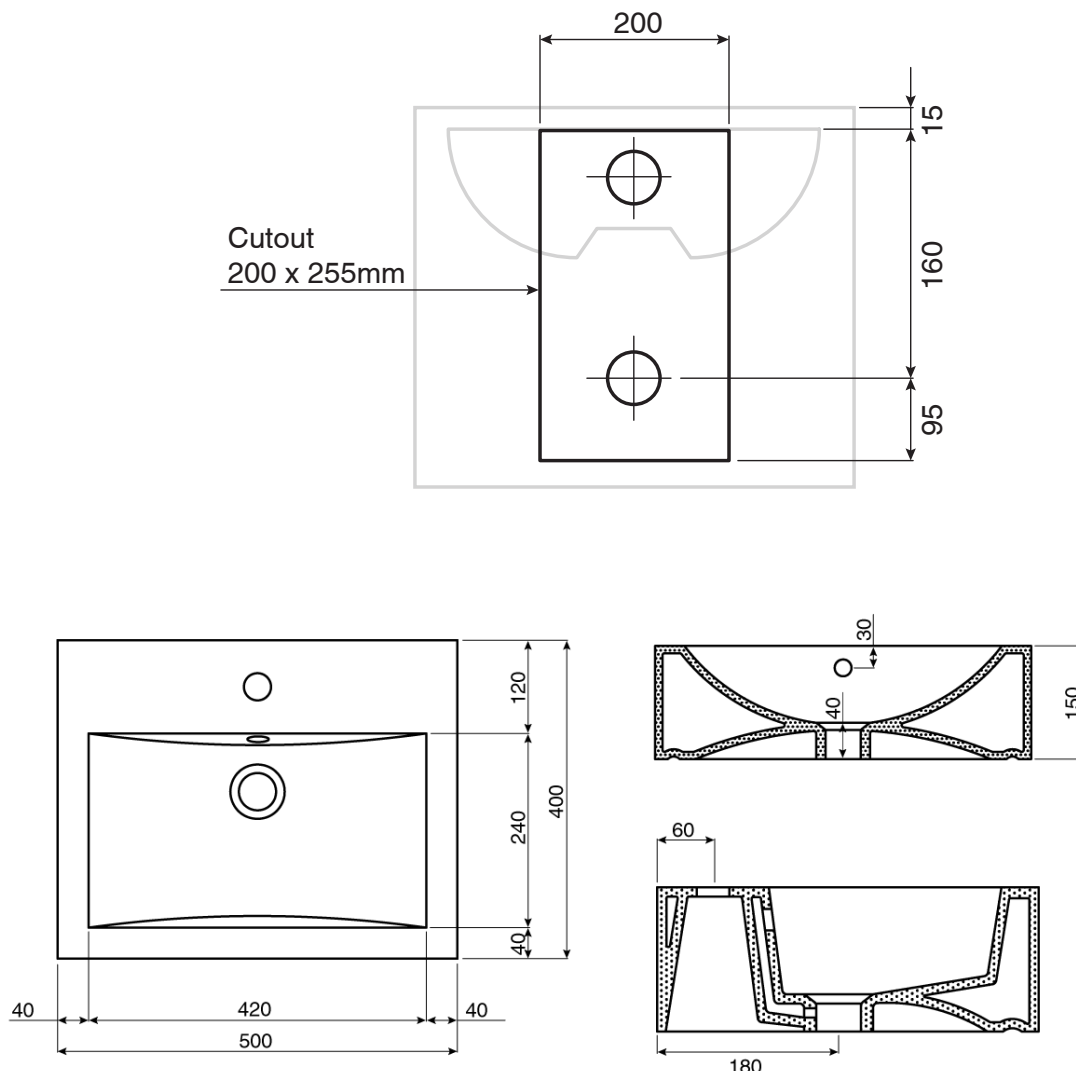

Dimensions are nominal measurements only.

**Plumbers, please ensure a copy of the Installation Instructions are left with the end user for future reference.**

Published 24/07/2020