

POSH

SOLUS CABINET OPEN SHELF



FEATURES


Finish Material	Laminex Gloss silk (White interior)
Colour Availability	Oyster (Gloss Silk), Licorice (Gloss Silk), Polar White (Gloss Silk).

SPECIFICATIONS

Recommended Use	Domestic, Hotel and Commercial
Fixing	Screwed to the wall by a licensed trades person
Widths	600, 750, 900, 1200mm
Height	1000mm
Depth	150mm
Warranty	12 months



To see the complete POSH SOLUS range go to www.reece.com.au/bathrooms

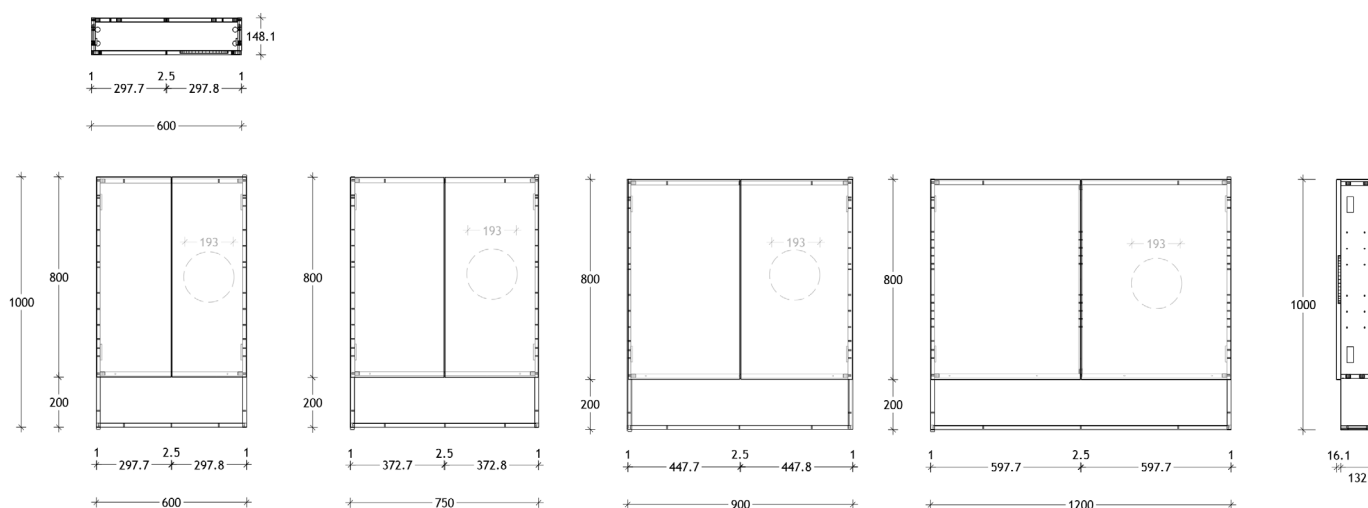

INSTALLATION INSTRUCTIONS

Cabinet must be installed by a qualified trades person.

Important - In fixing to timber framed walls or partitioning, care should be taken to properly reinforce wall.

Installation Procedure -

1. Ensure the wall is plumb. 2. Mark out positions of fixing screws and pre-drill solid back panel.
3. Place cabinet in position and partially secure to the wall. Check that cabinet is level. Make minor adjustments and then fully tighten screws.

Disclaimer: Products in this specification manual must by regulation be installed by licensed and registered trade people. The manufacturer/distributor reserves the right to vary specifications or delete models from their range without prior notification. Dimensions and set-outs listed are correct at time of publication however the manufacturer/distributor takes no responsibility for printing errors.

Tech Page Version 2

POSH

SOLUS CABINET OPEN SHELF

INSTALLATION INSTRUCTIONS

Prior to installation it is important to unpack & inspect your products to ensure no damage has occurred in transit and that the product IS CORRECT. If damage has occurred, or a visible defect exists, do not proceed with installation and contact supplier IMMEDIATELY.

NO claims for damages / defects will be recognized after installation

1. Check that wall is level (fig 1 and 2) and plumb both vertically and horizontally. If your wall is out of plumb, or is not flat, you will need to pack your vanity so as not to follow the wall. Your vanity must be level, otherwise it will twist and your doors will be out of alignment.
2. Pre-drill holes at the rear panel for fixing, evenly spaced.
3. It may be an idea to use a level support / noggin to assist in levelling unit and help identify any un-plumb surfaces which may require packing prior to fixing the unit to the wall.
4. Check with spirit level that the unit is completely level. (fig 3 and 4)
5. Fix unit to wall through back of vanity ensuring the correct screw/dynabolt size is used by the installer to suit the installation situation.

Where studs cannot be located, it is recommended to use toggle bolts or appropriate hollow-wall fixings.

Allow enough fixing points, evenly spaced at the top AND bottom of the back panel, to sufficiently hold the particular unit size onto the situation of the installation area. It may be handy to apply some silicone/adhesive to the rear of the unit prior to fixing, this may assist in levelling and fixing the unit to the wall.

6. Adjust doors if required as there may have been some movement during transportation and installation.
(refer instructions included in unit)
7. All edges where cabinet meet wall and floor are to be sealed with silicone. Gap filler sealant can be used in place of silicone where unit meets tiled surfaces. All areas need to be sealed to prevent water penetration. Materials used for construction of this unit are water resistant Not water proof. Care must be taken to dry any spillage or leakage of water which may gain access to cabinet or mirrored surfaces. It is recommended that units are installed over 300mm from any wet areas such as baths, spas and showers.

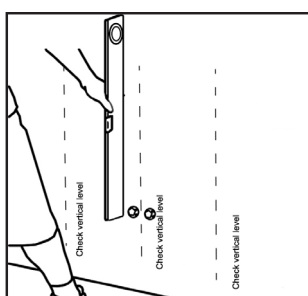


Fig.1

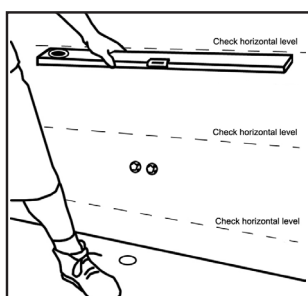


Fig.2

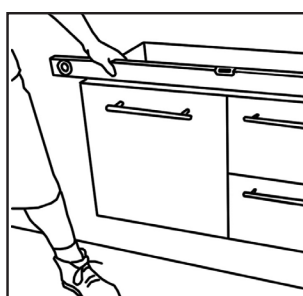


Fig.3

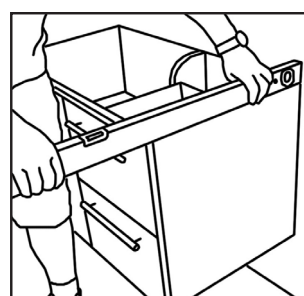


Fig.4