

KADO

ERA LINEN CABINET

WALL HUNG



Domino finish and Gold Brass handle

To see the complete KADO range go to
www.reece.com.au/bathrooms

SPECIFICATIONS

Recommended use	Domestic
Size availability:	400 x 350 x 1400mm
Material Colour and Finish options:	Please refer to the Colour, Finish and Material Variations Document for more information.
Fixing requirement:	Wall hung A licensed (plumber/builder) installer is required
Mechanisms:	Single soft close door, left or right hand side hinged Two (2) adjustable Café Oak moisture resistant (MR) veneer shelves Two soft close drawers Black metal, Chrome or Brass Gold cup handles


CLEANING RECOMMENDATIONS

We recommend the use of soapy water or approved cleaners. This product should not be cleaned with abrasive materials. Damage caused by any improper treatment is not covered by the product warranty – refer to warranty conditions.

KADO

ERA LINEN CABINET

WALL HUNG

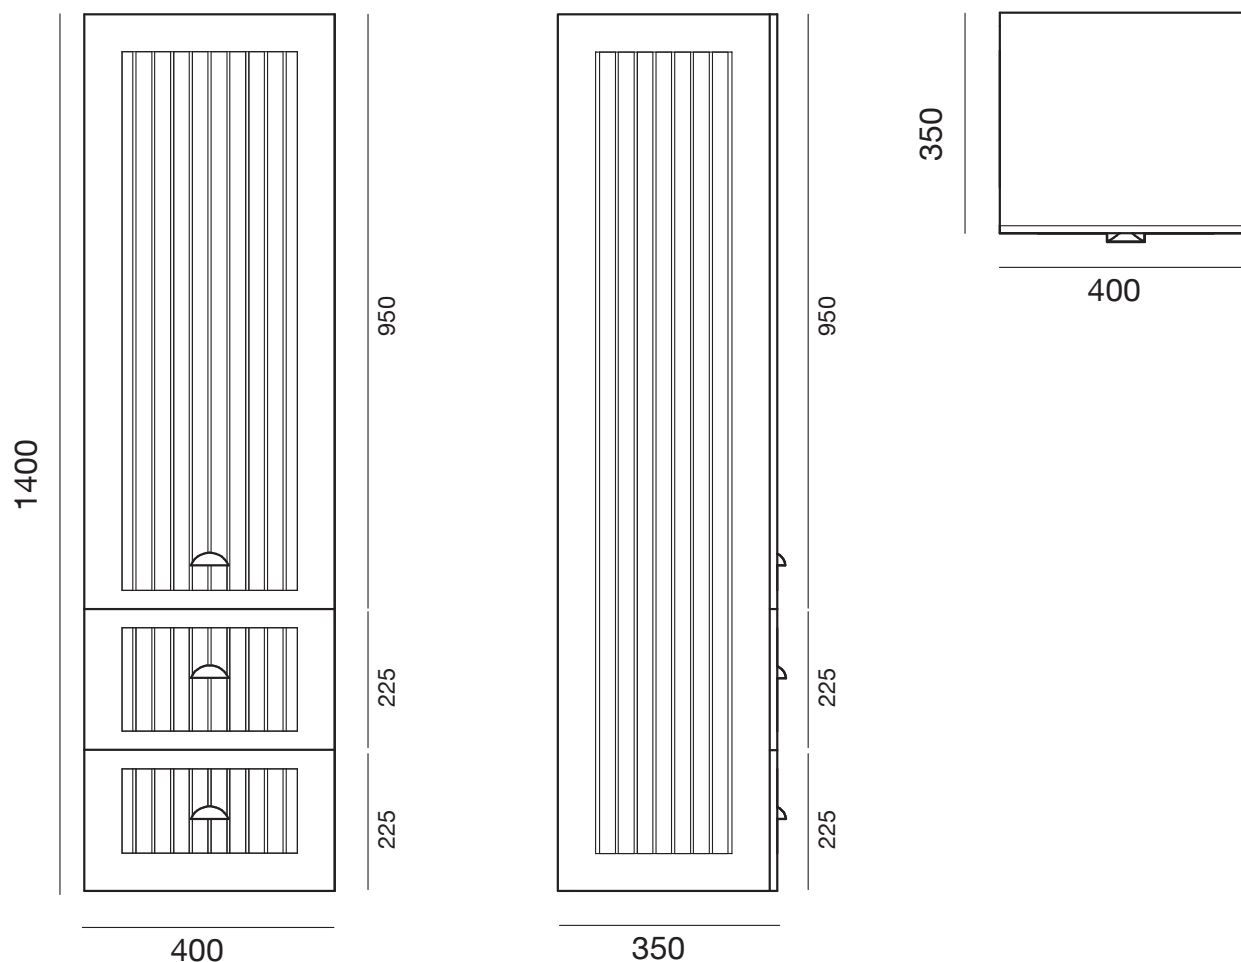

Dimensions are nominal measurements only

KADO

ERA LINEN CABINET

WALL HUNG

INSTALLATION INSTRUCTIONS

PLEASE INSPECT YOUR CIBO PRODUCT ON DELIVERY (OR PICKUP), PRIOR TO INSTALLATION

CIBO Design's stringent quality control procedures ensure products leave our manufacturing facility in optimum condition.

A visual inspection must be made of the product on delivery (or pick up), by the person receiving it, prior to installation. Please pay careful attention when removing the wrapping materials. If the product has marks, chips or imperfections deemed unacceptable and/or has been damaged in transit, the product should not be installed.

Please contact place of purchase immediately, to advise of your concerns (prior to installation).

If the product has been installed CIBO Design will not accept responsibility or obligation to repair or supply a replacement product.

CIBO's detailed Product Installation, Care and Maintenance Guide can be downloaded at: www.cibodesign.com.au

LINEN CABINETS

1. Carefully remove the drawer(s) and door (refer below) where applicable and store safely.
2. Unwrap shelves and place to one side.
3. If the linen cabinet has mirrored back(s) then remove the mirror and store carefully.
4. Once the placement of the cabinet has been determined, drill the fixing holes through the back of the cabinet.
5. Secure the cabinet to the wall (installer to determine the appropriate fixings) and cover with caps provided.
6. Replace the shelves at the required height.
7. Replace the door and drawer(s) where applicable and adjust the hinges if necessary.
8. Once the doors & drawers are lining up correctly the unit must be sealed along the back edge of the top & down the sides against the wall with bathroom quality silicone. The best method of applying silicone is to evenly run a bead around the unit ensuring all gaps are filled. Seal around the cabinet with silicone.
9. Spray soapy water on the silicone joint (on the wall and top) to stop silicone sticking to the wall.
10. Wipe off excess silicone and soapy water.

REMOVING/REPLACING DOOR(S)

During installation, it is advisable to remove doors (and drawers) from the cabinet.

To do this you need to unclip all the hinges on each door.

To Remove Doors:

Locate the front of the hinge and pull the hinge away from the side of the cabinet. Ensure that the door is supported so the door does not disengage from the cabinet and fall.

To Replace Doors:

Line up the hinges with their corresponding hinge plates. At the base of the hinge there is a small metal rod that needs to be lined up with cradle arms of the hinge-plate. Once the hinge is in place, push the top of hinge down towards the hinge-plate. The hinge should engage by snapping down.