

NEO WALL HUNG VANITY UNIT



Neo combines function with exclusive, uncomplicated design. The needs and desires of the modern family strongly influenced the creation of Neo, resulting in a contemporary, highly adaptable range of basins with superior quality furniture.

SPECIFICATIONS

Recommended Use	Domestic, Hotel and Commercial
Material	Exterior: Timber laminate on HMR board, Thermofoil on HMR board Internal: Laminate on HMR board
Colour	Maison Oak, Black Wenge, White Satin
Basin Type	Neo wall hung basins. See separate tech pages for the Neo range
Basin Configuration	Left or Right Hand Bowl
Fixing	Bolted/screwed to wall by licensed trades person Fixings not supplied Installer to determine appropriate wall fixings
Drawers	Pull down door (Mini only) Soft close drawers Includes internal adjustable shelf (not including Mini)
Handle Type	Can be positioned left, right or centre of each door Rectangle, Quad, Square, Knurled Bar



To see the complete OMVIVO range go to www.reece.com.au/bathrooms

VARIATIONS	Mini	700	1000	1400 Double
Width mm	470	700	1000	1400
Depth mm	300	450	450	450
Height mm (including basin)	415	655	655	655
Number of drawers	N/A	1	1	2
Number of doors	1	N/A	N/A	N/A

NEO WALL HUNG VANITY UNIT


CABINET OPTIONS



Maison oak



Black wenge

White satin
thermofoil

CHROME HANDLE OPTIONS

Rectangle
Brushed NickelQuad
Polished ChromeSquare
Matt BlackKnurled Bar
Satin Brass

DETAILED CLEANING INSTRUCTIONS

Regular cleaning will assist to keep your solid surface looking fantastic and reduce wear and dirt build up. Spills should be cleaned promptly.

Clean with a mild detergent or soapy water and a soft cloth, sponge or non-scratch scourer*.

For stubborn marks start with the non-scratch scourer and a mild detergent, if required use a diluted very mild abrasive cleaner* cleaning in light circular motions.

Intense clean/repair: For extreme marks and light scratches a very Light buff in circular motions using the finest grade sand/glass paper will restore the surface. A heavier grade of sandpaper will scratch the surface which can be removed by then using a light sand paper. Avoid applying excessive pressure or clean/rub the same area for a prolonged time unless repairing a scratch or damage.

*Always test 'non scratch' and 'mild abrasive' products in a non-conspicuous area first to ensure suitability as brands can differ.

Important notes: If the product is created from a combination of Solid surface and another material such as glass or Softskin, it is important that the cleaning instructions for Solid surface are not carried out on the alternate material. Damage may occur which will void your warranty.

To maintain a uniform appearance, you may need to clean the entire surface. Never use sharp products such as steel wool or aggressive, commercial grade / strong cleaners or chemicals (e.g. acetone, trichloroethylene, acids, and caustic soda) as these may damage and scratch the surface. For best results always finish by wiping surface clean of all detergents and dry with a soft clean cloth.

Your furniture should be cleaned with a mild, non-acidic, non-abrasive detergent and soft cloth. Finish by cleaning off detergents with a soft slightly damp cloth and towel dry. Always clean spills and water immediately. It is important that the cleaning instructions for your solid surface basin are not carried out on the vanity as this will scratch the finish.




Damage caused by any improper treatment is not covered by the product warranty – refer to Warranty Conditions.

NEO WALL HUNG VANITY UNIT




LINE DRAWINGS

CABINETS

Mini Cabinet

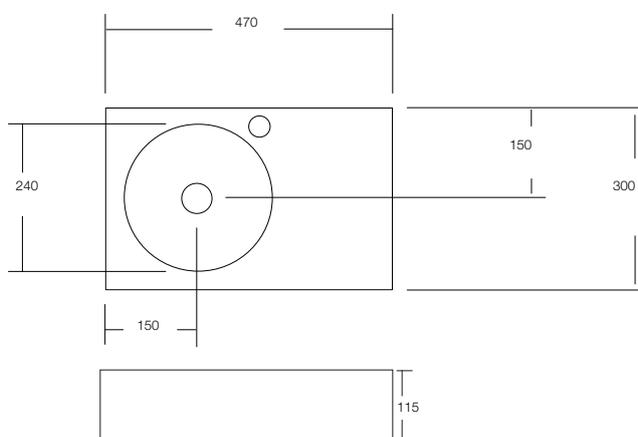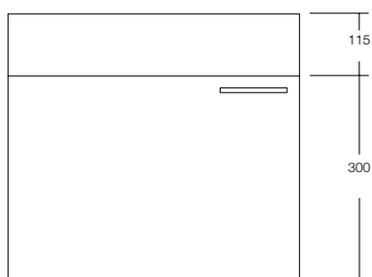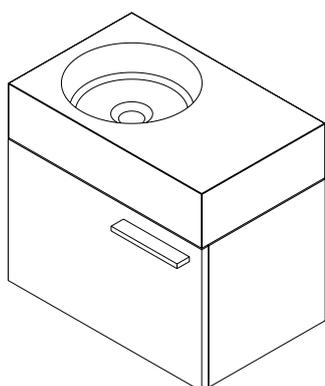


700 Cabinet

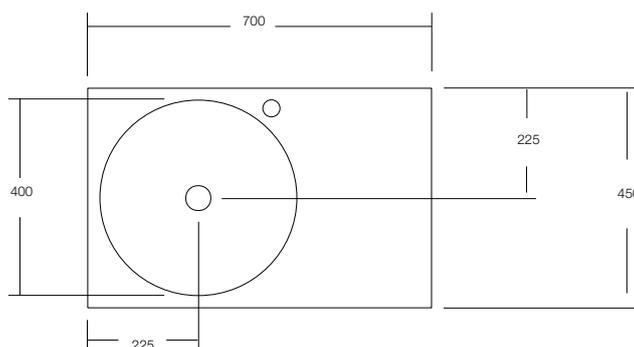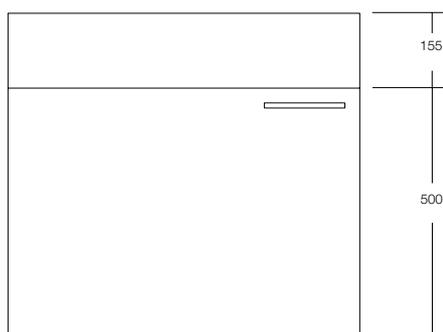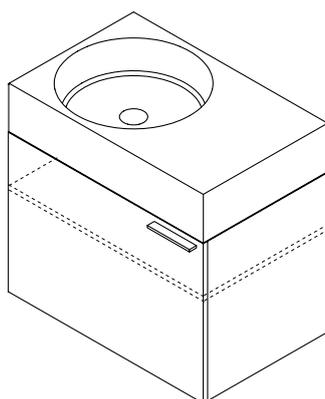


NEO WALL HUNG VANITY UNIT

1000 Cabinet


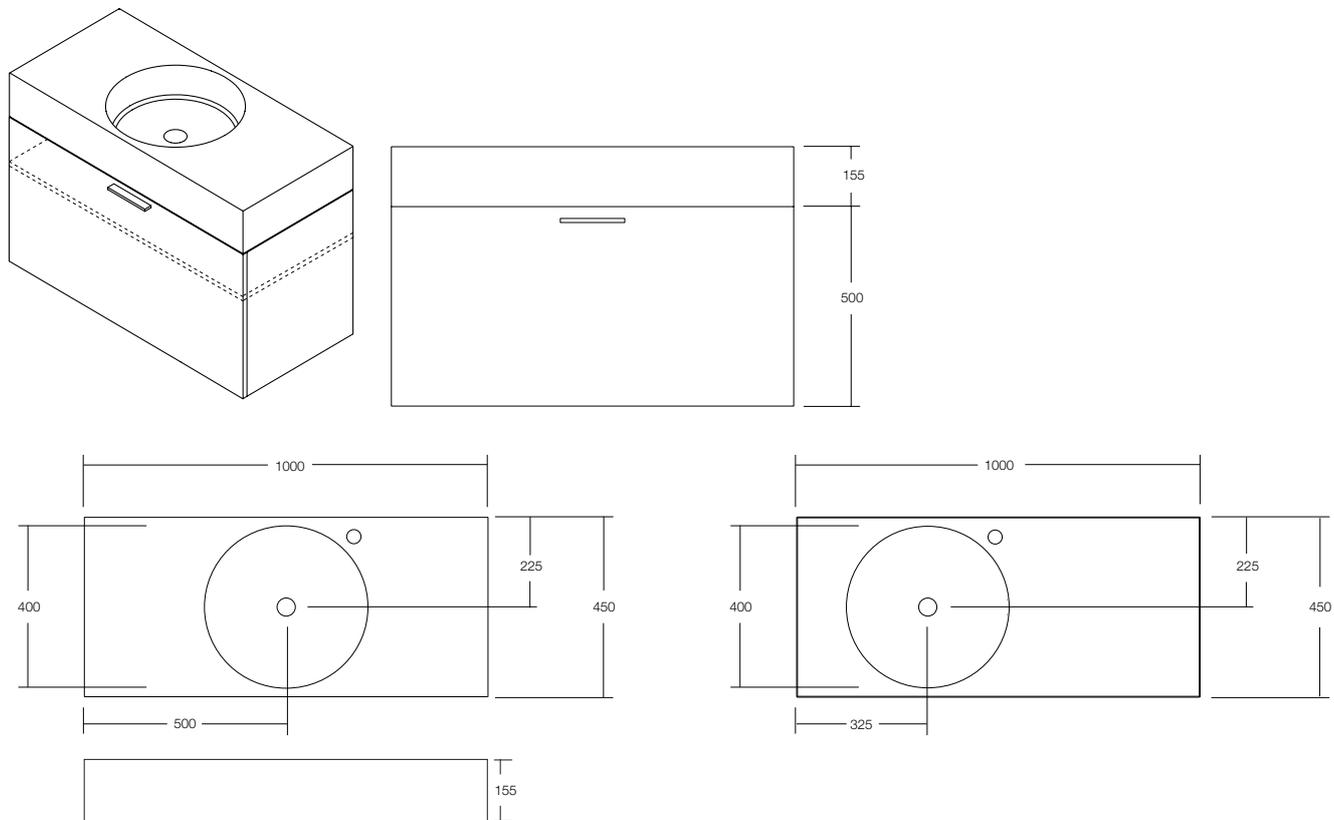


1400 Double Drawer Cabinet

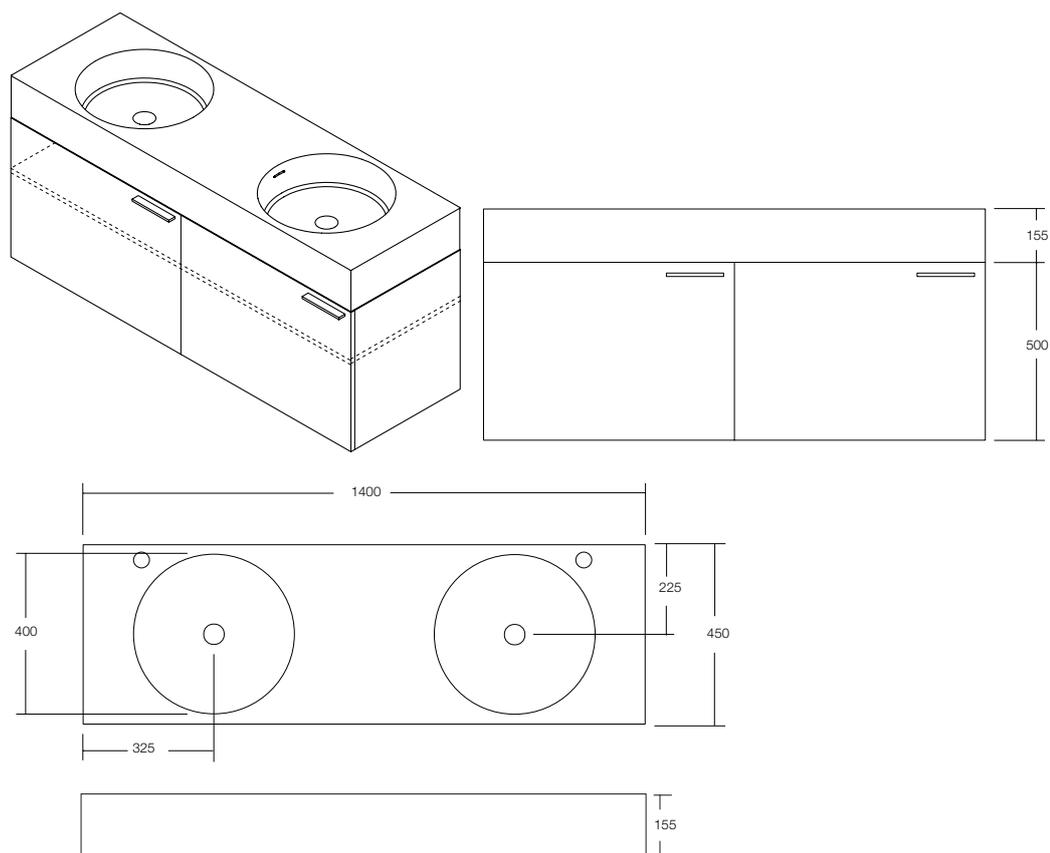

NEO WALL HUNG VANITY UNIT

ASSEMBLY LIST

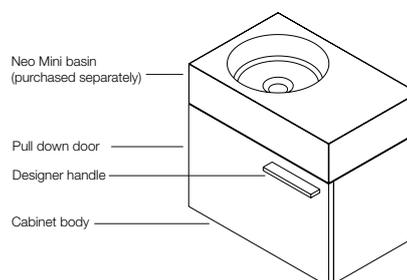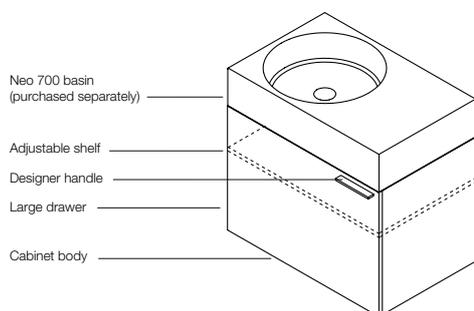

Note: Neo Mini comes with pull down drawer and doesn't include a shelf

NEO BASIN INSTALLATION INSTRUCTIONS

NO claims for damages / defects will be recognised after installation.

Prior to installation it is important to unpack and inspect your products to ensure no damage has occurred in transit and that the product IS CORRECT.

If damage has occurred, or a visible defect exists, do not proceed with installation and contact supplier IMMEDIATELY.

Step 1. Mark out bolt positions ensuring they are level and at the correct height.


Step 2. Installer to determine appropriate fixings, ensure wall is suitable and studs, noggins etc. are in appropriate locations.

Step 3. Once appropriate fixings are in the wall, place basin over bolts and tighten.
See figure 1.

Step 4. Once basin is attached to wall, connect trap and other hardware as necessary.

Note: Bottle trap is not included with basin

Figure 1.

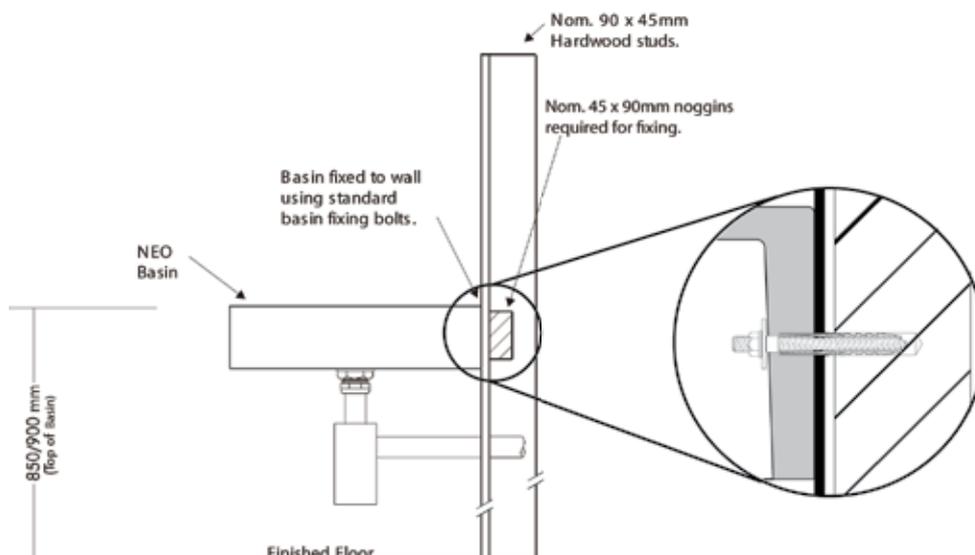

Plumbers, please ensure a copy of the installation Instructions is left with the end user for future reference

NEO WALL HUNG VANITY UNIT

NEO CABINET INSTALLATION INSTRUCTIONS

NO claims for damages / defects will be recognised after installation.

Prior to installation it is important to unpack and inspect your products to ensure no damage has occurred in transit and that the product IS CORRECT.

If damage has occurred, or a visible defect exists, do not proceed with installation and contact supplier IMMEDIATELY.

Step 1. Remove drawer and align cabinet directly under the already installed Neo basin.

See figure 2 and 3.

The Neo mini cabinet has a pull down door not a removable drawer therefore you don't have to remove anything to install this particular cabinet on your wall.

NOTE: Often cabinets are made slightly smaller than the vanities so the basin can overhang the cabinet sides. Ensure your basin is centred over the cabinet when installing.

Step 2. Installer to determine appropriate fixings and provide adequate wall framing (studs/nogging) to ensure secure mounting of cabinet.

Step 3. If the wall is not level/square, packers must be used to prevent cabinet twisting/malfunction.

Step 4. As a minimum, use fixings at all corners and top and bottom centres. Use additional fixings if required. All fixings must be secured to wall framing (studs/noggins). See figure 4.

Step 5. Insert the drawer by simply locating the runners and pushing it in. Ensure runners 'click' into location. Test operation by opening and closing ensuring it's secure to the cabinet.

Figure 2.



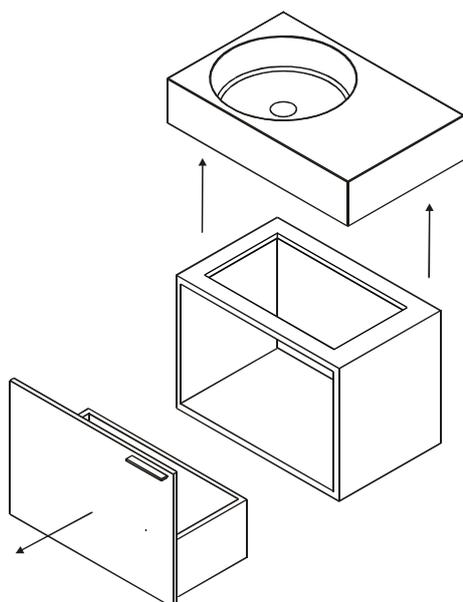


Figure 3.

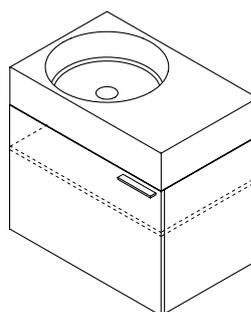

NEO WALL HUNG VANITY UNIT


Figure 4.

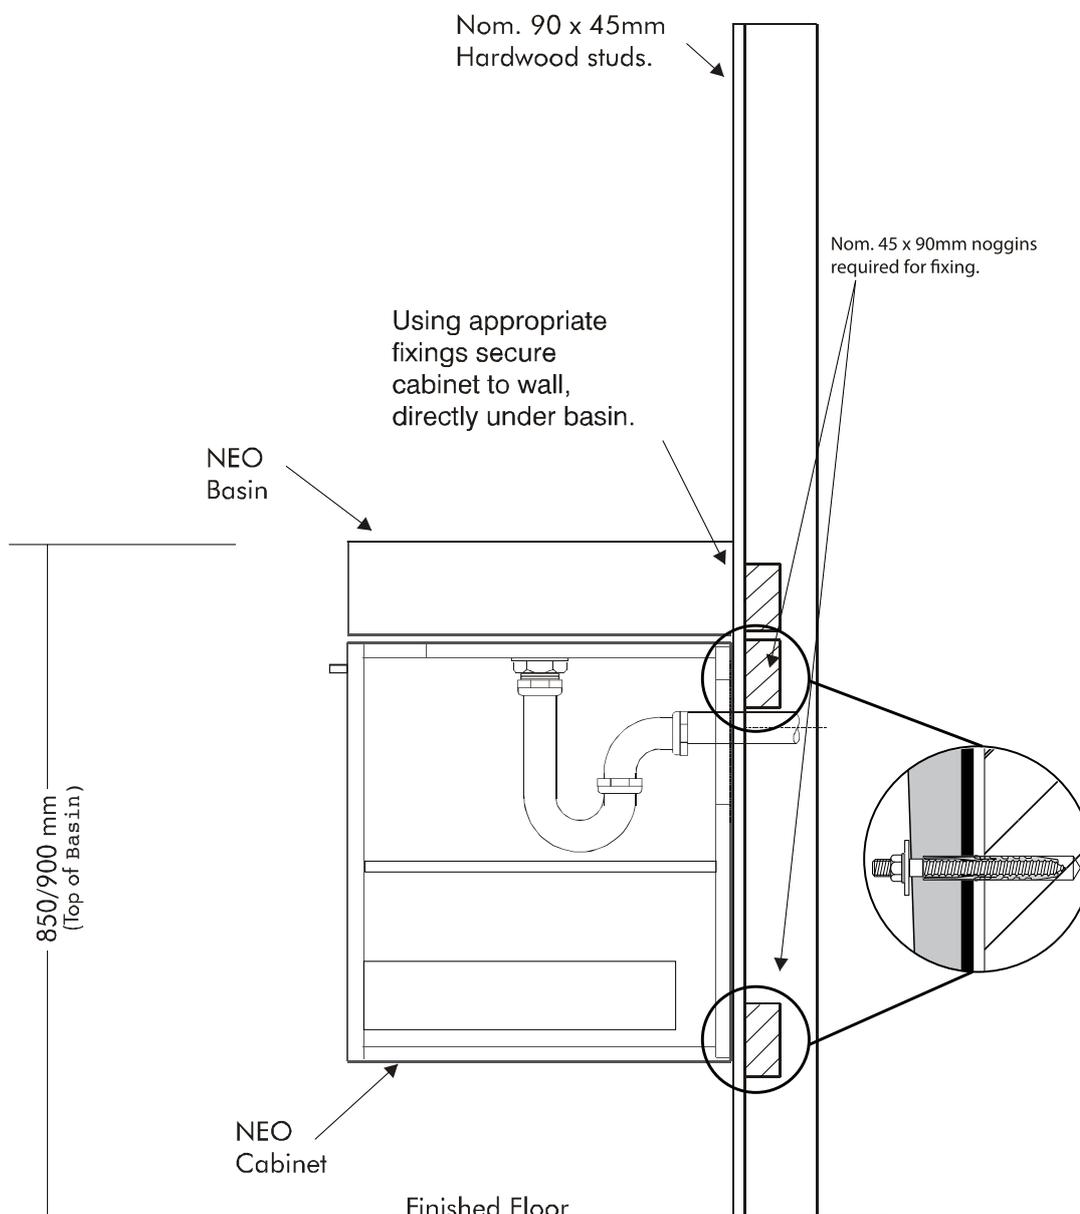

NEO WALL HUNG VANITY UNIT


NEO CABINET DRAWER ADJUSTMENT INSTRUCTIONS

Figure 5. Removing drawer

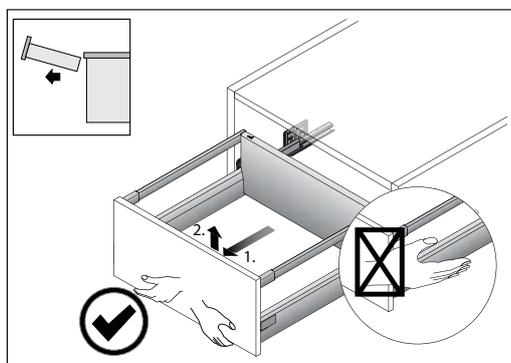


Remove drawer by pulling fully out and then pull upward, holding the underside front

Figure 6. Replacing drawer

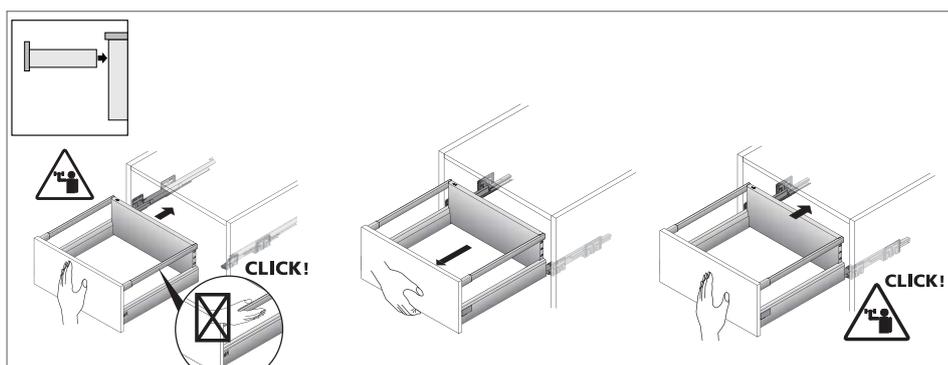

Drawer is inserted by locating it on the runners and pushing it in. Ensure runners 'click' into location. Test operation by opening and closing

Figure 7. Adjusting drawer front

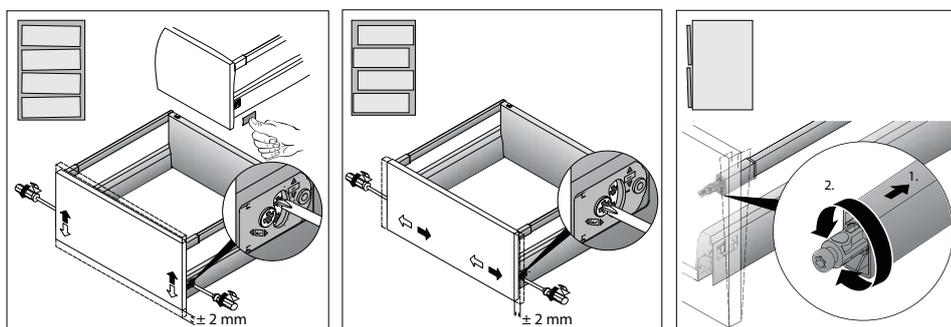

Drawer front height is adjustable at both left and right by maximum ± 2 mm. Rotate click wheel with screwdriver firmly located in place.


Drawer front sideways location adjusts left and right by maximum ± 2 mm. Use screwdriver on adjustment screws at left and right. Adjust as required.

Drawer front tilt is adjustable. Slide back rail cover. Rotate plastic lug in either direction to adjust accordingly.

NEO WALL HUNG VANITY UNIT

NEO CABINET DRAWER ADJUSTMENT INSTRUCTIONS

Figure 8. Replacing drawer front

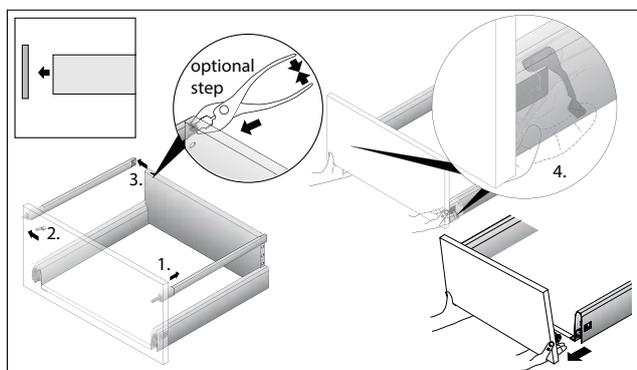

If front panel requires replacing it is easily removed & reinstalled.

1. Slide left & right rail covers back
2. Detach rails from drawer front panel by pushing to one side.
3. (Optional) Using pliers, remove rails by closing lugs & pulling rail away
4. Disengage front drawer panel by actuating left and right levers. Remove panel