
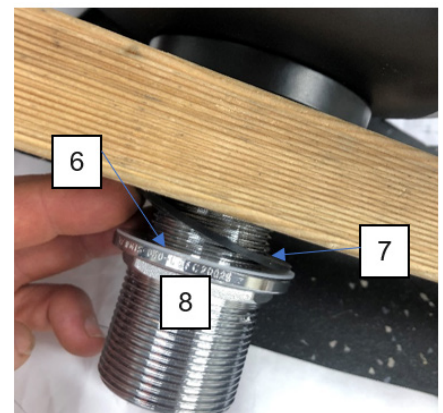
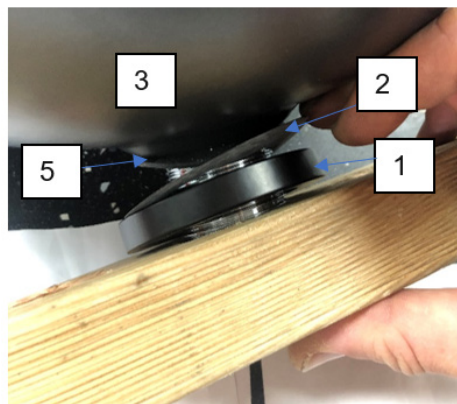


Alape Circa Above Counter Basin 360mm

INSTALLATION INSTRUCTIONS

1. In a suitable position on the countertop, cut a hole with a diameter of 45 mm.
- NB: - if wall mounted tapware is to be used, consideration should be made to length of outlet and positioning of basin on bench top.
- if tapware is to be bench mounted allow suitable bench top width for fitting tapware.
2. Fit rubber waste seal (5) inside vessel waste hole, if it has not been factory fitted
3. Place thin rubber seal (2), 80mm base ring (1), and dish vessel (3) on the counter top. Apply flexible sealant between base ring & benchtop
4. Guide waste top (4) through the vessel waste hole sealing ring (5) and the drilled hole from above
5. Fit rubber washer (7) & nylon washer (6) to waste top (4) from below vessel.
6. Screw union nut (8), rubber washer (7) & nylon washer (9) from below
7. Align dish vessel carefully so it sits straight & level & tighten into place to prevent vessel movement.
8. Make connection from waste to waste pipe in wall using 40mm trap
9. Thoroughly check for leaks

NOTES: 40mm Trap assembly to vessel waste fits benchtops upto maximum thickness = 40mm

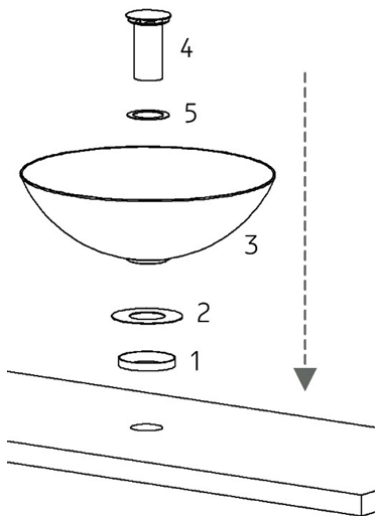

Plumbers, please ensure a copy of the installation instructions is left with the end user for future reference.