

To see the complete CUSTOM GLASS range go to www.reece.com.au/bathrooms

SPECIFICATIONS			
Recommended use	Domestic, Hotel, and Commercial		
Material	Screen-6mm Clear Toughened Glass. Glass Infill- 5mm Clear Toughened Glass. Return Panel - 5mm Clear Toughened Glass. Australian Safety Standards Compliant.		
Floor Suitability	Tiled Floor Installation		
Door Opening Option	Left or Right		
Handle	Standard Knob		
Frame & Support Rail Colour	Support Rail Colour Polished Silver		
Optional Extras	1789912 - Installation Charge		
	1791295 - Shower Screen Removal		
Standard Height	1950mm		

SIZE VARIATIONS					
Code	TILE BASE	ADJ FRONT	DOOR SIZE	INFILL GLASS	ADJ RETURN
1790434	900 x 900	820-900	702	180	890-910
1790435	980 x 900	901-980	702	260	890-910
1790436	1000 x 1000	981-1060	702	340	990-1010
1790437	1200 x 900	1140-1220	702	500	890-910

CLEANING RECOMMENDATIONS


We recommend the use of soapy water or approved cleaners.


This product should not be cleaned with abrasive materials.


Damage caused by any improper treatment is not covered by the product warranty - refer to Warranty Conditions.

Please refer to detailed Cleaning Instructions on page 18.



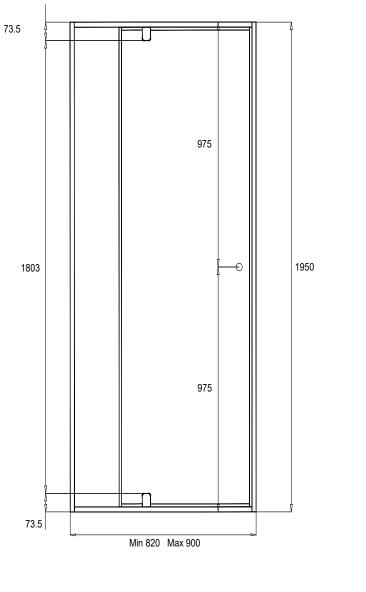


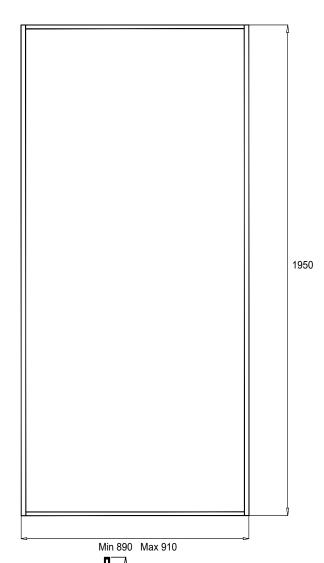

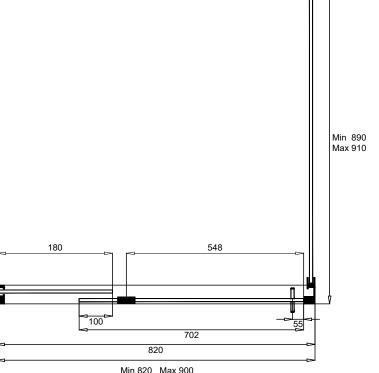

Min 820 Max 900




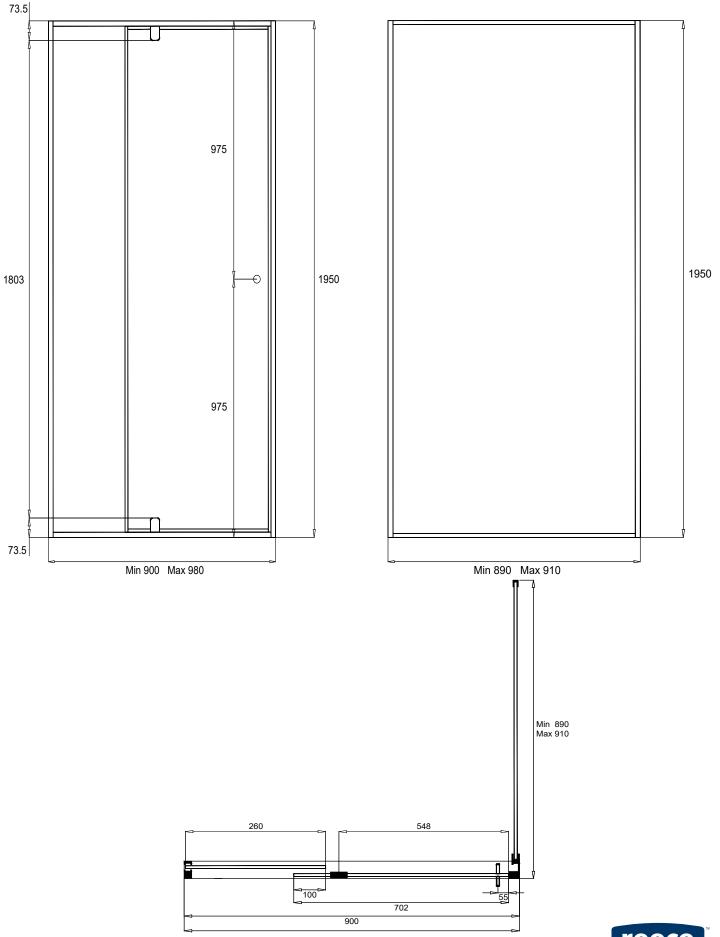

Dimensions are nominal measurements only. Dimensions are shown in Millimetres

Min 900 Max 980




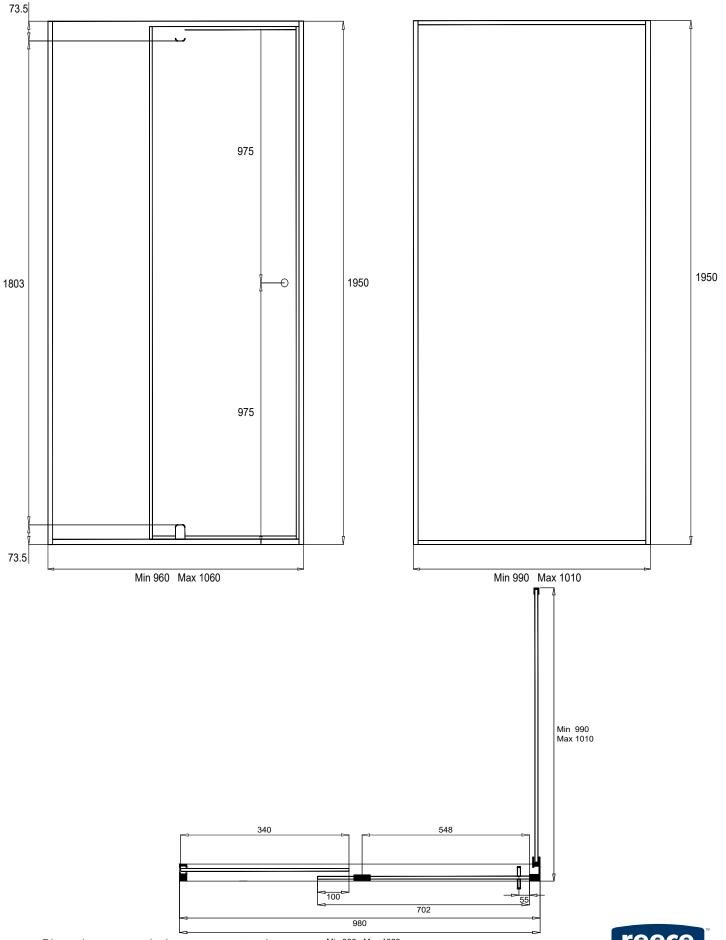

Dimensions are nominal measurements only. Dimensions are shown in Millimetres

Min 980 Max 1060



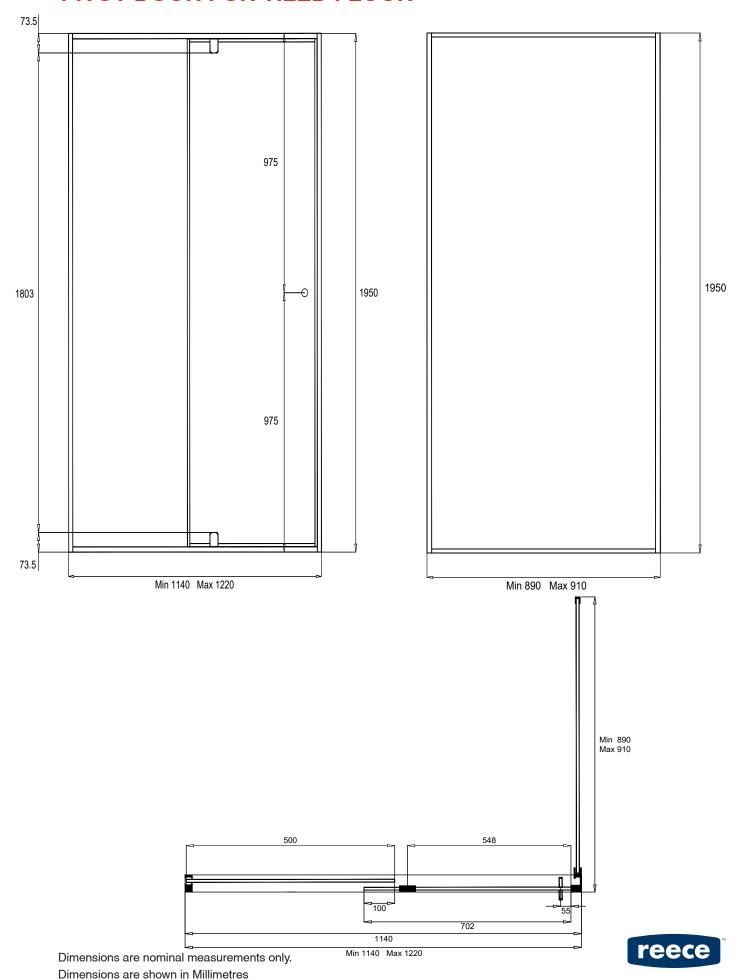


Important Pre-Installation Information

- Please read this entire instruction book before commencing installation.
- A licenced tradesman must be used for the installation.
- Leave the plastic protectors on the glass corners until the last possible moment and handle with care.
- Please ensure all tiles are grouted and silicone work is completed before attempting to install this product.

Maintenance

If water alone is not enough to clean the glass, Custom Glass recommends the use of mild detergent solutions only.

Tools Required

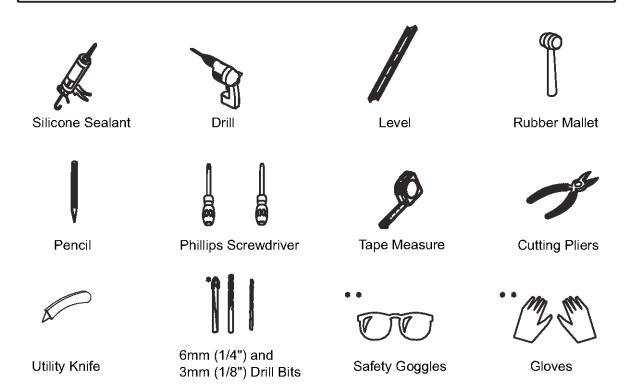


^{*} Use the correct type of drill bit for the material being drilled, with 6mm required for anchor fixing and 3mm used for screwing directly into the wall studs.




^{**} As with all toughened glass, take care while handling and wear safety goggles and gloves for personal protection.



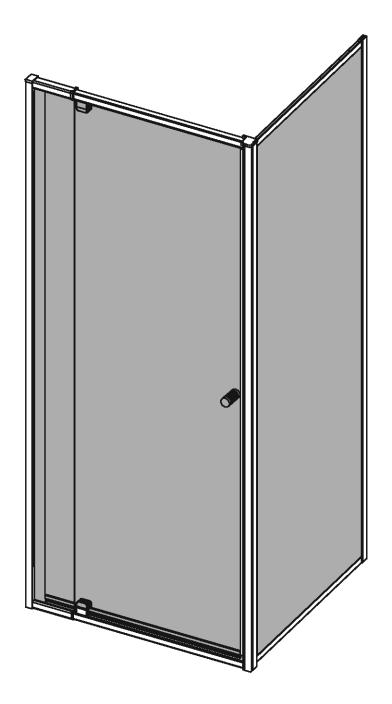




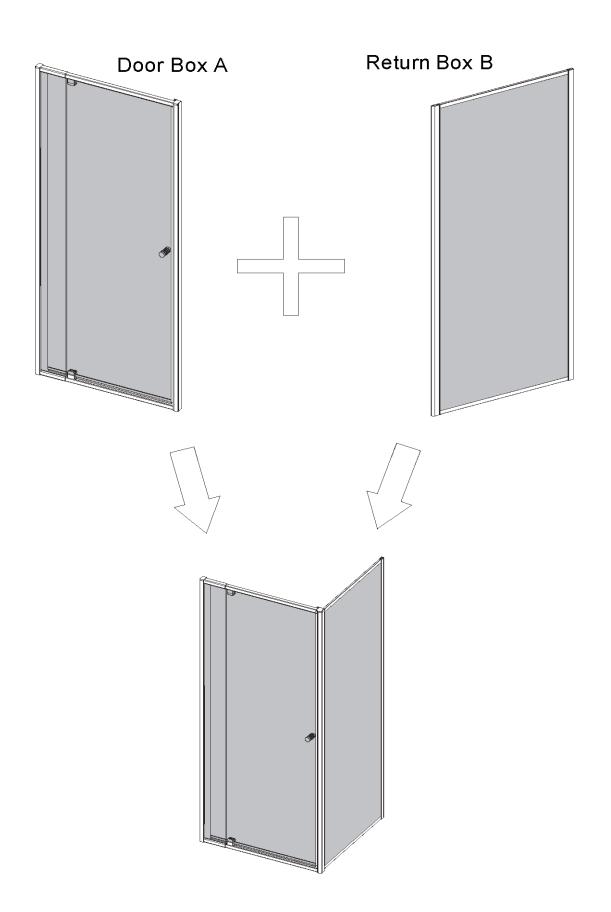




Door Box B Items

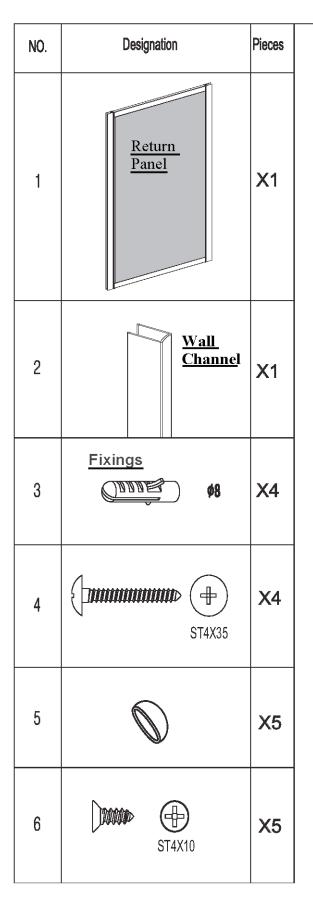

1	NO.	Designation	Pieces
7	7.1		X1
_	Retu .2	rn Top Caps	X1
8	A -	Return Jamb	X1
		Not Supplied	

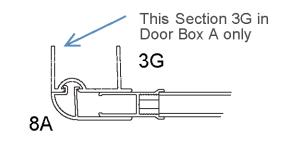


Slide these 2 sections together




reece

SEMI FRAMED ADJUSTABLE FRONT & RETURN PIVOT DOOR FOR TILED FLOOR


BOX B RETURN INSTRUCTIONS

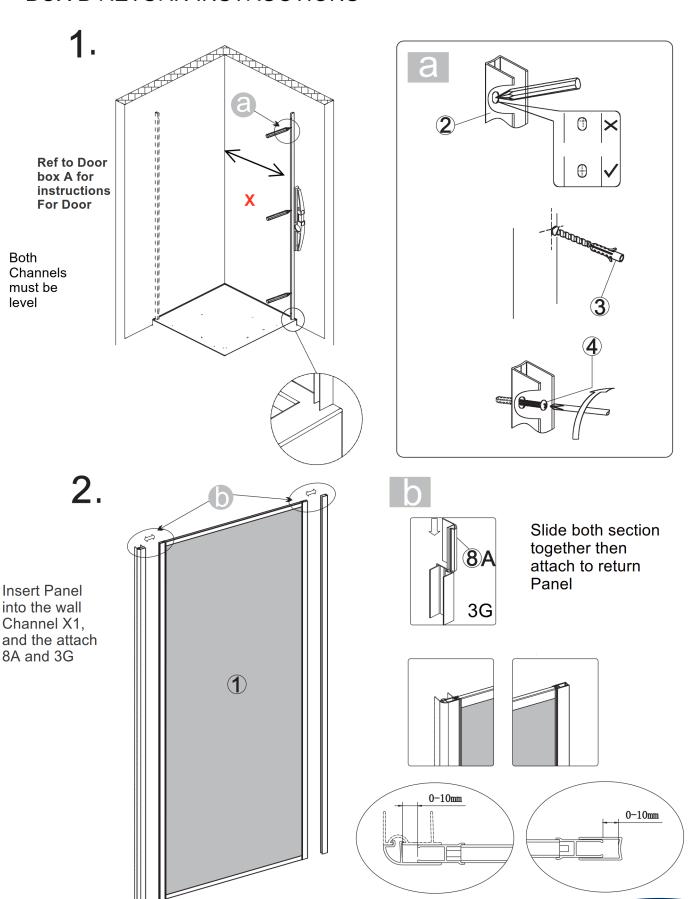

BOX B RETURN INSTRUCTIONS

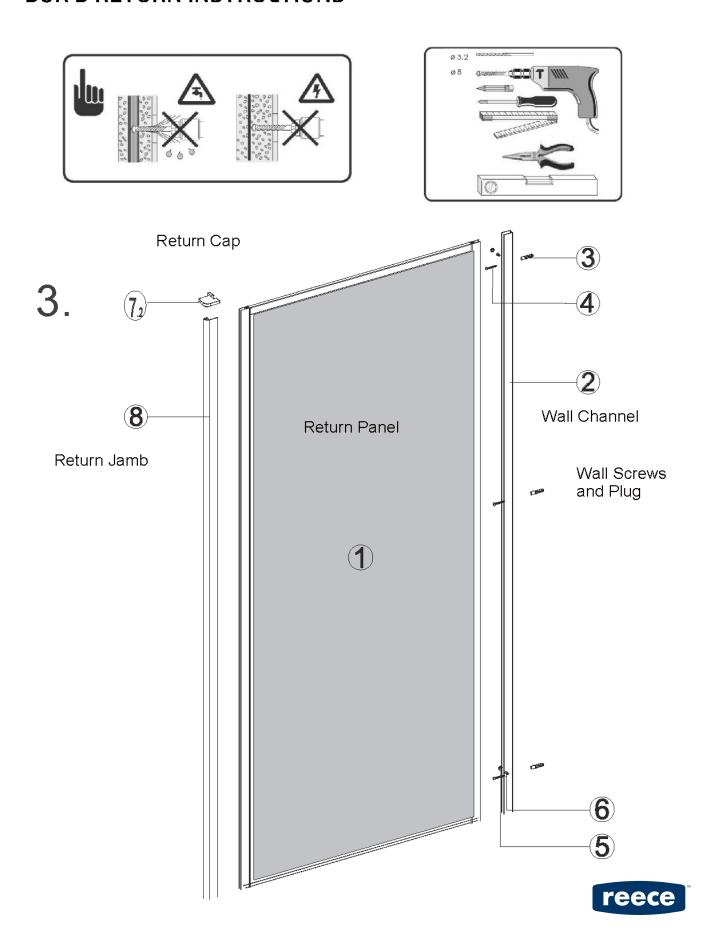


4

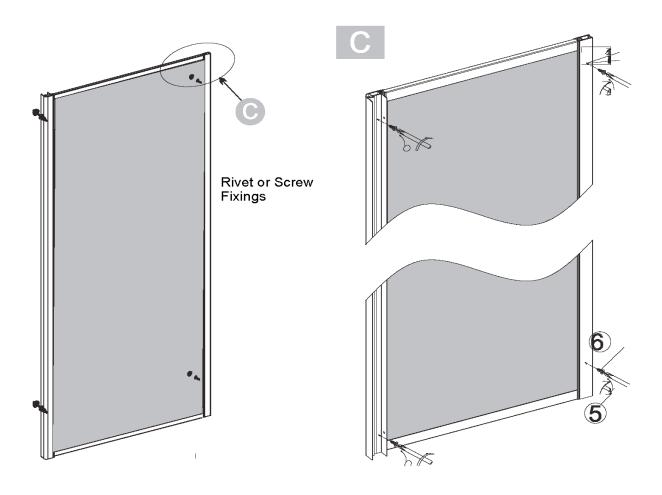




Door Box A Items

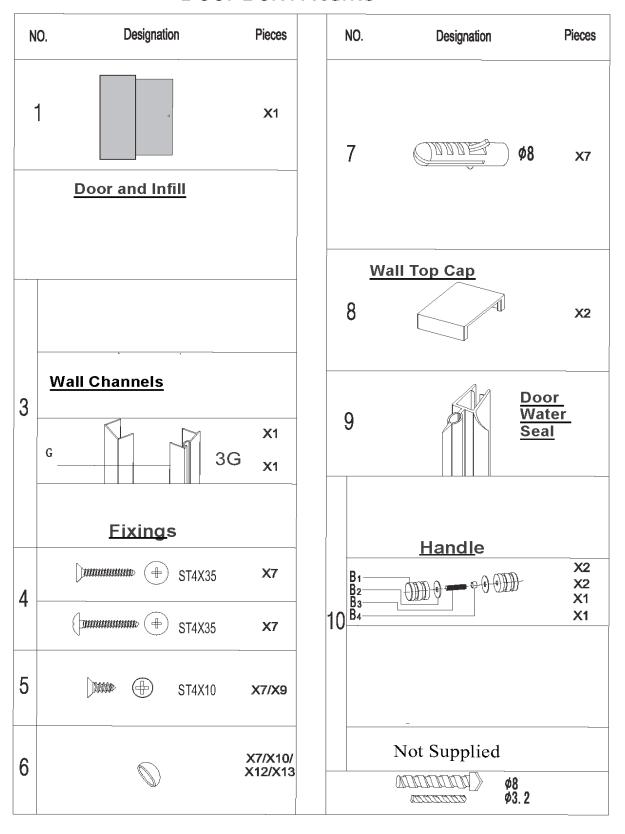






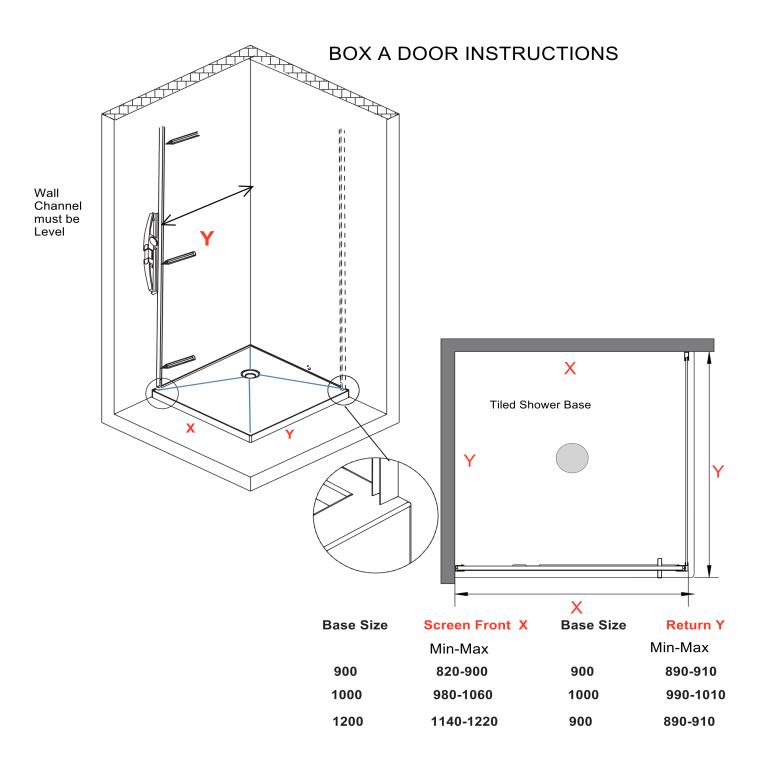







BOX A DOOR INSTRUCTIONS

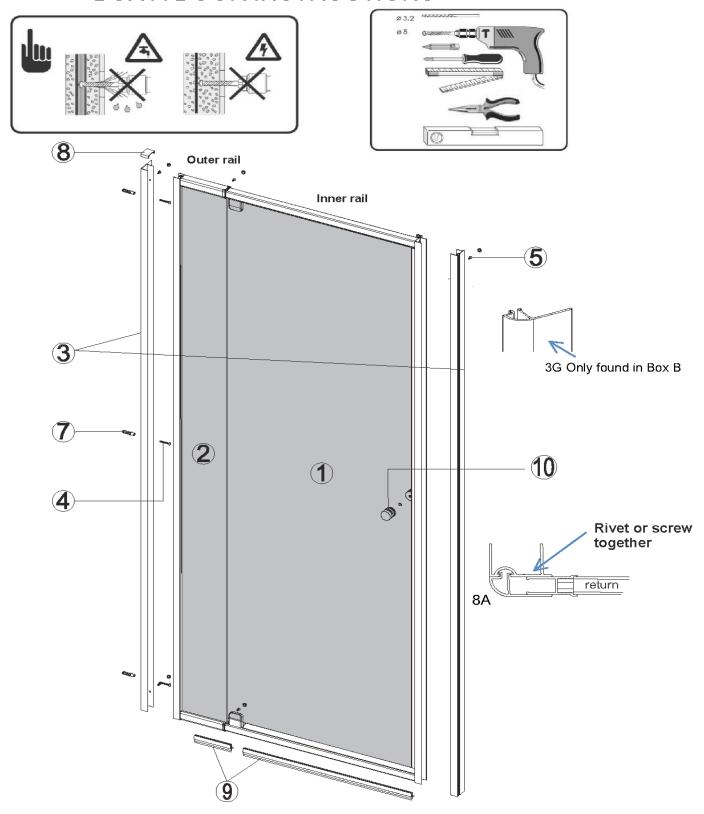



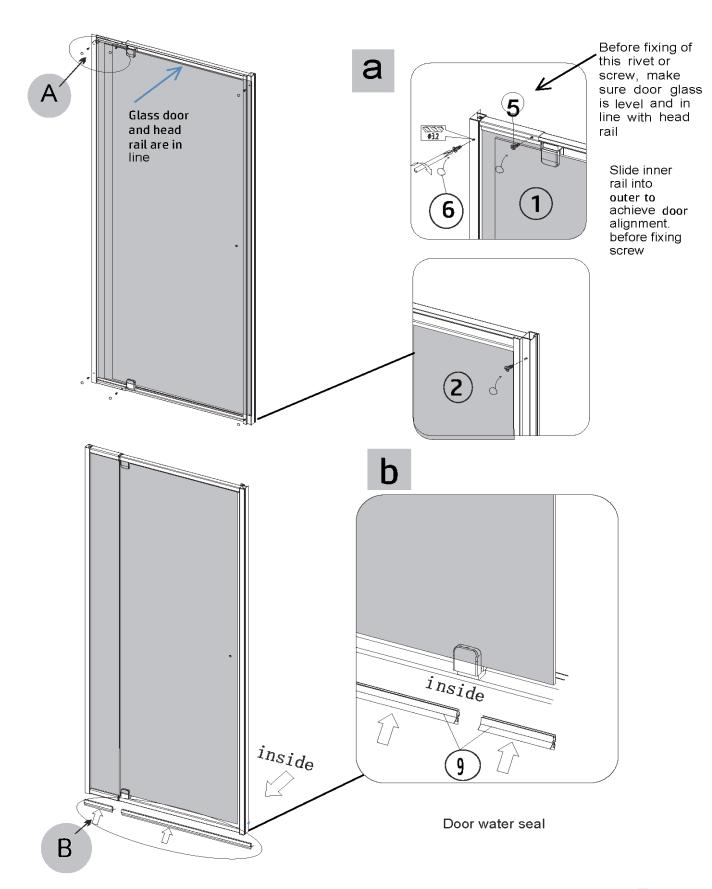



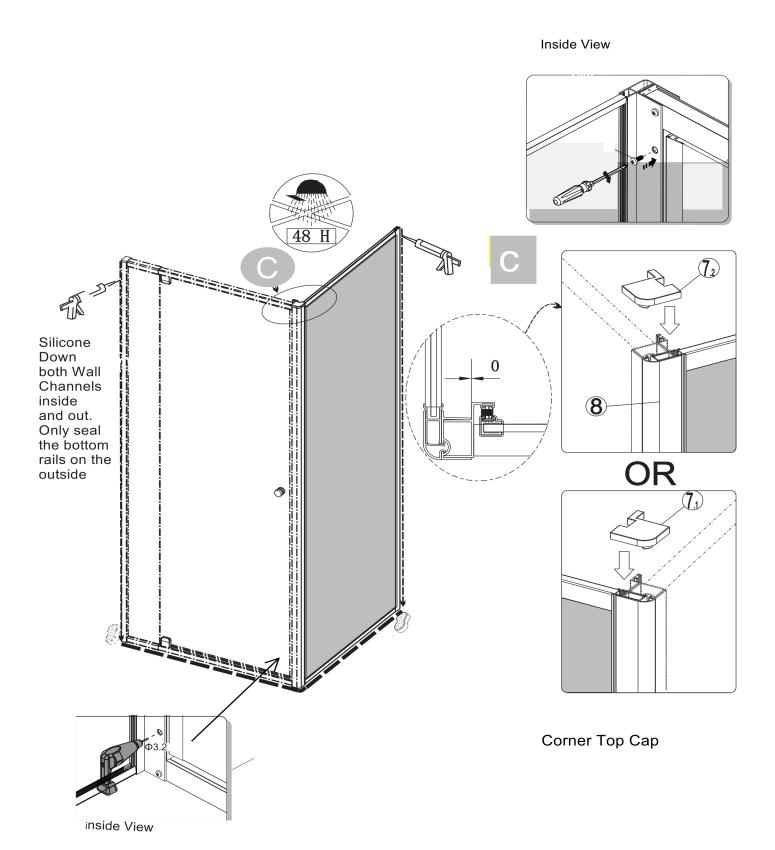



Easy Clean Treated Glass

After showering we strongly recommend you squeegee the glass to remove water from the surface.

A weekly clean using water and 30% vinegar or a mild detergent is all it takes to remove dirt, soap scum and other contaminants.

Spray the vinegar and water on the glass and wipe with a soft cloth, leave this on the surface for several minutes before rinsing and drying the glass.

Aluminium Frame and Metal Components

The simplest and most preferred method of cleaning your unit is by washing with clean water and drying with a soft cloth.

Do not use Abrasive powders, steel and Teflon pads or dirty and gritty rags. The anodised coating on the Aluminium is one of the hardest substances known, however, it will be damaged by strong acidic or alkaline solutions. These solutions may dull and discolour the finish.

The most reliable preventative measure to preserve your screen is to wipe the surface dry with a soft cloth after each use.

