


Domaine Round Polished Edge Mirror



Recommended Use Domestic, Hotel and Commercial Finish Material Copper free mirror, vinyl-backed Sizes available 600mm, 750mm, 900mm Diameter Thickness 5mm	
Sizes available 600mm, 750mm, 900mm Diameter	
Thickness 5mm	
THICKIESS OHIII	
Fixing Screwed and hung to the wall by a licer tradesperson - brackets on back of mirrors.	

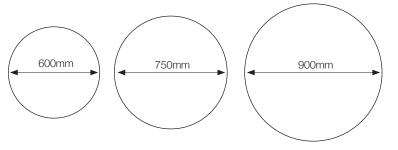



To see the complete Posh range go to www.reece.com.au/bathrooms

INSTALLATION INSTRUCTIONS

Prior to installation it is important to unpack & inspect your products to ensure no damage has occurred in transit and that the product IS CORRECT. If damage has occurred, or a visible defect exists, do not proceed with installation and contact supplier IMMEDIATELY.

NO claims for damages / defects will be recognized after installation. Mirror must be installed by a qualified trades person.

Important - In fixing to timber framed walls or partitioning, care should be taken to properly reinforce wall.

Installation procedure:

- 1. Ensure the wall is plumb.
- 2. Mark out positions of fixing screws, pre-drill and use appropriate screws/fixing to suit wall type (standard screw/wall plug supplied for Villaboard wall).
- 3. Hang mirror into position.

CLEANING RECOMMENDATIONS

For best results - use a slightly moistened microfibre cloth to remove dry dirt or grime, then buff clean with dry microfibre cloth or use a soft dry cloth with a tight weave (which is more soft and non-abrasive). This will leave you with a clean, smear-free finish. By using alkaline (ammonia) or acid (vinegar) based products you not only risk damaging the silvered backing of the mirror, but also tend to leave behind streaks and smears.

DO NOT use ammonia-based cleaning products such as glass cleaner. These may erode the mirror's silver backing. Be sure to read the label of any such cleaning products before use.

