


# INSTRUCTION SHEET 3 (CAGE WITH BACK OPTION)

## FIXINGS SUPPLIED.

M6x16L 8x (For 600mm & 800mm High)  
12x (For 1200mm & 1600mm High)

M6x41L 4x (For 600mm and 800mm High)  
6x (For 1200mm and 1600mm High)


## FINISHED

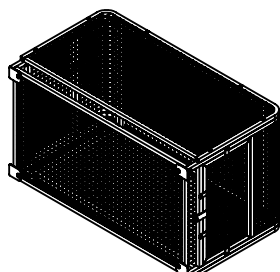

M6x35L 6x  
M6 Wrench 1x

1

SLIDE LEFT AND RIGHT SIDE PANELS INTO MOUNTING HOLES ON FRONT PANEL

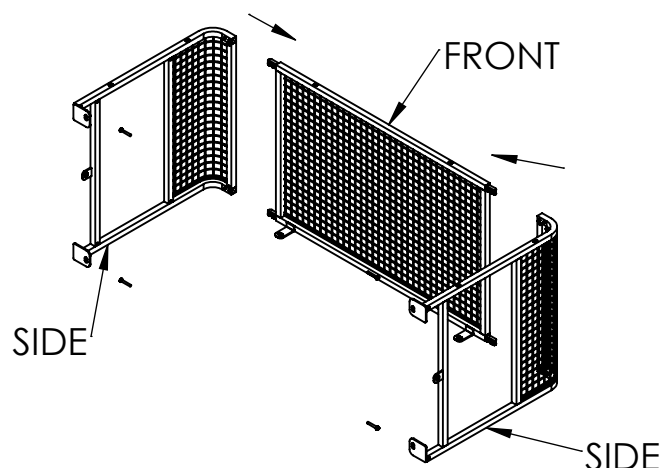


2

USING SCREWS PROVIDED, SCREW SIDES AND FRONT TOGETHER. DO NOT FULLY TIGHTEN AT THIS STAGE


M6x16L

8x (For 600mm & 800mm High)  
12x (For 1200mm & 1600mm High)

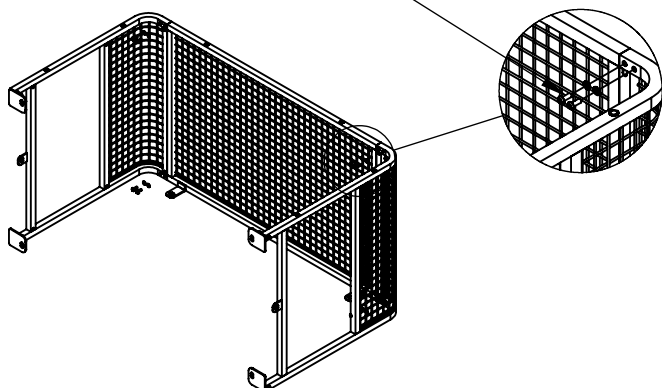


3

USING SCREWS PROVIDED, SCREW BACK PANEL ON, DO NOT FULLY TIGHTEN AT THIS STAGE

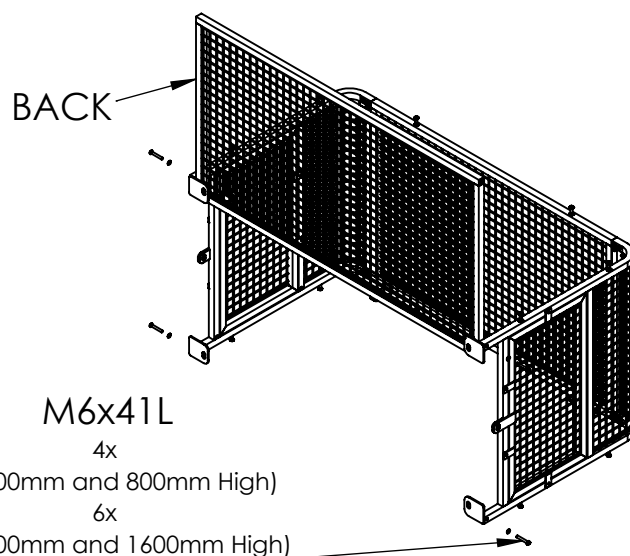

4

JOIN TOP PANEL TO SIDES AND FRONT, ENSURE GROUND FIXING LUGS ON FRONT IS AT THE BOTTOM. TIGHTEN ALL SCREWS ON TOP AND ON SIDES AND FRONT AND BACK.

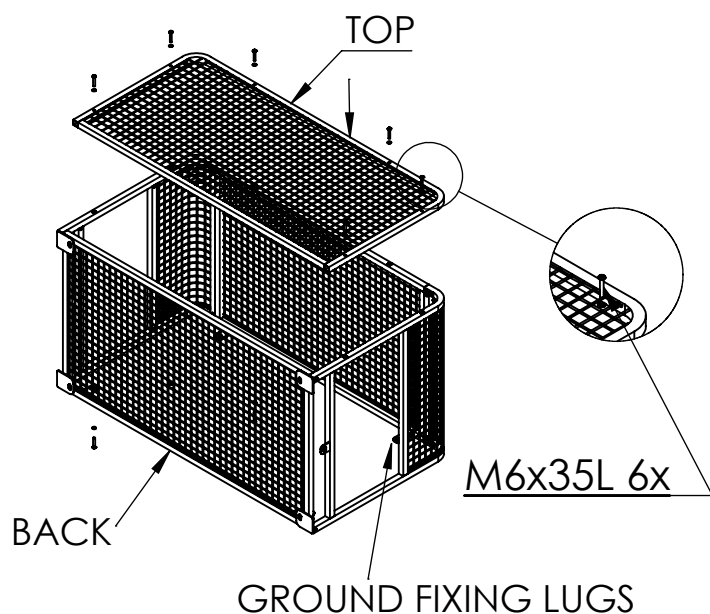

5

DOOR MAY BE PADLOCKED THROUGH EYELETS PROVIDED OR SCREWED SHUT WITH METAL DRILLING SCREWS (Metal drilling screws not provided)

