

# Esiflow Urinal



Scan QR code to view our installation notes




## UESI

### Product Info:

#### To order this item please advise:

- Urinal Length
- Waste Size (100mm or custom)
- Waste Pos'n (L, C, R or custom)
- Rear or Top water entry
- Budget/Economy model
- Made to custom lengths
- Optional waste outlet size and position
- Suits pairing with Smart Sani Flush Sensor (FSM)

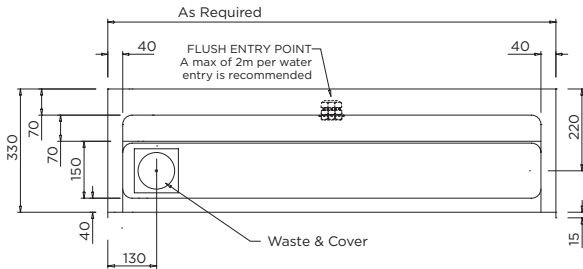

## INSTALLATION NOTES

- 1) Urinal should be installed in conjunction with a graded step area or recessed into a graded floor to ensure drips drain towards urinal gutter.
- 2) Recommended trench dimensions for recessed urinals are (Urinal Length + 50mm) x 340mm Wide. To calculate trench depth, allocate 100mm for the first 1000mm in length and add 20mm for each additional meter thereafter.
- 3) One water entry will be supplied for every 2000mm or part thereof.
- 4) 101mm (OD) tube dropper outlet provides optimal drainage.
- 5) If urinal has rear water entry, provide access and enough space behind to connect water before finishing walls.
- 6) Tile edges are supplied to all sides for sheeting over unless otherwise requested. E.g. if side wall(s) are requested to be freestanding.

