


Arco Giro Washing Machine Stop 15 x 20mm Chrome

INSTALLATION INSTRUCTIONS

- 1. Isolate water to the installation area.
- 2. Do not apply sealing material to the thread of the inflow pipe. This mini stop is fitted with an internal cone sealing washer.
- 3. Screw mini stop onto the inflow pipe. Do not apply excessive torque, it can damage the washer.
- 4. Connect hose to fixture and to the outflow connection of the mini stop, ensure that connections are watertight.
- 5. Check operation of mini stop by turning handle a full quarter turn to ensure connections are watertight.

FOR INSTALLATION REFER TO: AS/NZS 3500

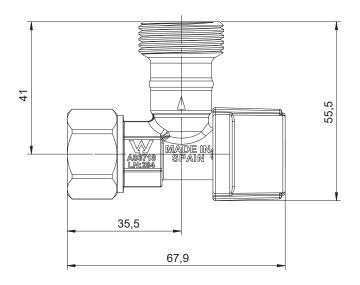

112016 Arco Giro Washing Machine Stop 15 x 20mm Chrome

Plumbers, please ensure a copy of the installation instructions is left with the end user for future reference.

