

TASCA SLIMLINE WALL HUNG VANITY UNIT

370MM DEEP 750 / 900 / 1200 / 1500




Top Option 1



Top Option 2
(with soft square top)

SPECIFICATIONS

Recommended use	Domestic / Multi Residential
Colour Availability	Basin/Top: White Solid Surface Cabinet: Gloss white or black / matte white or black or a choice of six NAVurban finishes: Tablelands, Fremantle, Blackheath, Fitzroy, The Oaks & Yarra Walnut – see swatches below:



Dulux colours in gloss or matte finish available at an additional charge

Drawer interior:	CIBO light grey 'Zincworks' moisture resistant (MR) MDF Anodised aluminium scoop in drawer/s to accommodate waste pipe Interchangeable drawer dividers
Fixing requirement:	Wall hung vanity unit – a licensed (Plumber/Builder) installer is required
Dimensions:	750: W750 x H400* x D370mm – one drawer 900: W900 x H400* x D370mm – one drawer 1200: W1200 x H400* x D370mm – one drawer 1500 double: W1500 x H400* x D370mm – two drawers * Note: Overall height with top option 2 is 392mm.

Basin / Top Option 1:	Basin / Top Option 2:
20mm Solid Surface top with integrated rectangular basin. Waste size: (waste not supplied) 32mm plug and waste (without overflow)	12mm Solid Surface soft square top with integrated basin & indented tap landing. Waste size: (waste not supplied) 32mm plug and waste (without overflow)
750: Lavabo 41 – 750 x 20 x 370mm with 0, 1 or 3TH	750: Lavabo 61 – 750 x 12 x 370mm with 0, 1 or 3TH
900: Lavabo 42 – 900 x 20 x 370mm with 0, 1 or 3TH	900: Lavabo 62 – 900 x 12 x 370mm with 0, 1 or 3TH
1200: Lavabo 43 – 1200 x 20 x 370mm with 0, 1 or 3TH	1200: Lavabo 63 – 1200 x 12 x 370mm with 0, 1 or 3TH
1500 dble: Lavabo 44 – 1500 x 20 x 370mm with 0, 2 or 6TH	1500 dble: Lavabo 64 – 1500 x 12 x 370mm with 0, 2 or 6TH
Mechanisms	Fingerpull handles, soft-closing drawer(s)

All dimensions are provided in millimetres and are subject to accepted manufacturing variations.


CLEANING RECOMMENDATIONS

We recommend the use of soapy water or approved cleaners. This product should not be cleaned with abrasive materials. Damage caused by any improper treatment is not covered by the product warranty - refer to Warranty Conditions on the last page.




TASCA SLIMLINE WALL HUNG VANITY UNIT


Side View - all Vanities

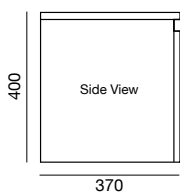


750mm (centred basin)

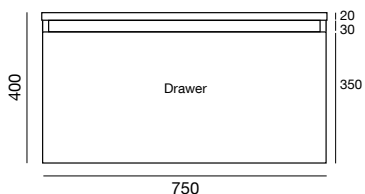

Top Option 1

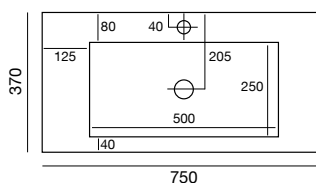


Top Option 2* (with soft square top)

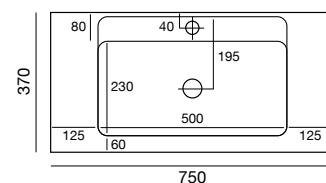


* **Note:** Overall height with top option 2 is 392mm.


900mm (centred basin)

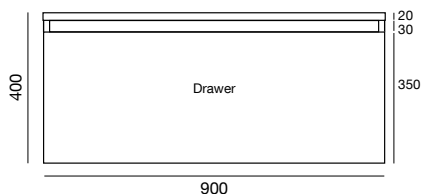

Top Option 1

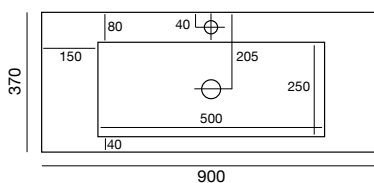


Top Option 2* (with soft square top)

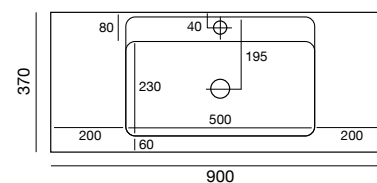


* **Note:** Overall height with top option 2 is 392mm.


1200mm (centred basin)

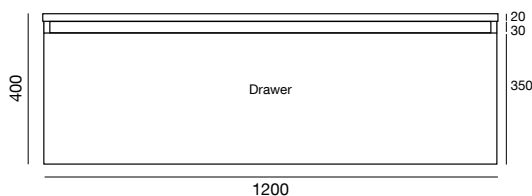

Top Option 1

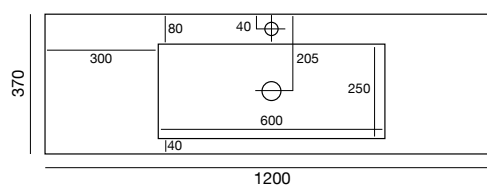


Top Option 2* (with soft square top)

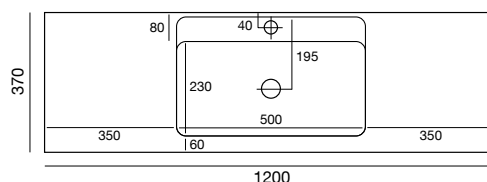


* **Note:** Overall height with top option 2 is 392mm.


1500mm (double basin)

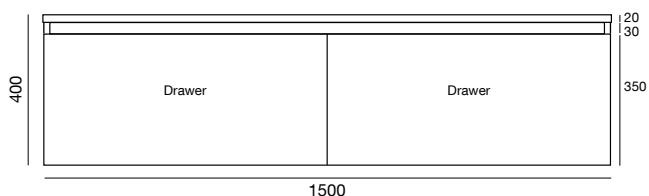

Top Option 1

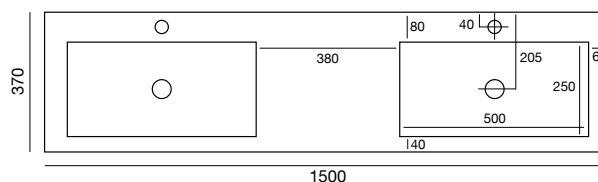


Top Option 2* (with soft square top)

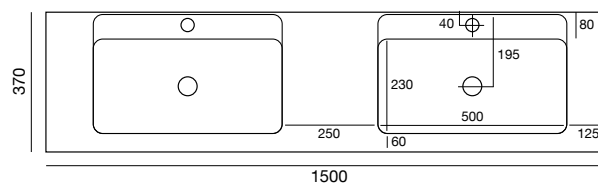


* **Note:** Overall height with top option 2 is 392mm.

Plumbing Allowance

End Section:

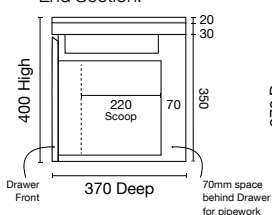

Plan Section:

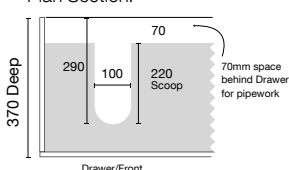

Dimensions are nominal measurements only

To see the complete CIBO range go to www.reece.com.au/bathrooms



TASCA SLIMLINE WALL HUNG VANITY UNIT

INSTALLATION INSTRUCTIONS

PLEASE INSPECT YOUR CIBO PRODUCT ON DELIVERY (or PICK UP), PRIOR TO INSTALLATION.

A visual inspection must be made of the product on delivery (or pick up), by the person receiving it, prior to installation.

Please pay careful attention when removing the wrapping materials. If the product has marks, chips or imperfections deemed unacceptable and/or has been damaged in transit, the product should not be installed.

Please contact place of purchase immediately, to advise of your concerns (prior to installation).

For detailed Installation Instructions visit www.cibodesign.com.au

1. Remove cabinet drawer(s) and/or door(s) before installing to avoid damage. Ensure that drawer runners (if applicable) are covered, i.e., with bubble wrap/plastic (to prevent debris from getting into the mechanism). If the top has not been fixed to the vanity, then please remove from vanity.
2. Using a hole saw, drill necessary holes for the water supply pipes and wastes etc.
3. Carefully move the cabinet into place. Pack the vanity to the required height ensuring the vanity top is level from side to side and front to back. Packers may be required behind the unit to ensure the top is level and also to prevent the unit from twisting.
4. Once the vanity is level, fasten it to the wall using washers around the appropriate fixings i.e., screws, bolts (not supplied by CIBO).
It is the installer's responsibility to determine what fixing materials are needed. Fixings should be made as high as possible on unit, with more emphasis placed on the top fixings.
5. Sweep debris from the interior of the unit and remove bubble wrap/plastic from drawer runners (if applicable). Replace door(s) and/or drawer(s).
6. If the top was removed in step 1, place the top upon the unit ensuring that the front and ends of the top line up with the front and ends of the unit. This may leave gaps behind the top and the wall. This needs to be filled with silicone. Also fix the top to the vanity with silicone.
7. The unit must be sealed along the back edge of the top and down the sides against the wall with bathroom quality silicone. The best method of applying silicone is to cut the appropriate sized tip at a 65° angle and to evenly run a bead around the unit ensuring all gaps are filled. Seal around the cabinet with silicone.
8. Spray soapy water on the silicone joint (on the wall and top) to stop silicone sticking to the wall, and wipe off the excess.
9. The pipes can now be connected, and where necessary the basin siliconed to the vanity. Basins need to be sealed completely around the join.

PLEASE NOTE:

Accurate sealing of cabinet and kick (where applicable) is vital for ensuring longevity of the vanity unit. It is the responsibility of the installer to adjust the door(s) and/or drawer(s) after installation.

UNDER NO CIRCUMSTANCES SHOULD VANITIES AND/OR TOPS BE TILED INTO THE WALL.

CIBO vanities and basin/tops must be fitted to finished/completed wall coverings e.g., tile, masonry or other cladding method deemed acceptable, as per the building code (of Australia) 2013.

The CIBO Warranty does not cover any vanity and/or top and/or basin that has been tiled 'into' a wall i.e., fitting or fixing a vanity to a wall and tiling around it, and/or tiling down and/or around the vanity and top/basin.