



Rough-in

1. Ensure all parts are accounted for.
2. Default Nogging set back should be 32mm. Maximum Wall covering thickness should not exceed 30mm. Contact manufacturer if wall covering thickness is greater than 30mm.
3. Secure the In-Wall Body (K) to the Nogging using the screws provided. Ensure the In-Wall Body (K) is level by checking with a spirit level.
4. Flush all water feed lines. All lines must be free from any dirt and debris before connecting to the In-Wall Body (K). Once all water connections are made, check Hot/Cold water flow by operating the Mixer Cartridge (I). Leave the mixer in the closed position and place the Protective Cover (L) over the Mixer Body (J).
5. Store remaining parts in a safe place until wall coverings have been completed and final fit-off is required.

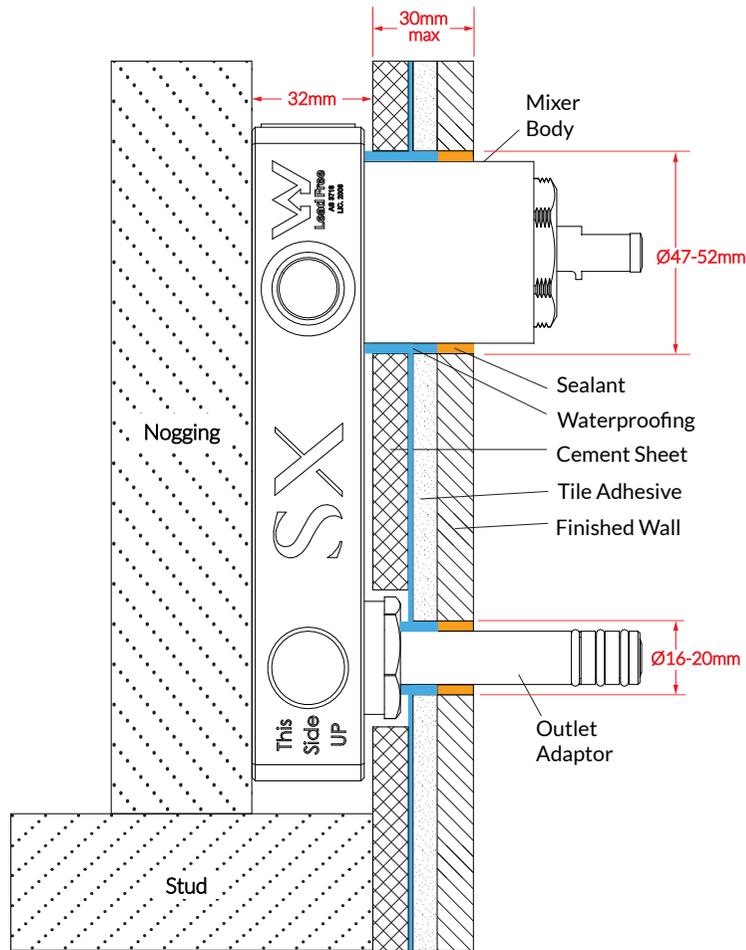

Mixer Handle Fit Off

1. Apply sealant and seal the Wall around the Mixer Body (J) to ensure the installation is water-tight.
2. Fit the Dress Ring (E) onto the Mixer Body (J) until it reaches the Wall covering.
3. Fit the Dome (D) onto the Cartridge Lock Nut (G).
4. Fit the Handle Body (A) onto the Mixer Cartridge (I) lever and ensure full engagement.
5. Tighten Set screw (B) of the Handle Body (A) using the 2.5mm Allen Key provided. (Tighten well)
6. Fit the Handle Pin (C) onto the remaining portion of the set screw protruding from the Handle Body.
7. To help prevent the Pin from becoming loose, silicone or a mild adhesive may be applied to the thread of the Pin.

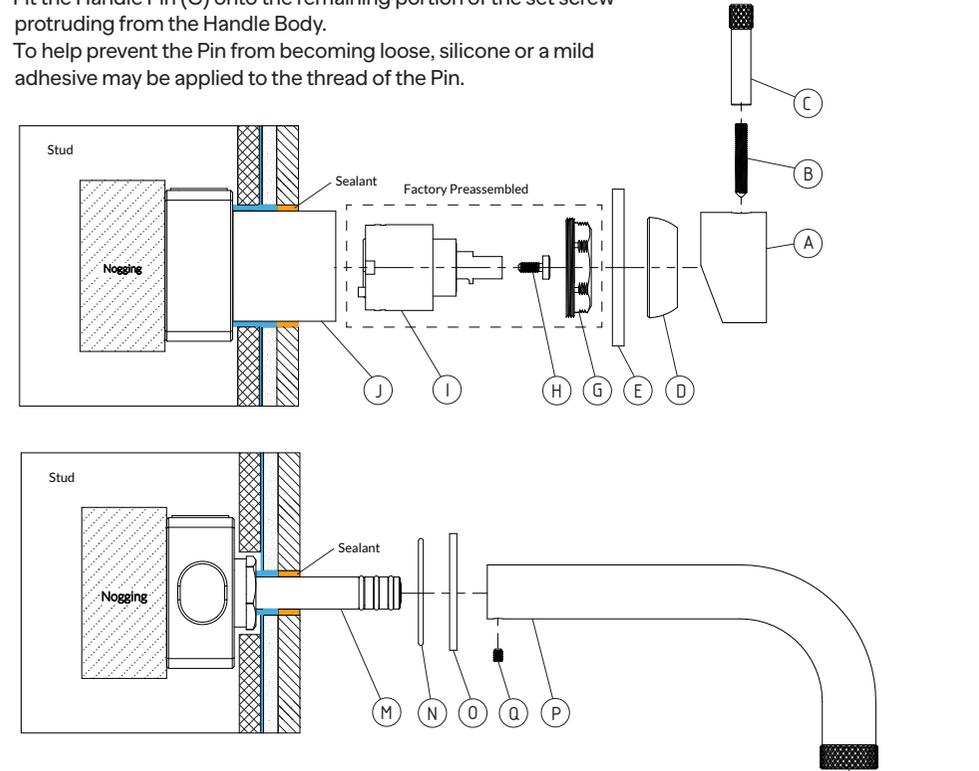

Outlet Fit off

1. Apply sealant and seal the Wall around the Outlet Adaptor (M) to ensure the installation is water-tight.
2. Loosely fit the Dress Ring (E) with O-ring (N) onto the Outlet Adaptor (M).
3. Apply a small amount of grease to the O-rings of the Outlet Adaptor (M).
4. Push on the Outlet (P) onto Outlet Adaptor (M) until it reaches the wall.
5. Align the spout downwards. Tighten Set screw (Q) using the 2.5mm Allen Key provided. (Tighten well)
6. Basin Aerator (R) is factory preinstalled. Switch to Bath Aerator (S) using Aerator Key (T) for install as a Bath Outlet.
7. To complete the installation, operate the Mixer(s) checking the flow of both hot and cold water from Outlet. Check all fittings and fixtures for water leaks.

