

Milli Inox Overhead Shower 250mm with Arm (3*)

INSTALLATION INSTRUCTIONS:

- 1. All pipework must be thoroughly flushed prior to the installation of the Shower
- 2. Clean the exposed thread and bind clockwise with Thread Sealing Tape
- 3. Fit Wall Plate to Arm and screw new Shower Arm (clockwise) onto exposed inlet thread
- 4. Screw 250mm Shower Head onto Shower Arm and tighten with Adjustable Spanner

TOOLS REQUIRED:

- 1. Thread Sealing Tape
- 2. Adjustable Spanner

WATER SUPPLY REQUIREMENTS:


To ensure optimum performance and customer satisfaction please adhere to the following:

- If the water pressure exceeds or is likely to exceed 500kPa, an approved pressure limiting valve must be fitted
- Flush out all pipe work prior to installation
- If the water temperature exceeds 50°C, an approved tempering valve must be fitted
- Installation should comply with Australian standard AS/NZS 3500 or relevant local authority requirements

CLEANING RECOMMENDATIONS:

We recommend the use of soapy water or approved cleaners. This product should not be cleaned with abrasive materials. Damage caused by any improper treatment is not covered by the product warranty. Refer to Warranty Conditions

1. Thread Sealing Tape

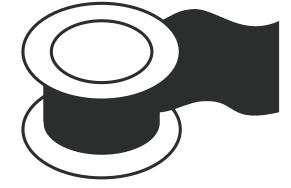

2. Adjustable Spanner

