


## Posh Solus Semi Recessed Basin 520mm x 430mm 1 Taphole

### INSTALLATION INSTRUCTIONS:

1. Cut out the bench top as per the template supplied
2. Fit selected tapware and waste to the basin
3. Apply waterproof sealant to rim of the basin
4. Position the basin complete with fittings onto the bench top and press firmly all around
5. Remove excess sealant

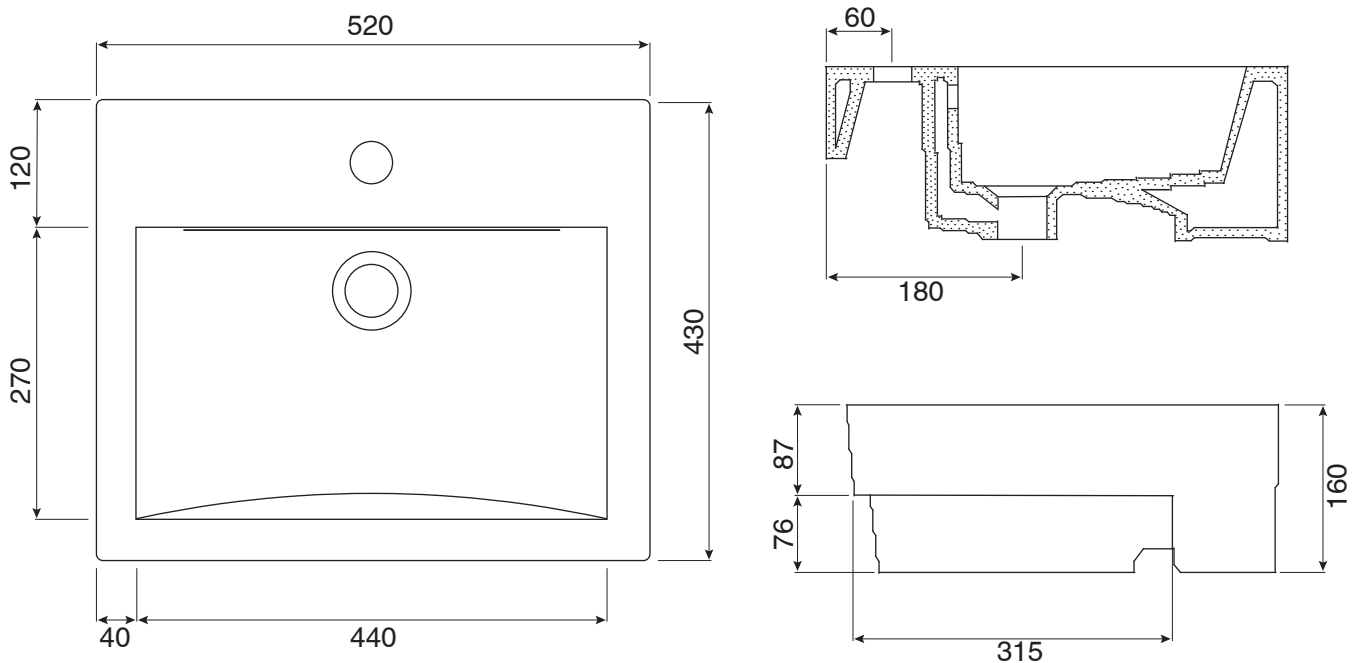

Dimensions are nominal measurements only.

**Plumbers, please ensure a copy of the Installation Instructions are left with the end user for future reference.**