

Posh Solus Under Counter Basin 530mm x 365mm No Taphole


INSTALLATION INSTRUCTIONS:

1. Cut out the bench top as per the template supplied

NOTE:

- If wall mounted tapware is to be used, consideration should be made to the length of the outlet and the positioning of the basin on the bench top
- If tapware is to be bench mounted allow suitable bench top width for fitting tapware

2. Fit the waste to the basin ensuring that it is siliconed right around the rim
3. Position the basin underneath the bench top and mark out the position of the fixing clips. Apply sealant to the rim of the basin and position underneath the bench top. Install securing clips and remove any excess sealant

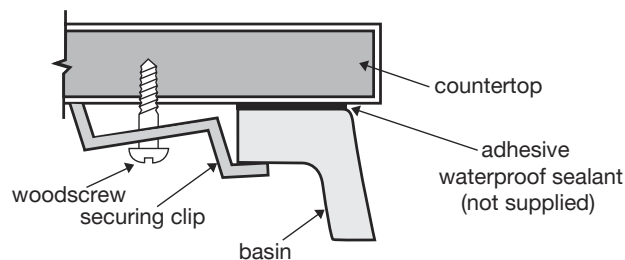


Method of fixing basin to wooden or similar countertop

NOTE:

- Do not use any epoxy/glues when installing this basin

4. Remove surplus sealant

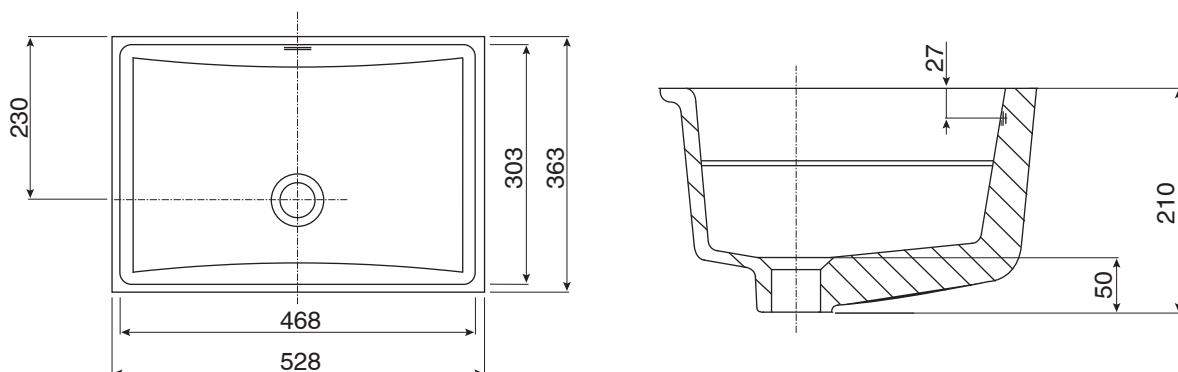

Dimensions are nominal measurements only.

Plumbers, please ensure a copy of the Installation Instructions are left with the end user for future reference.

Published 24/07/2020