



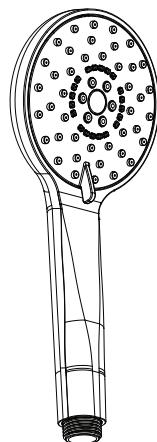

Bristol Mk2 Shower Handpiece Only (3 Star)

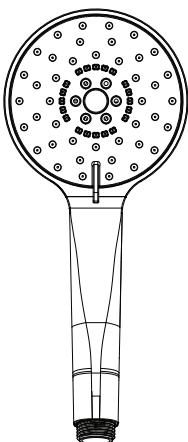

Shower Kit Installation



The Posh Bristol Shower Handpiece must be installed to the requirements of AS/NZS 3500.1 by a qualified plumber. It comes to you already factory assembled and tested. We do not recommend the dismantling of any internal part of the product. The Posh Bristol Shower Handpiece is tested and sealed so as to give the best performance.




When water pressure is in excess of 500kPa a pressure limiting device is required in accordance with 'AS/NZS 3500.1' recommendation.




This shower may not be suitable for use with gravity-fed water heaters, low and unequal pressure supply networks, instantaneous water heaters, tempering valves and thermostatic mixing valves.

Installation

1. Screw hand shower onto hose in clockwise direction.
Tighten sufficiently to achieve watertight seal.
If using wrench to tighten protect surface from possible damage.
Note: Do not use any thread sealant.
2. Once fitted tilt hand shower to correct position. Open water Turn on water supply and check for any leaks.
Note: Exercise care when installing to avoid damage to pre-fitted flow controller.



Flow Restrictor Pre-fitted

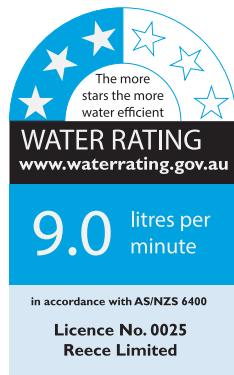

Care Details

We recommend the use of soapy water or approved cleaners. This product should not be cleaned with abrasive materials. Damage caused by any improper treatment is not covered by the product warranty - refer to Warranty Conditions at: www.reece.com.au.

Plumbers, please ensure a copy of the installation instruction is left with the end user for future reference.

