



Floor Mixer With Hand Shower


- 1** Ensure the Finished Tile Face falls within specified Adjustment Range

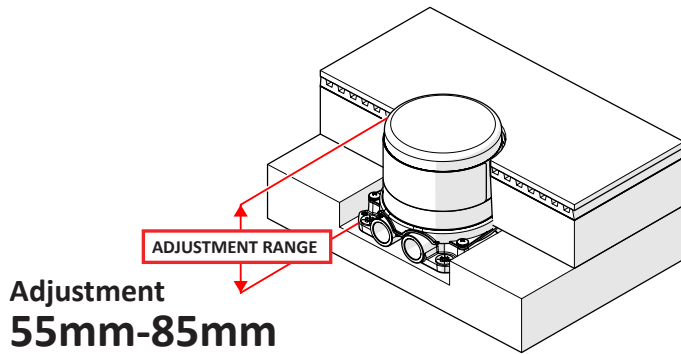


- 2** When installing Rough-in, keep in mind Mixer Outlet is positioned Perpendicular to the Hot & Cold inlets as seen in below diagram.

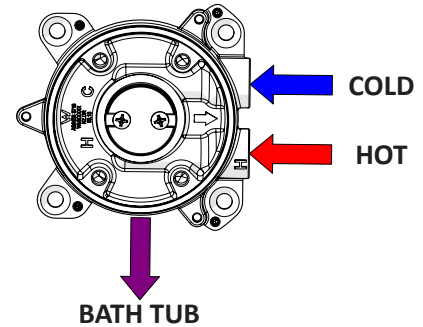


- 3** Mark and drill holes to secure the breach.

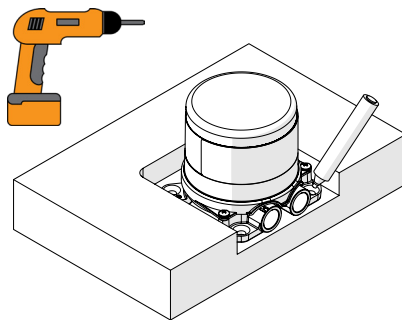

- 4** Use appropriate Fixings for Mounting. **Pressure Test** and check for leaks

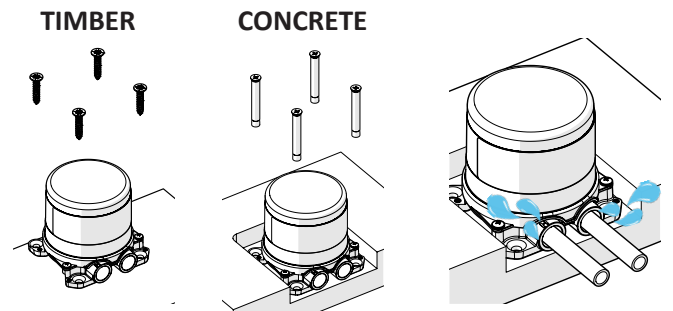


- 5** Screed up to waterproofing sleeve, apply waterproofing membrane and Tile.

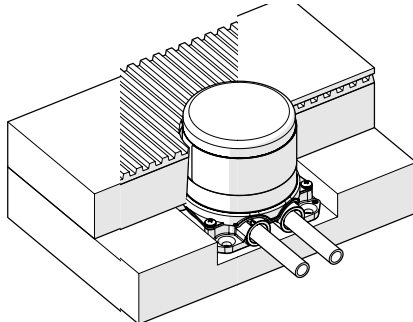


Hole Dimension
105mm


- 6** After Tiling use Knife to Trim Waterproofing Sleeve allowing 5mm to protrude above finished tile face.

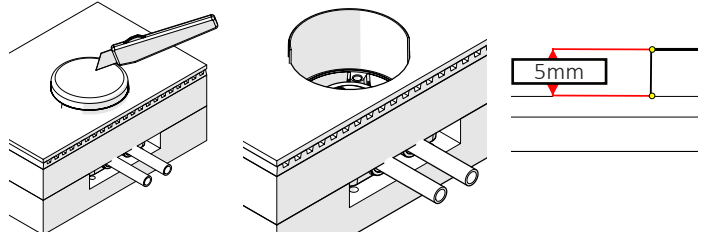

- 7** Use a Screwdriver to remove Screws as shown.

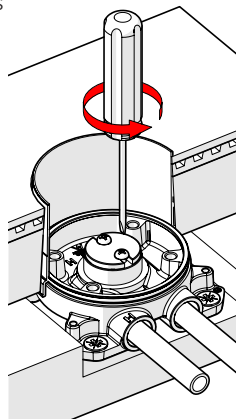

- 8** Remove Test Cap.

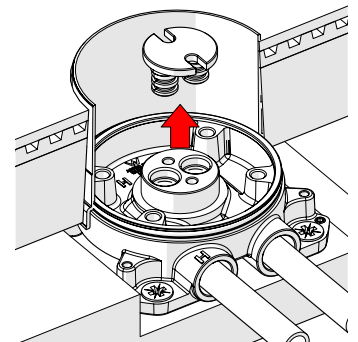

Care Details

We recommend the use of soapy water or approved cleaners. This product should not be cleaned with abrasive materials. Damage caused by any improper treatment is not covered by the product warranty. Refer to Warranty Conditions

Installation should comply with Australian standard AS3500.1 or relevant local authority requirements. Showers may not be suitable for use within:


- Gravity-fed water systems
- Some instantaneous hot water systems

Any flow controller incorporated in the outlet to be tightened to prevent removal by hand. As Per AS3718


Plumbers, please ensure a copy of the installation instruction is left with the end user for future reference.





- 9** Push Dress plate over mixer main tube. Install Tube Adaptor.

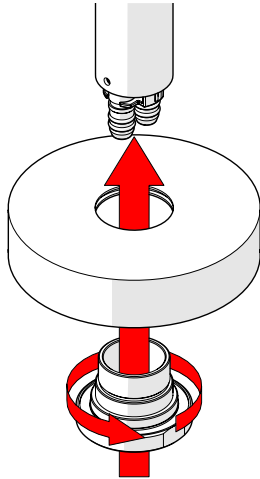

- 10** Slot Mounting plate over Tube Adaptor as shown.


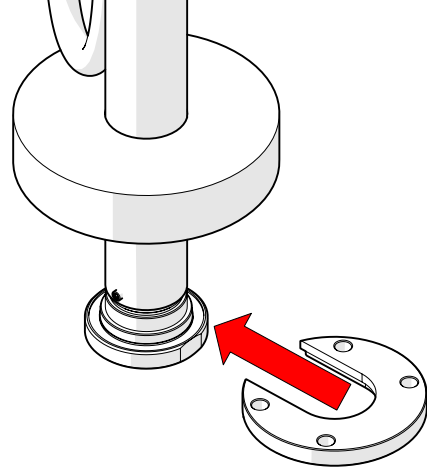


- 11** Install Mixer body to Rough-In. Ensure the copper hose extension with RED TAPE is installed into the "H" inlet.

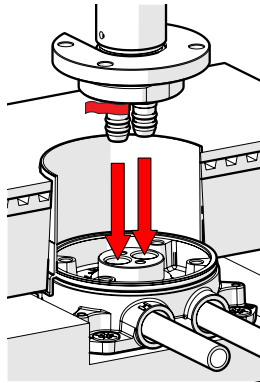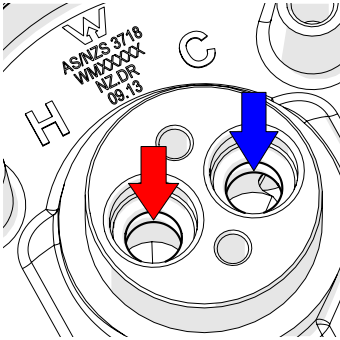


- 12** Use supplied allen key to fasten M6 bolts + Washers securing the Mounting Plate to the Rough in.


Once Mixer is in position.
Lock in place using grub screw.

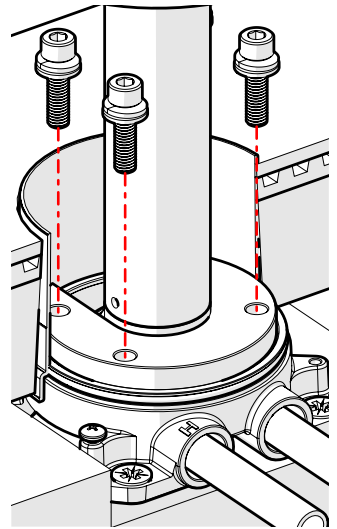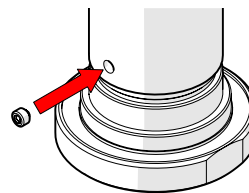

- 13** Push down dress plate until it is flush with Tile Face.

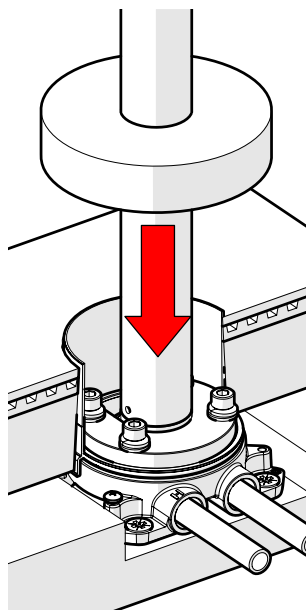


- 14** Install Shower hose to Body and Handpiece. Ensure restrictor and Mesh Washers are in the correct position as shown.

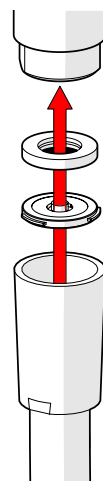

Using Supplied
Key remove
Aerator and
flush lines.

TEST AND
CHECK FOR
LEAKS.

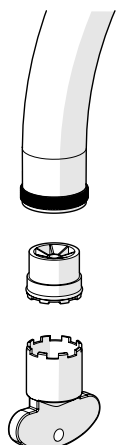

Care Details

We recommend the use of soapy water or approved cleaners. This product should not be cleaned with abrasive materials. Damage caused by any improper treatment is not covered by the product warranty. Refer to Warranty Conditions

Installation should comply with Australian standard AS3500.1 or relevant local authority requirements. Showers may not be suitable for use within:

- Gravity-fed water systems
- Some instantaneous hot water systems

Any flow controller incorporated in the outlet to be tightened to prevent removal by hand. As Per AS3718

Plumbers, please ensure a copy of the installation instruction is left with the end user for future reference.

