


Forma II Ceramic Under-Counter Vanity Basin

200mm 100mm 0
Scale

100mm
200mm

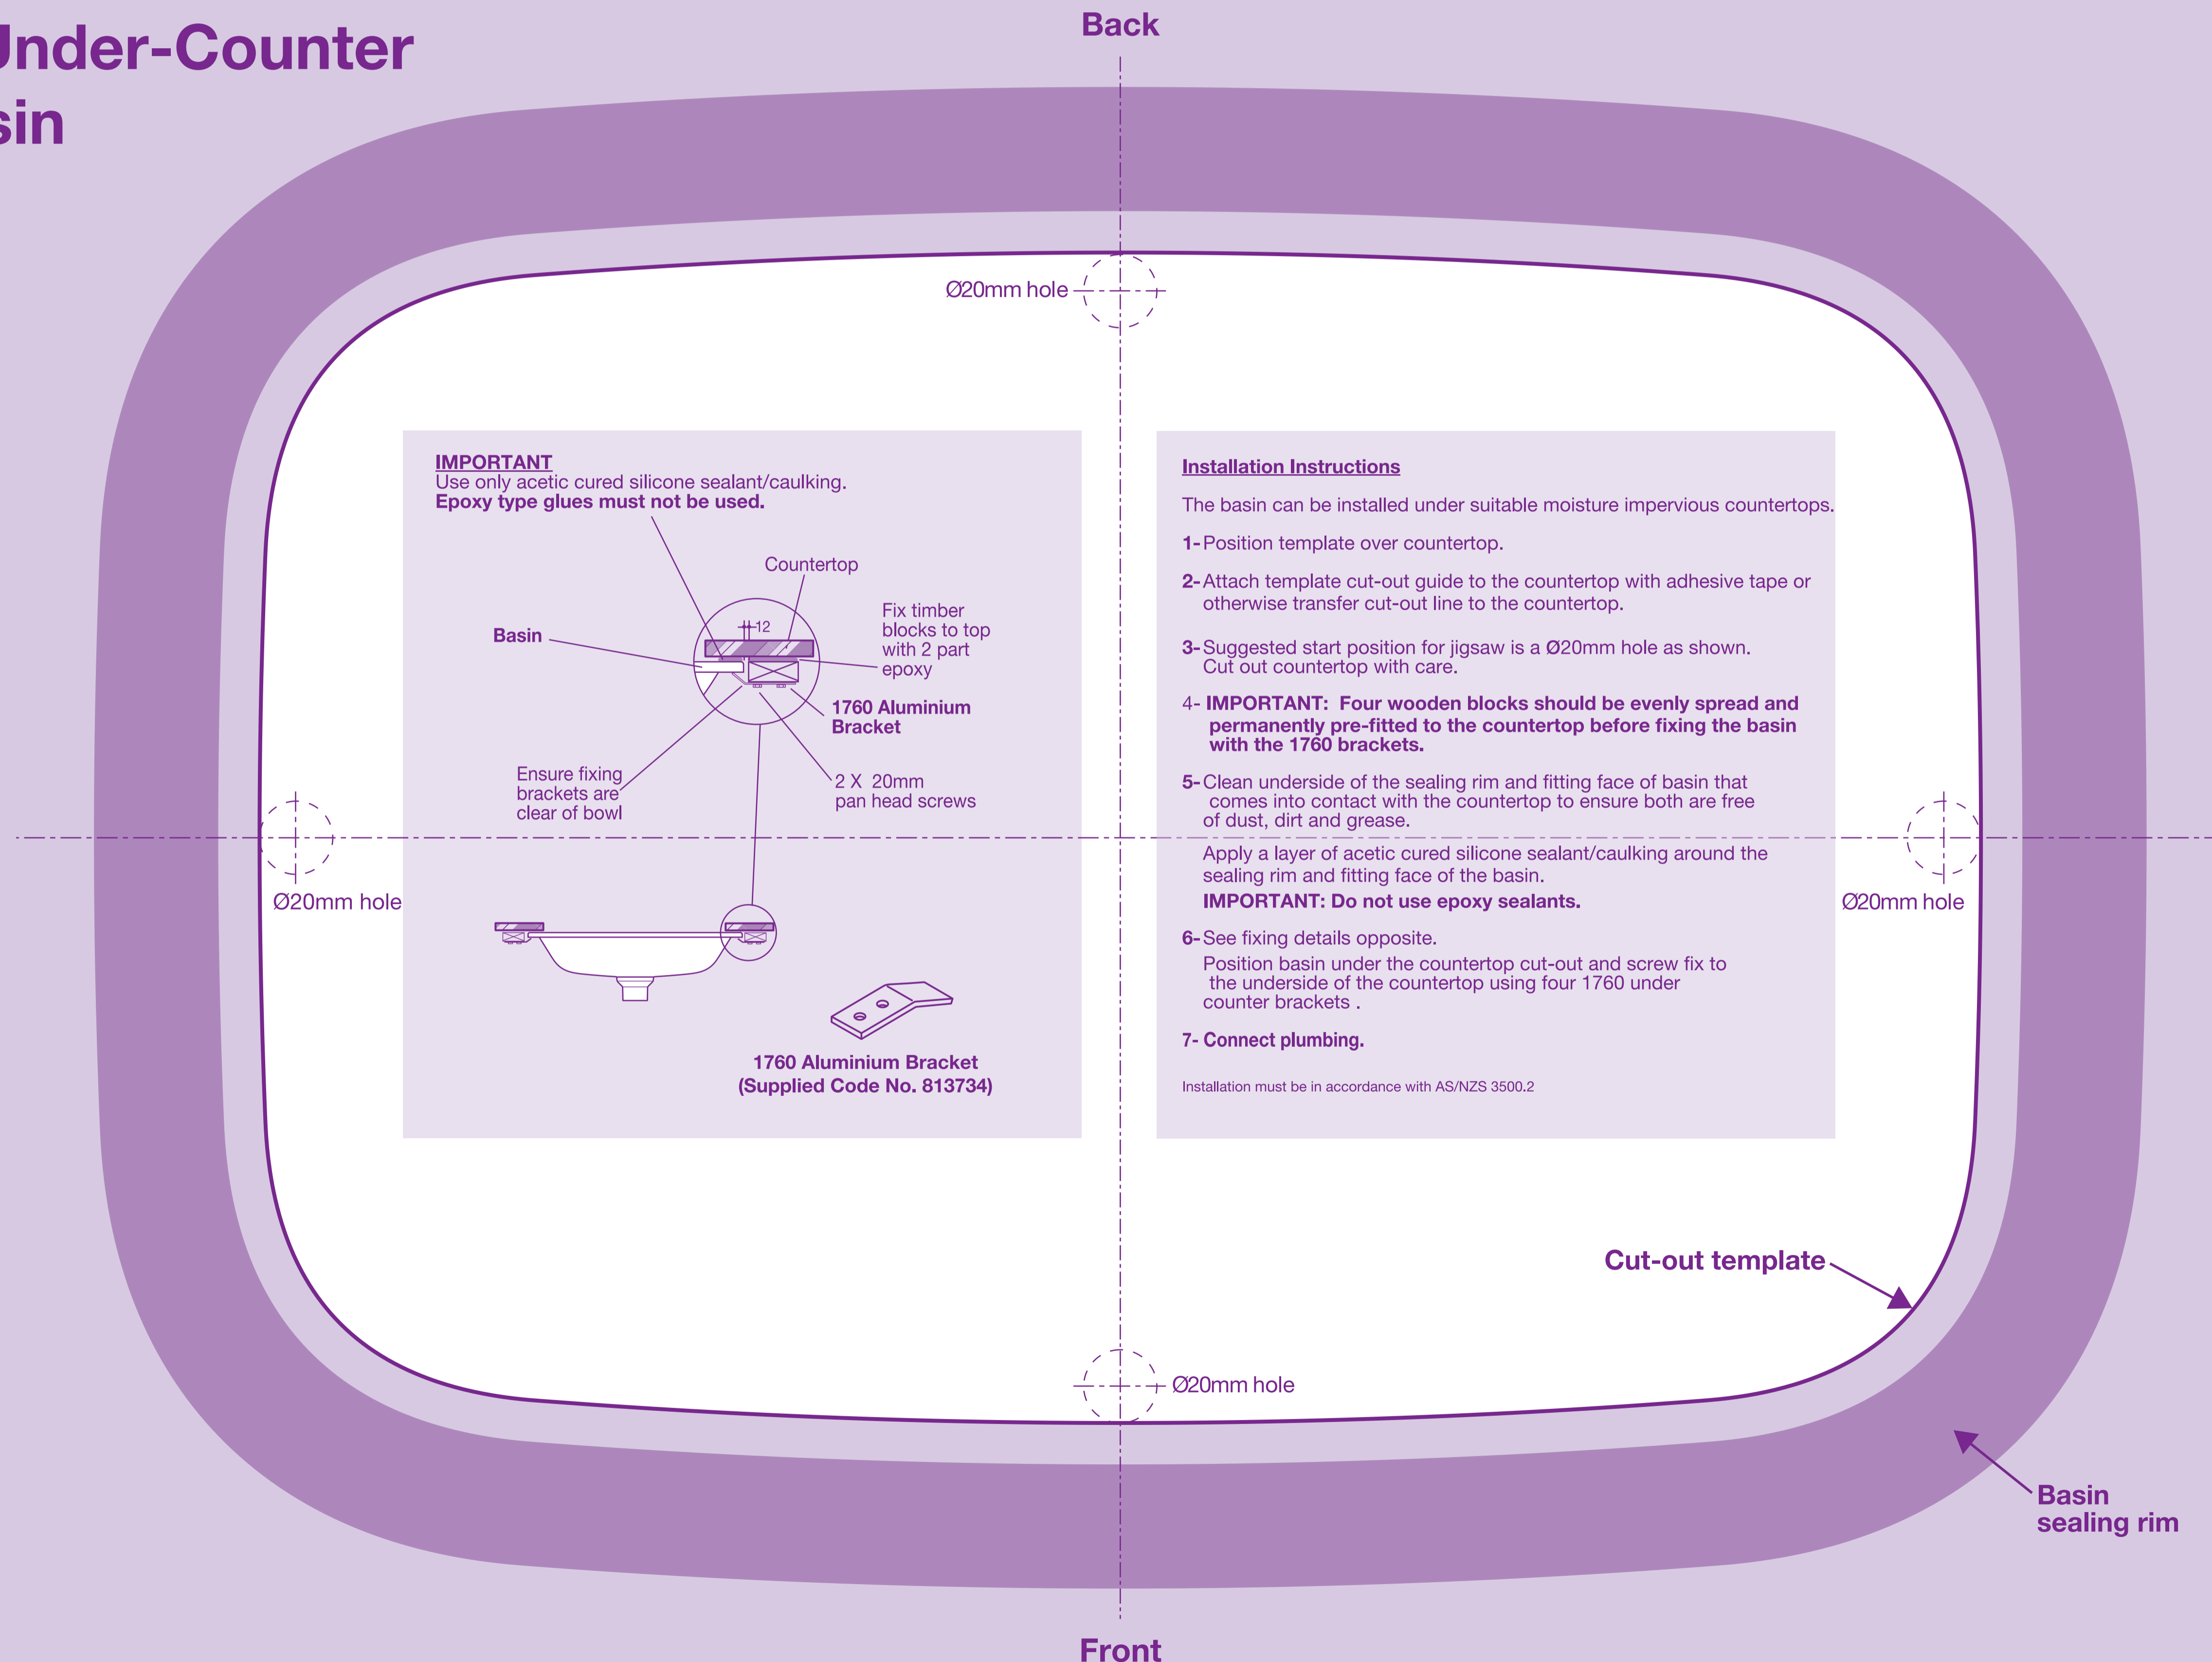

IMPORTANT
Use only acetic cured silicone sealant/caulking.
Epoxy type glues must not be used.

Countertop

Basin

Fix timber blocks to top with 2 part epoxy

1760 Aluminium Bracket

2 X 20mm pan head screws

Ensure fixing brackets are clear of bowl

12

1760 Aluminium Bracket
(Supplied Code No. 813734)

Installation Instructions

The basin can be installed under suitable moisture impervious countertops.

- 1- Position template over countertop.
- 2- Attach template cut-out guide to the countertop with adhesive tape or otherwise transfer cut-out line to the countertop.
- 3- Suggested start position for jigsaw is a Ø20mm hole as shown. Cut out countertop with care.
- 4- **IMPORTANT: Four wooden blocks should be evenly spread and permanently pre-fitted to the countertop before fixing the basin with the 1760 brackets.**
- 5- Clean underside of the sealing rim and fitting face of basin that comes into contact with the countertop to ensure both are free of dust, dirt and grease.
Apply a layer of acetic cured silicone sealant/caulking around the sealing rim and fitting face of the basin.
IMPORTANT: Do not use epoxy sealants.
- 6- See fixing details opposite.
Position basin under the countertop cut-out and screw fix to the underside of the countertop using four 1760 under counter brackets .
- 7- Connect plumbing.

Installation must be in accordance with AS/NZS 3500.2