



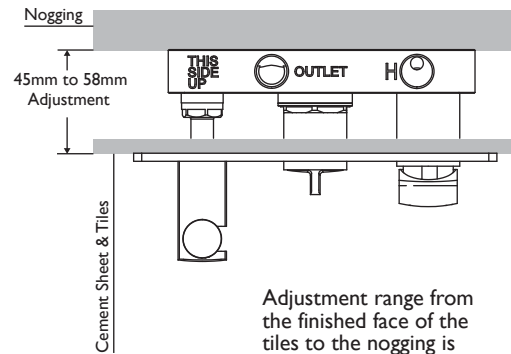

Milli Glance Wall Shower System (3 Star)

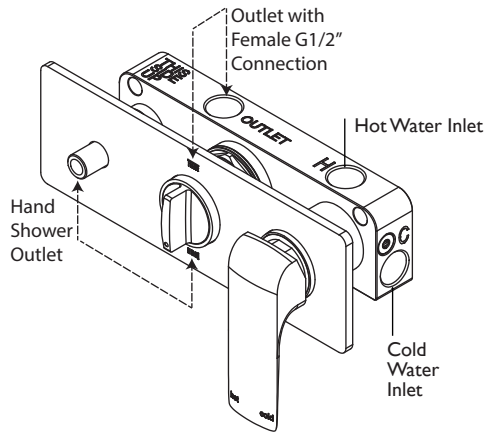

Adjustment range from the finished face of the tiles to the nogging is 45mm to 58mm, as shown.

- 1** Screw the mixer breach onto Nogging. Ensure that the mixer breach is level.
- 2** Connect hot and cold water supply, as shown.

Test and check for leaks.
- 3** Mark hole centre lines. Create a 30mm hole and two 50mm holes on the cement sheet and tiles, as shown.
- 4** Remove the protective covers and the outlet cap. Apply Teflon tape to Outlet Thread. Gently push the dress plate into position.
- 5** Screw the adaptor to Hand Shower Outlet with a spanner.

Push Hand Shower Bracket to the adaptor and fasten grub screws to secure the bracket.

Fit Mixer Handle into position and tighten Grub Screw to secure handle. Fit Screw Cap into position.
- 6** Make sure that rubber washers are installed into position.

Fasten the shower hose to the G1/2" thread on the bracket with a spanner.

Screw the hand piece to the shower hose firmly by hand.