


Posh Bristol Pin Bath Outlet 200mm Lead Free

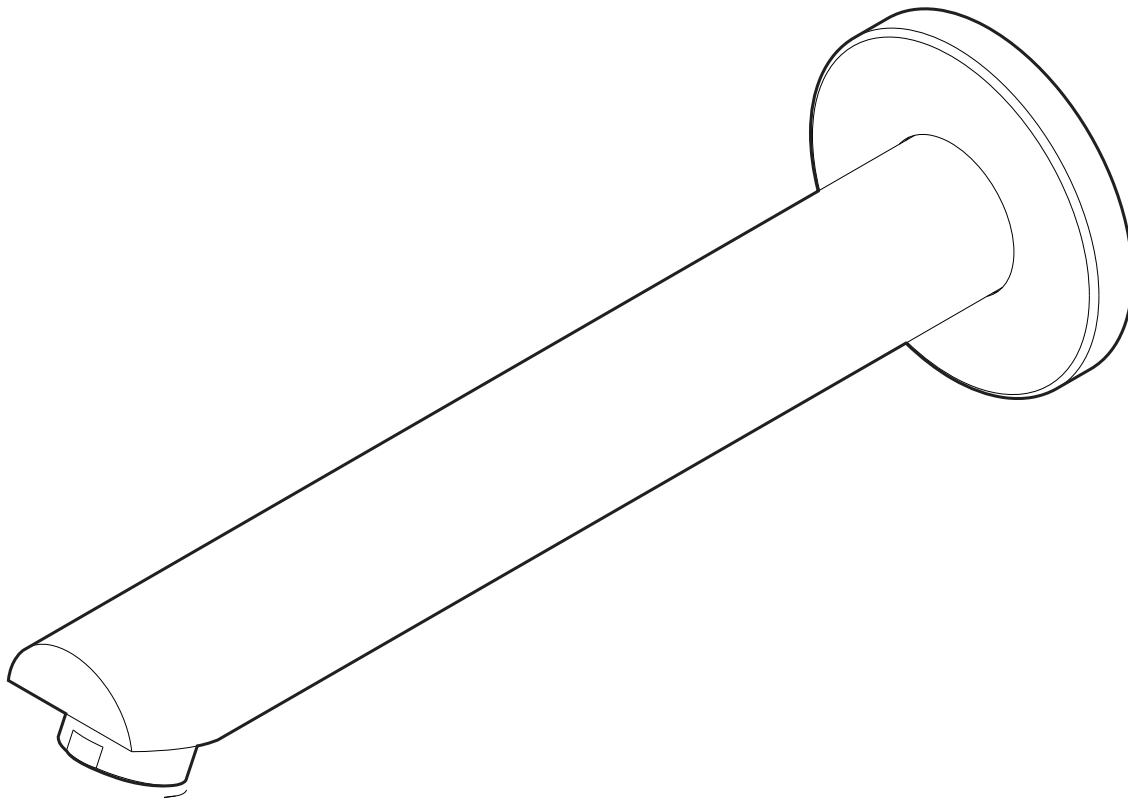

Installation Instructions



Outlets must be installed to the requirements of AS/NZS 3500 by a qualified plumber.



In compliance with the lead-free requirements of the National Construction Code Volume 3.



**Recommended pressure range
150 – 500KPa.**



**Max Continuous Working Pressure 1000 Kpa.
Max Continuous Working temperature 65 Deg.**



Clean with mild detergent or clear liquid cleansers. Wipe dry with a clean soft cloth.



Do not use steel wool or any abrasive cleansers.




**Avoid prolonged exposure to any chemical solution containing chlorides or acids.
Surface damage caused by acids will void warranty.**

Note: Ensure water supply lines are flushed prior to installation.

Posh Bristol Pin Bath Outlet 200mm Lead Free


Diagram

Posh Bristol Pin Bath Outlet 200mm Lead Free

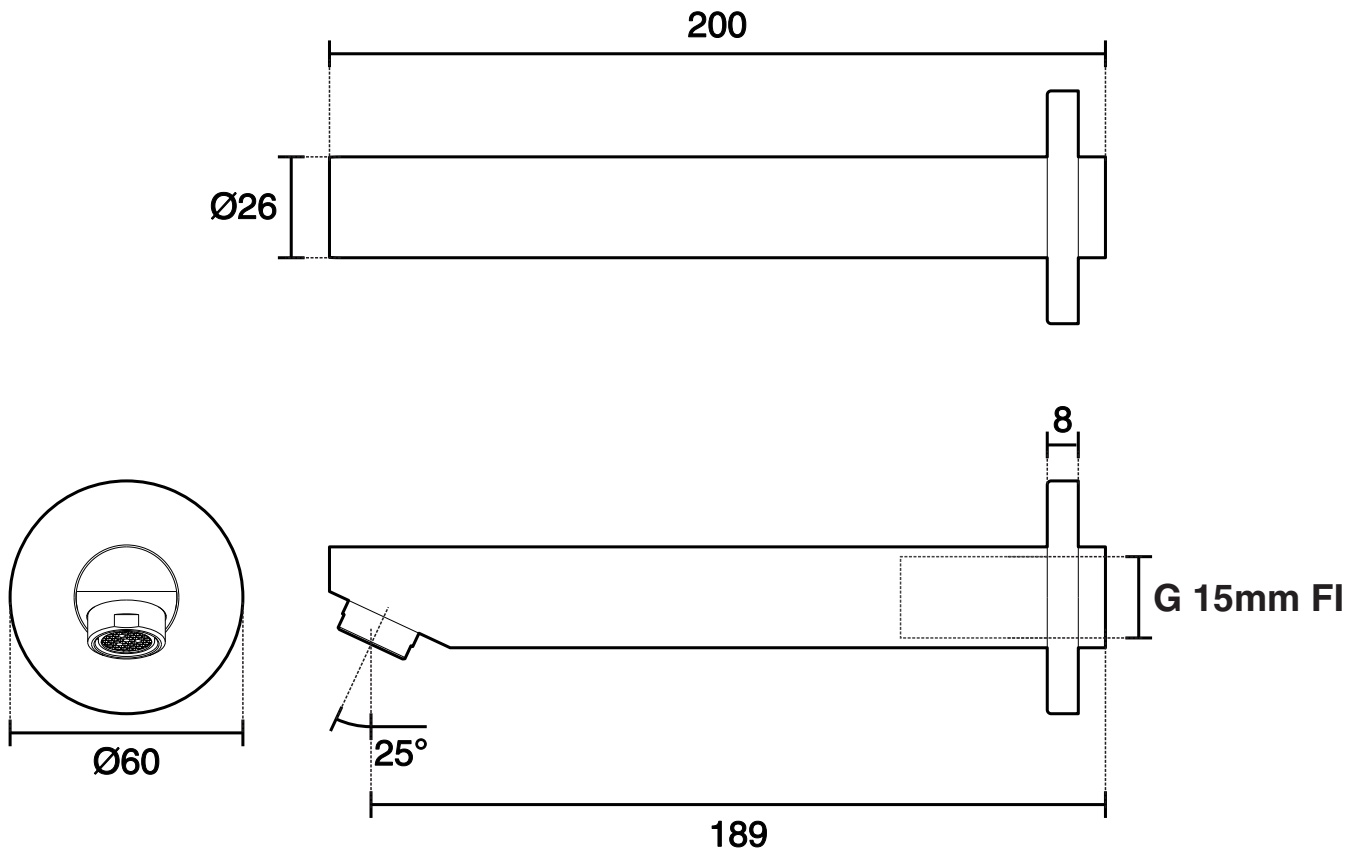

Installation


1. Ensure adequate threaded nipple (**A**) is exposed.
2. If required cut threaded nipple to length suit spout.

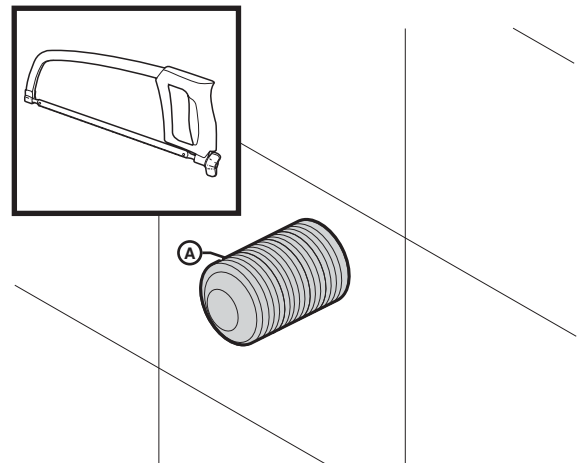



Posh Bristol Pin Bath Outlet 200mm Lead Free

Installation

3. Apply thread tape (B) to threaded nipple (A).

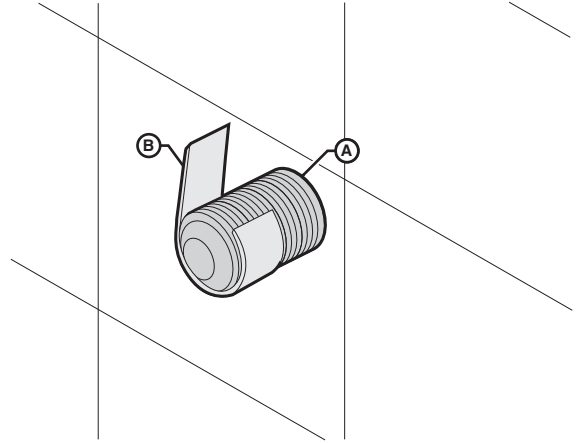

4. Screw on Outlet (C).
5. Do not over tighten.
- Note: Ensure spout is aligned correctly**
6. Turn on water supply and check for any leaks.

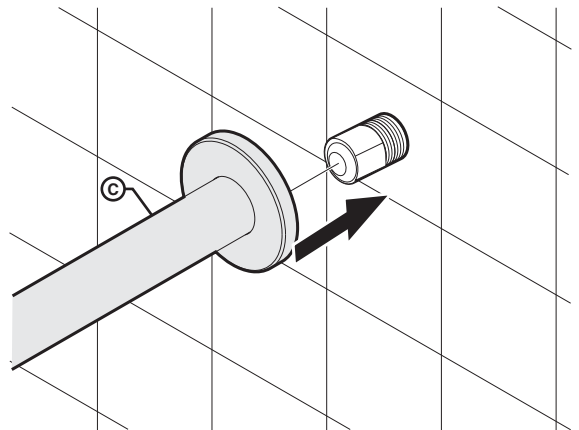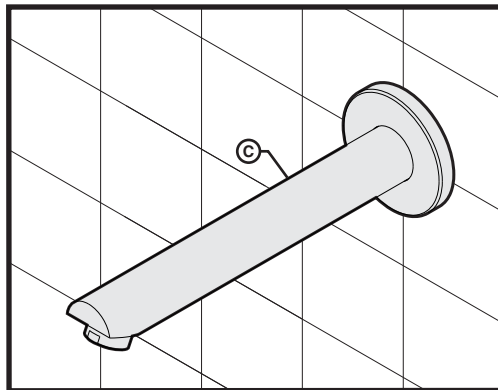

Care Details

We recommend the use of soapy water or approved cleaners. This product should not be cleaned with abrasive materials. Damage caused by any improper treatment is not covered by the product warranty - refer to Warranty Conditions on the last page.

Plumbers, please ensure a copy of the installation instruction is left with the end user for future reference.