

VENICE BOX FRAME MIRROR



The Venice box frame mirrors are the perfect accessory to finish off your bathroom design. The deep frame of the mirror offers additional elegant storage and display space and is designed to complement the Venice basins and vanities.

Designed and manufactured in Australia.

SPECIFICATIONS

Recommended Use	Domestic, Hotel and Commercial
Material	Mirror - 6mm Copper free Frame - Timber laminate on HMR board
Colour	Arlington Oak, Mali Wenge
Fixing	Bolted/screwed to wall by licensed trades person Supplied with easy to install battens Installer to determine appropriate wall fixings
Standards	Mirror AS/NZS 1288



To see the complete OMVIVO range go to www.reece.com.au/bathrooms


VARIATIONS	450	1000	1200
Width mm	450	1000	1200
Depth mm	120	120	120
Height mm	650	650	650

VENICE BOX FRAME MIRROR

BOX FRAME MIRROR OPTIONS




Arlington oak

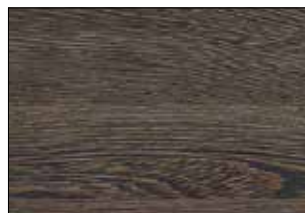


Mali wenge


450 Box Frame Mirror

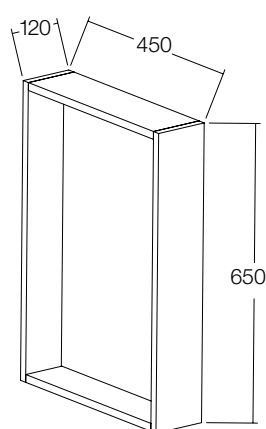

1000 Box Frame Mirror

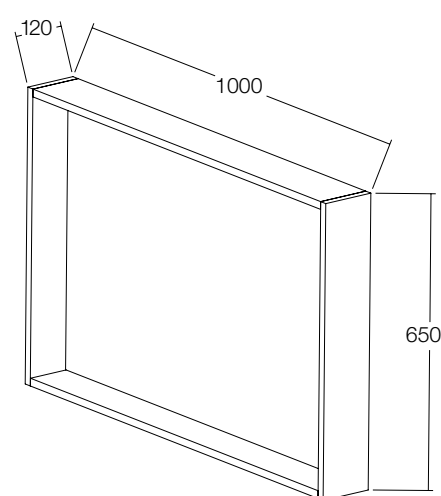

1200 Box Frame Mirror

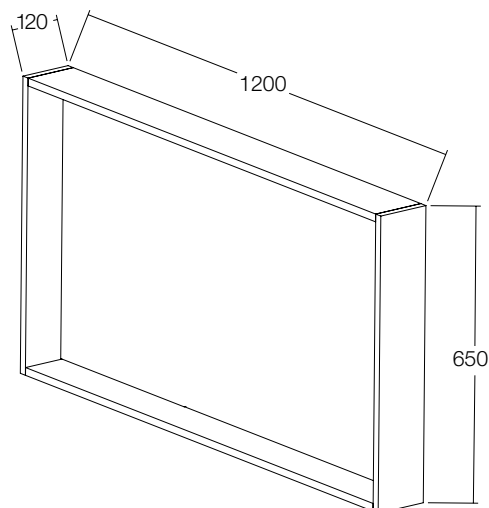

CLEANING RECOMMENDATIONS

Your furniture should be cleaned with a mild, non-acidic, non-abrasive detergent and soft cloth. Finish by cleaning off detergents with a soft slightly damp cloth and towel dry. Always clean spills and water immediately. It is important that the cleaning instructions for your solid surface basin are not carried out on the vanity as this will scratch the finish.

Damage caused by any improper treatment is not covered by the product warranty – refer to Warranty Conditions.

VENICE BOX FRAME MIRROR

VENICE BOX FRAME MIRROR INSTALLATION INSTRUCTIONS

NO claims for damages / defects will be recognised after installation.

Prior to installation it is important to unpack and inspect your products to ensure no damage has occurred in transit and that the product IS CORRECT.

If damage has occurred, or a visible defect exists, do not proceed with installation and contact supplier IMMEDIATELY.

Read all instructions beforehand. Pay particular attention to locations of plumbing, brackets and measuring up for these.

Step 1. Measure batten mount hole centres of top and bottom batten vertically.

- a. Lay mirror on its face being careful to protect from damage.
Temporarily assemble wall battens underneath receiving battens.
Measure vertical centre distances between mounting holes. See figure 1.
- b. Measure lower batten mount hole centre position to mirror bottom edge.

Step 2. Mark mirror position and hole locations on wall.

- a. Decide on mirror position. Mark bottom edge position on wall if necessary. Ensure it is level.
Measure up from this position to centre mount hole positions measured in Step 1.
Using wall battens as templates, mark hole positions in correct vertical and horizontal locations.
- b. Using appropriate fixings* secure battens to wall level and at correct spacings. See figure 2.

*It is the responsibility of the installer to select appropriate fixing materials.

Step 3. Hang mirror in position.

Figure 1.

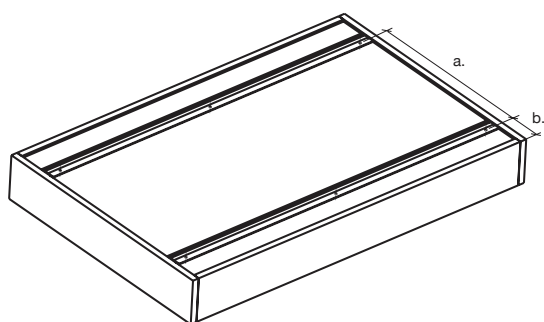


Figure 2.

