



Wall Mounted Telephone Bath Shower Sets Installation and Care Instructions

MAINTENANCE AND CARE:

- All surfaces should be cleaned with mild liquid detergent or soap and water.
- Do not use cream cleaners or citrus based cleaning products, as they are abrasive.
- Use of unsuitable cleaning agents may damage the surface. Any damage caused in this way will not be covered by warranty.





FOR THE PLUMBER:

1. All work should be carried out by a licensed Plumber. Responsibility will not be accepted for incorrect installation of this tapware, or any tapware not installed by a Registered Plumber.
2. The water supply lines need to be 'flushed out' prior to installation. This will avoid any foreign materials blocking the flow regulator, damaging the cartridge/valve and reducing the flow of water.
3. Install the tap assembly to the wall connection. Ensure it is connected to the correct water supply.
4. Ensure all connections are tight.
5. Turn on the main water supply and check for leaks.

PACKAGING INCLUDES

- 1 2 × Cover Plate
- 2 2 × Wall Body
- 3 2 × Olive Lock
- 4 2 × Nut
- 5 1 × Shower Cradle
- 6 1 × Outlet
- 7 1 × Shower Hose
- 8 1 × Telephone Shower

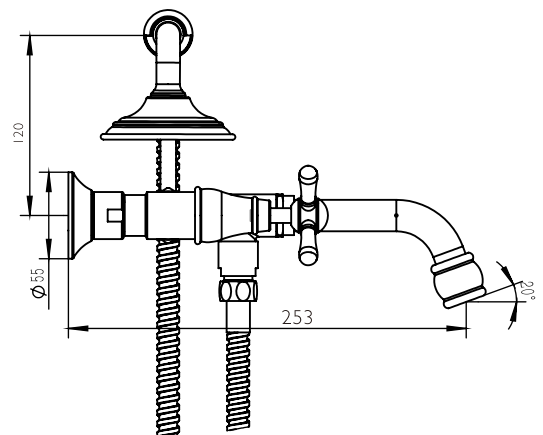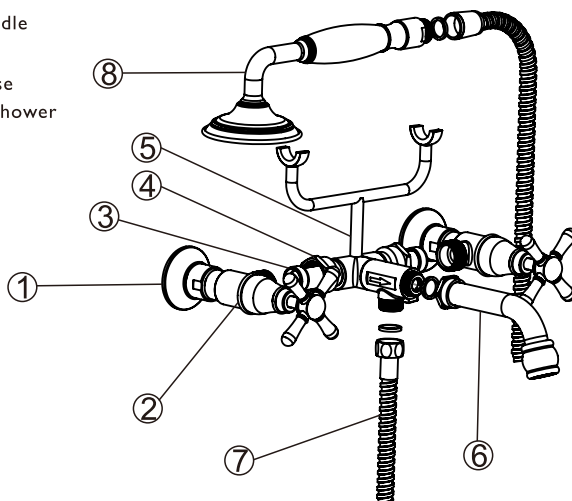

Plumbers, please ensure a copy of the installation instructions is left with the end user for future reference