

TASCA MIRRORED CABINET

WALL HUNG 500 / 750 / 900 / 1200 / 1500



SPECIFICATIONS

Recommended use Domestic / Multi Residential

Material: Glass mirrored doors

Interior finish: CIBO light grey 'Zincworks' moisture resistant (MR) MDF. Glass shelves.

Cabinet: Gloss white or black / matte white or black or a choice of six NAVurban finishes: Tablelands, Fremantle, Blackheath, Fitzroy, The Oaks & Yarra Walnut – see swatches below:



Dulux colours in gloss or matte finish available at an additional charge

Fixing requirement: Wall hung – a licensed (Plumber/Builder) installer is required

Dimensions:

- W500 x D140 x H900mm (1 door)
- W750 x D140 x H900mm (2 doors)
- W900 x D140 x H900mm (2 doors)
- W1200 x D140 x H900mm (3 doors)
- W1500 x D140 x H900mm (3 doors)

Mechanisms

- Soft closing door(s) with fingerpull handles
- Three (3) adjustable glass shelves
- Wall mountable onto timber stud or masonry walls (no set fixing points)

All dimensions are provided in millimetres and are subject to accepted manufacturing variations.

PRODUCT CARE & MAINTENANCE

It is the responsibility of the purchaser to ensure the product is installed and maintained appropriately.





Care must be taken when cleaning glass and mirror, we recommend clean, warm water used with a 'Micro' (soft, lint-free) cloth. Wring out all water before wiping glass and mirror. Dry immediately with a dry 'Micro' (soft, lint-free) cloth.

Do not use acid, alkali or abrasive cleaners (including commercial mirror cleaners that contain ammonia or vinegar) on the mirror surface. Care should be taken to avoid contacting mirror edges with any liquid.

Damage caused by any improper treatment is not covered by the product warranty - refer to Warranty Conditions on the last page.

TASCA MIRRORED CABINET

Side View - all cabinets

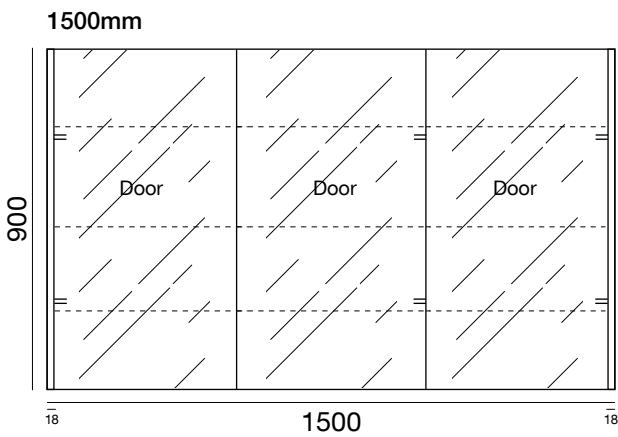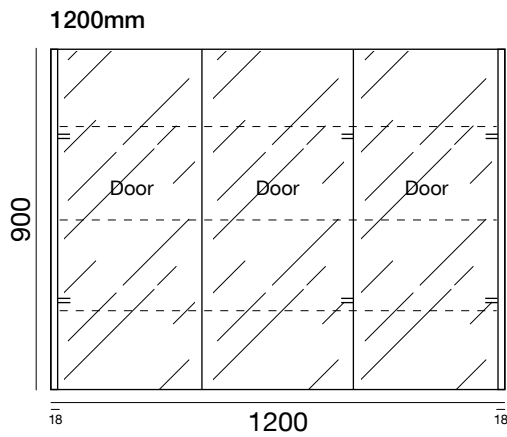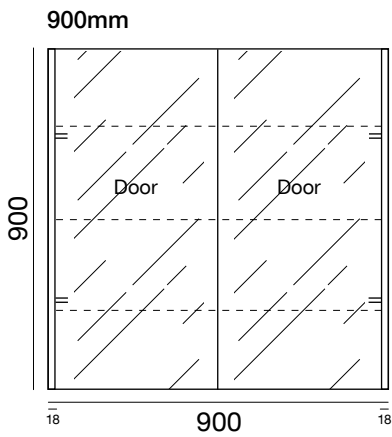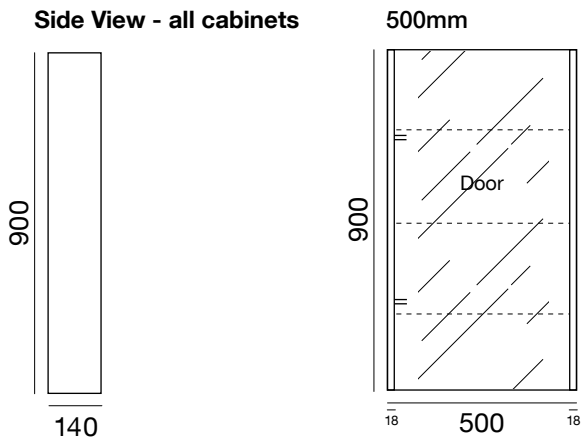

TASCA MIRRORED CABINET

INSTALLATION INSTRUCTIONS

PLEASE INSPECT YOUR CIBO PRODUCT ON DELIVERY (OR PICKUP), PRIOR TO INSTALLATION

CIBO Design's stringent quality control procedures ensure products leave our manufacturing facility in optimum condition.

A visual inspection must be made of the product on delivery (or pick up), by the person receiving it, prior to installation. Please pay careful attention when removing the wrapping materials. If the product has marks, chips or imperfections deemed unacceptable and/or has been damaged in transit, the product should not be installed.

Please contact place of purchase immediately, to advise of your concerns (prior to installation).

If the product has been installed CIBO Design will not accept responsibility or obligation to repair or supply a replacement product.

CIBO's detailed Product Installation, Care and Maintenance Guide can be downloaded at: www.cibodesign.com.au

MIRRORED CABINET INSTALLATION TIPS

1. Carefully remove doors
2. Remove shelves and place to one side
3. Determine placement of cabinet
4. Drill fixing holes through back of cabinet
5. Secure cabinet to wall (installer to determine appropriate fixings)
6. Replace shelves and doors
7. Once unit is lined up and secured we recommend sealing back and side edges with bathroom quality silicone

Go to www.cibodesign.com.au for detailed installation instructions

REMOVING/REPLACING DOOR(S)

During installation, it is advisable to remove doors (and drawers) from the cabinet. To do this you need to unclip all the hinges on each door.

To Remove Door:

Locate the front of the hinge and pull the hinge away from the side of the cabinet. Ensure that the door is supported so the door does not disengage from the cabinet and fall.

To Replace Door:

Line up the hinges with their corresponding hinge plates. At the base of the hinge there is a small metal rod that needs to be lined up with cradle arms of the hinge-plate. Once the hinge is in place, push the top of hinge down towards the hinge-plate. The hinge should engage by snapping down.

MIRROR CARE & MAINTENANCE

Care must be taken when cleaning glass and mirror, we recommend clean, warm water used with a 'Micro' (soft, lint-free) cloth. Wring out all water before wiping glass and mirror. Dry immediately with a dry 'Micro' (soft, lint-free) cloth. Do not use acid, alkali or abrasive cleaners (including commercial mirror cleaners that contain ammonia or vinegar) on the mirror surface. Care should be taken to avoid contacting mirror edges with any liquid.