

# SUSSEX

## Sussex Pure Progressive Sink Mixer Tap Set with Pull Out Spray (4 Star)

Tapware is to be installed by a Licenced Plumber in accordance with AS/NZS 3500:2003

Recommended working water pressure 300-500kpa.  
Maximum water temperature is 65 deg.C.

### Mounting Surface Requirements


- Outlet: 35mm Clearance Hole.
- Hob Mixer: 48mm - 50mm Clearance Hole.
- Minimum Distance between Outlet and Mixer is 100mm centre to centre.
- Maximum Mounting Surface thickness is 40mm.
- Mounting Surface must be flat and level.
- Ensure adequate space under the bench for the Pull-Out Hose and Weights to sit free from obstruction. Failing to do so will affect the performance of the Pull-Out function.

### Outlet

- Remove Weights from the Hose.
- Remove the Clamp Locknut and Clamping Ring from the Flange.
- Pass the Pull-Out Hose with the Dual Check Valve (DCV) fitting attached through the Mounting Surface.
- Working from underneath, fit the Clamping Ring and Clamp Locknut to the Flange.
- Wind the Locknut as far as possible, then using a 5mm Allen Key tighten the 4 Jacking Screws to secure the Outlet (tighten well).
- Re-attach the Weights to the Pull-Out Hose.
- Note: The Weights must always be suspended and never resting on any surface.

### Hob Mixer (Progressive)

- Prior to installing remove the Clamping Plate and Ring. The Flexible Tales are labelled and are factory fitted, there is no need to remove from Mixer Body.
- Apply a small amount of Sealant to the under side of the Hob Mixer Flange to seal the Mounting Surface.
- Lower the Hob Mixer through the Mounting Surface.
- Note: The "FRONT" label must be positioned to face the user.
- Working from underneath, fit the Clamping Ring over the Mixer Body. Align and secure the Clamping Plate to the Mixer Body by tightening the 4 Screws (4mm Allen Key).
- Secure the Mixer to the Mounting Surface by tightening the 2 Jacking Screws using a 5mm Allen Key (tighten well).
- Fix the Hot and Cold Hoses to 1/2" BSP Water Connections.
- Note: Stop Cocks are recommended.
- Attach the "MIXED WATER HOSE" to the DCV.
- Once all connections are made allow Water Flow and check function of the Mixer.
- Check for leaks.

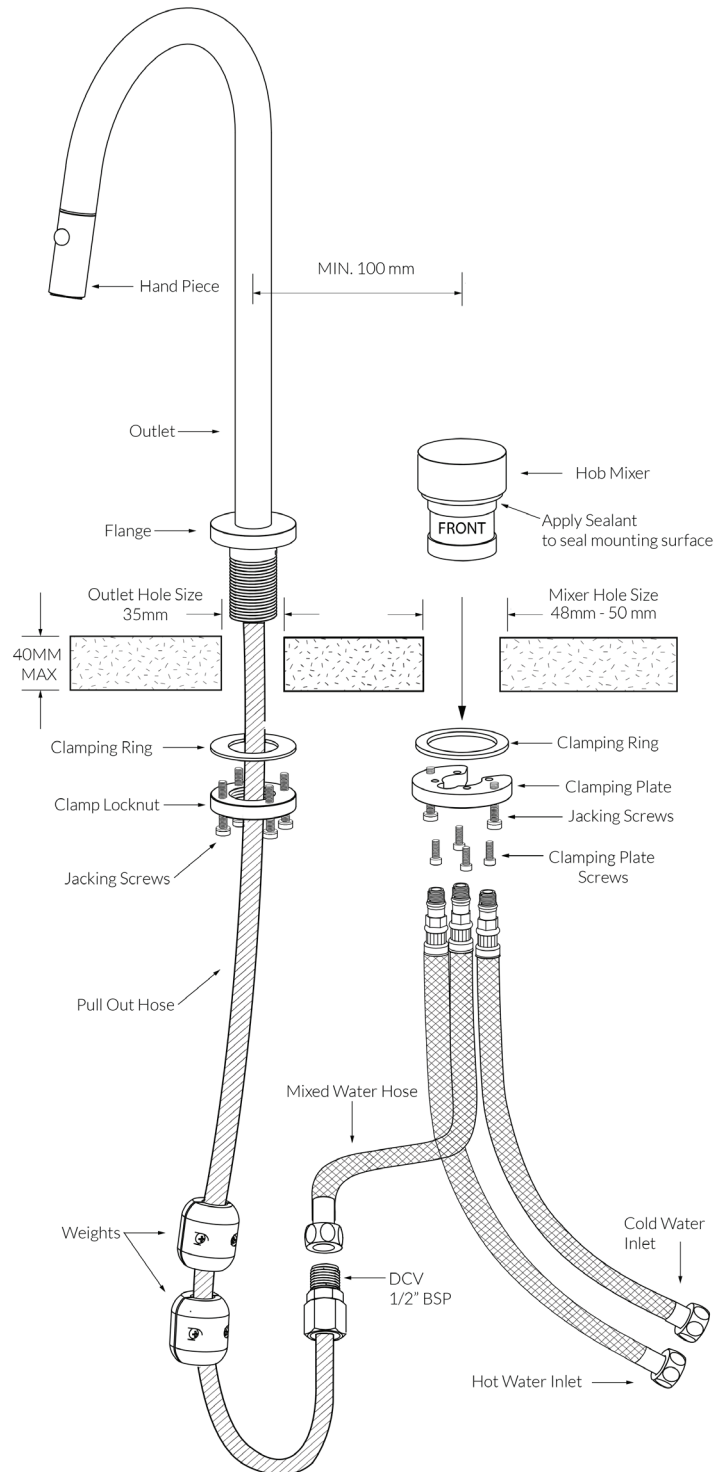

Plumbers, please ensure a copy of the Installation Instructions are left with the end user for future reference