


Drift Dial Wall Basin/Wall Bath Mixer 2PC (6 Star) Lead Free



Installation Instructions

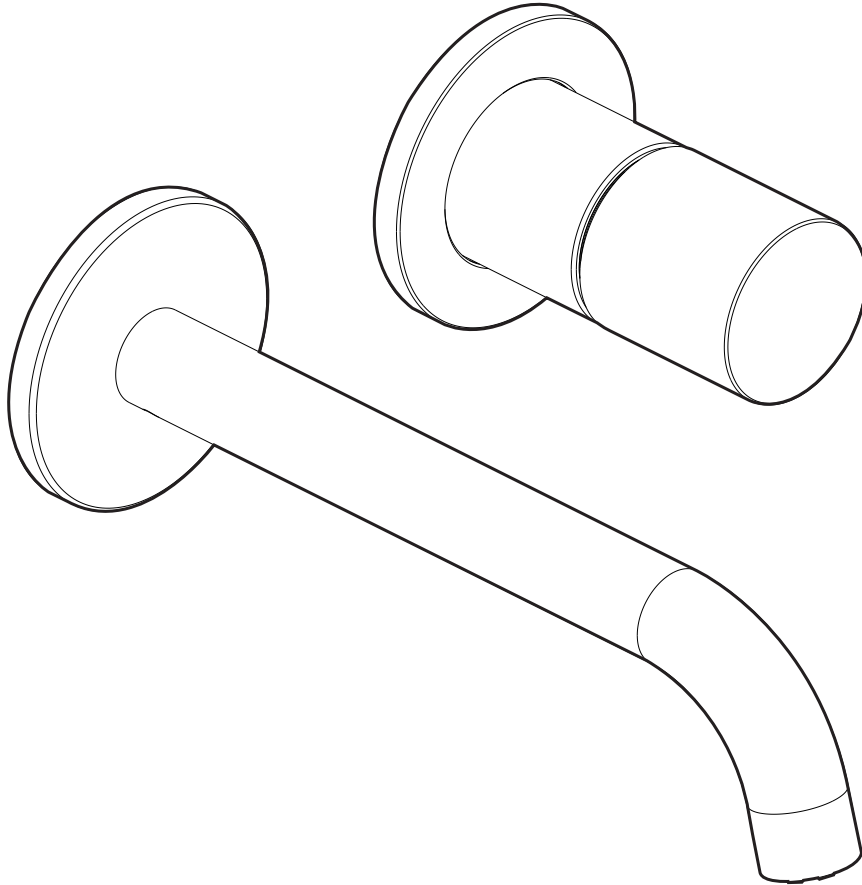

Mixer must be installed to the requirements of AS/NZS 3500 by a qualified plumber. Your mixer comes to you already factory assembled and tested. We do not recommend the dismantling of any internal part of the mixer. The mixers are factory tested and sealed so as to give the best performance.



In compliance with the Lead Free requirements of the National Construction Code Volume 3.



Recommended pressure range
150 – 500KPa.



Max Continuous Working Pressure 1000 Kpa.
Max Continuous Working temperature 65 Deg.



Avoid prolonged exposure to any chemical solution containing chlorides or acids. Surface damage caused by acids will void warranty. Do not use steel wool or any abrasive cleansers. Clean with mild detergent or clear liquid cleansers. Wipe dry with a clean soft cloth.

mizu

Drift Dial Wall Basin/Wall Bath Mixer 2PC (6 Star) Lead Free

Installation



Flush out new pipe work prior to connecting the new mixer.



During installation, protect the exposed surface finish by using the plastic covers provided.




In a typical installation, the mixer is mounted on a timber/metal noggin and secured using suitable screws through the mounting lugs.




Waterproofing and sealant materials are used to seal against moisture or water penetration to ensure integrity of the wall sheet lining structure. It must not interfere with the removal of the protective cover and installation of the mixer trim components. The installing plumber is responsible for waterproofing the shower mixer penetration AS 3740 - Waterproofing of Domestic Wet Areas.

Note: This tap is suitable for applications where both hot and cold water supply pressures are at 150kPa - 500kPa.

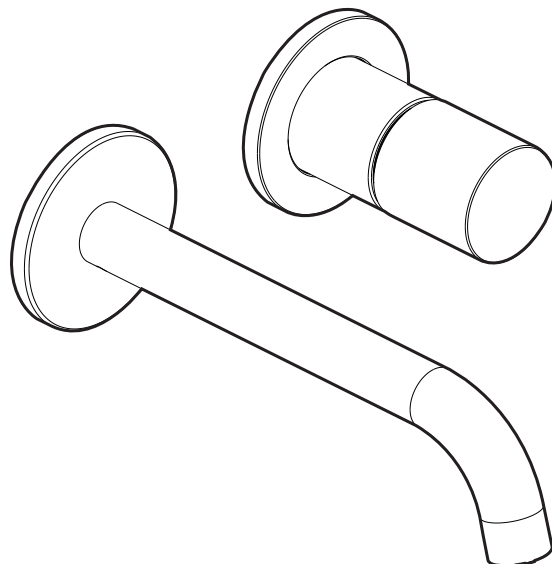

Waterproofing / sealant materials must be clear of the Protective Cover (B) and the surface it protects (A) to allow for removal of the protective cover and mixer trim set for fit off.



Note: Ensure mixer body is level both vertically and horizontally.

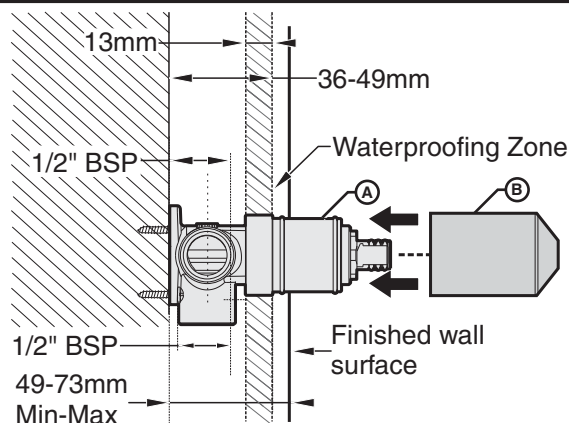

1. Connect Mixer (A) to hot and cold Water Supply (C).
2. Connect shower pipework to the top outlet.
3. Pressure check all connections.





Leaking joints are not covered by the warranty.

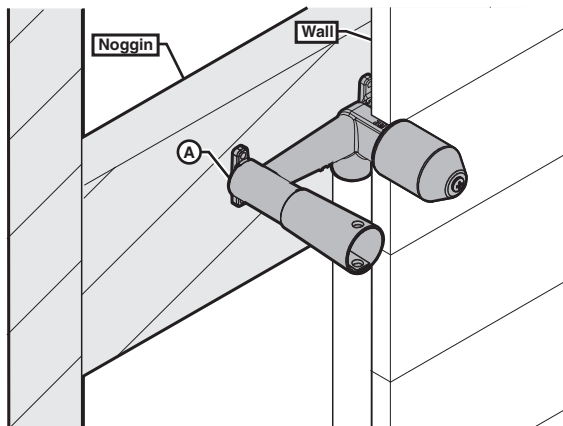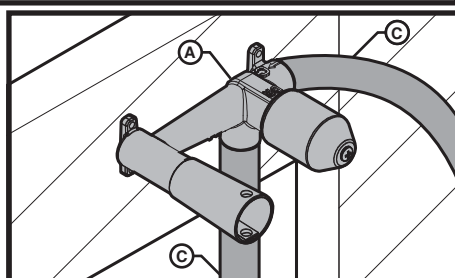



mizu

Drift Dial Wall Basin/Wall Bath Mixer 2PC (6 Star) Lead Free

1. When the wall is finished (eg. tiled), remove the protective covers (B).

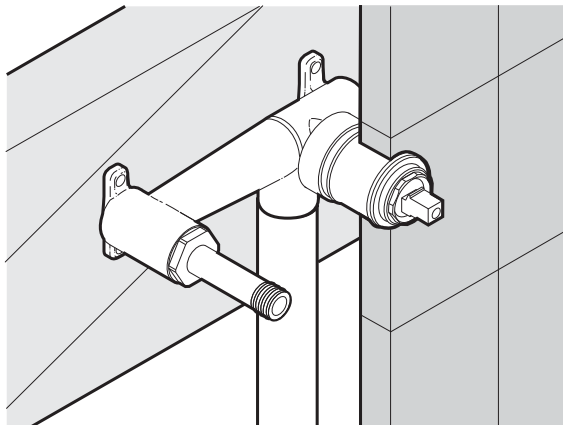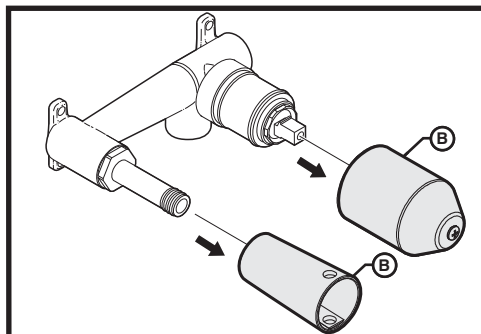


2. Fit the Basin or Bath Mixer Trim Set to finished wall.

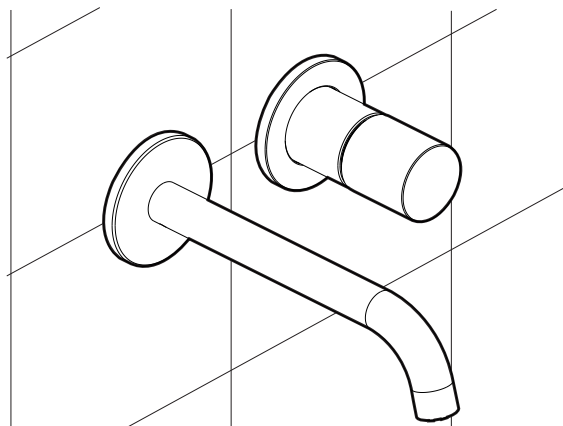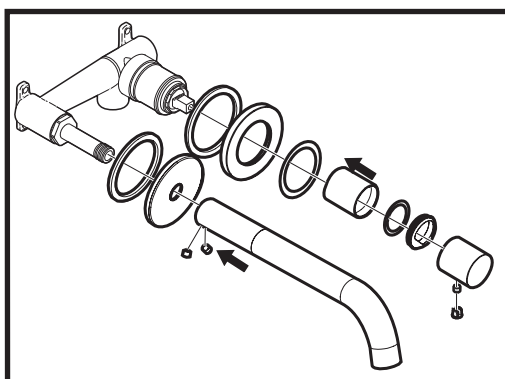

Servicing - Replacement of Cartridge

1. Remove Decorative Cover (D) and unscrew the Grub Screw (E) using an allen key.
2. Lift off the Handle (F) and remove the Cartridge Dome (G), Outlet (H) and unscrew the Brass Locking Nut (I).
3. Remove Cartridge Sleeve (J) and Back Plate (K).
4. Lift out the Cartridge (L).
5. Re-fit the Cartridge (M), Cartridge Sleeve (J), Back Plate (K), Locking Nut (I), Cartridge Dome (G), Outlet (H) and Handle (F).
6. Tighten Grub Screw (E) and push in Decorative Cover (D).

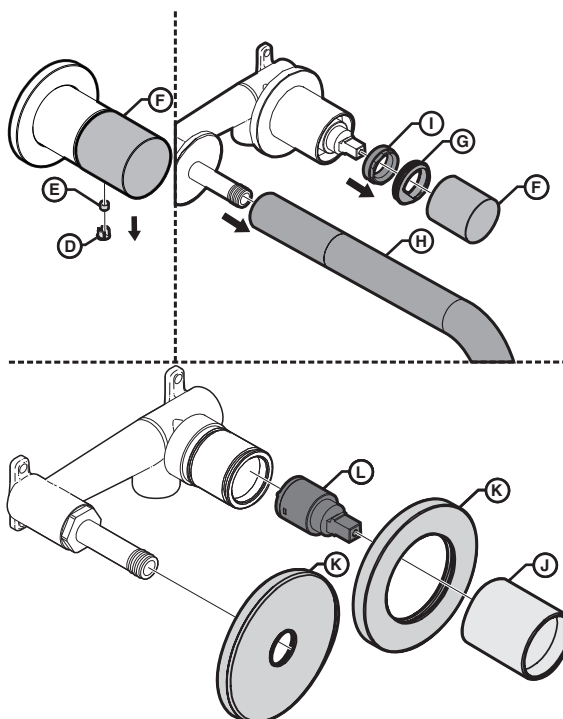


Drift Dial Wall Basin/Wall Bath Mixer 2PC (6 Star) Lead Free

Replacement of Trim Set

The Mizu Universal Inwall Body is an innovative installation system that allows for separation of the inwall body from the trim set kit. Once the Universal Inwall Body is installed, the retrofittable trim set kit can be updated to another choice of finish from the Mizu Drift range or a design and finish from the other Mizu ranges.

1. Remove Decorative Cover (D) and unscrew the Grub Screws (E) using Allen Key.
2. Lift off the Mixer Handle (F) and Outlet (I).
3. Remove Cartridge Dome (G) and Cartridge Sleeve (J).
4. Remove mixer Backplate Set (K).
5. Reassemble trim set from desired range.

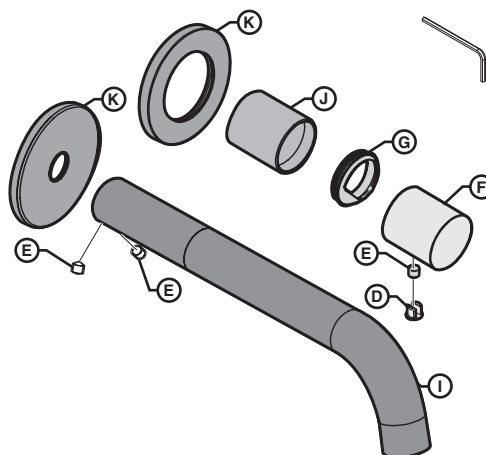


Alternate Aerator

Note: Basin Outlet is pre-fitted with a 6 Star rated WELS Aerator. For Bath applications, Outlet Aerator must be changed to the supplied Bath Aerator packaged in the box.

1. To remove Basin Aerator use coin shaped object or flat head screwdriver to remove from Outlet (I).
2. To fit or remove Bath Aerator (M) use key (L) supplied.
3. Test and check for leaks.



Leaking joints are not covered by the warranty.

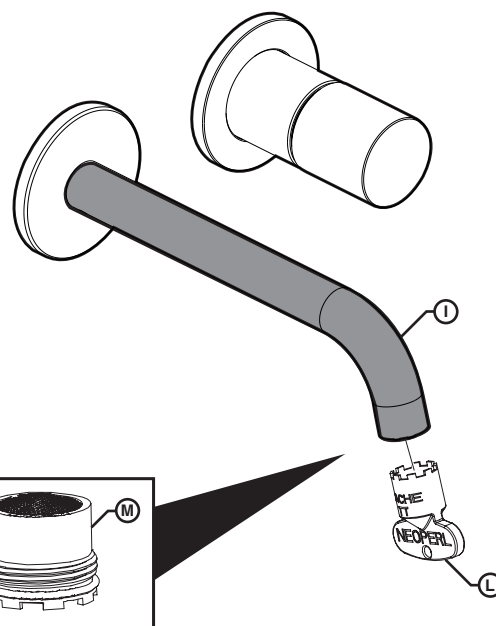

Care Details

We recommend the use of soapy water or approved cleaners. This product should not be cleaned with abrasive materials. Damage caused by any improper treatment is not covered by the product warranty - refer to Warranty Conditions at: <https://www.reece.com.au>

Plumbers, please ensure a copy of the installation instruction is left with the end user for future reference.