

Solus Pull Out Sink Mixer (4 Star)



Installation Instructions



Mixer must be installed to the requirements of AS/NZS 3500 by a qualified plumber. Your mixer comes to you already factory assembled and tested. We do not recommend the dismantling of any internal part of the mixer. The mixers are factory tested and sealed so as to give the best performance.



Avoid prolonged exposure to any chemical solution containing chlorides or acids. Surface damage caused by acids will void warranty.



Do not use steel wool or any abrasive cleansers.



Clean with mild detergent or clear liquid cleansers. Wipe dry with a clean soft cloth.



All mixers should be installed with isolating stop cocks.



Flush out new pipe work prior to connecting the new mixer.

Note: This tap is suitable for high pressure applications where both hot and cold water supply pressures are at 150kpa or above.

- 1. Flush out new pipe work prior to connecting the new mixer, fit with isolating stops on both hot and cold supply.
- 2. Place Dress Ring and Washer (14 & 15) at base of Mixer Body (13).
- 3. If fitting onto a stainless steel sink, fit the Support Plate (16) first. Position mixer over tap hole. Push the Flex Hoses (24 & 25) through tap hole one at a time. Then feed through flexible hose connector (26). Finally, feed the Pull Out Hose (23) through the Rubber and Metal Washers (19 & 20) from fixing kit.
- 4. Take Metal Fixing Nut (21) from the fixing kit and feed through Flex Hoses (24 & 25) and Pull Out Hose (23).
- 5. From above, align mixer into final position. From underneath, fully tighten the Metal Fixing Nut (21) onto Threaded Shank (17) until tight and mixer is firmly secured into final position. Once fully tightened, lock into position with the two screws (22) on the nut.
- **6.** From underneath, screw flexi tail nuts onto corresponding hot and cold isolation stops until watertight seal is achieved. Refer to below for precautions. Turn on water supply from isolation stops and check for leaks.
- 7. From underneath, screw push fit adaptor coupling (27) onto pre-fitted connector hose (26). Then push the end of the Pull Out Hose (23) into Quick Push Fit Connector Coupling (27) and click into position. To release, push the connector tab (28) in at same time as pulling down on the Pull Out Hose (23).
- 8. Take Hose Counterweight (12) and unclip. From underneath, with the Pull Out Hose (23) in fully retracted position, clip the counterweight around the Pull Out Hose. Check the Pull Out Hose by pulling in and out to ensure smooth operation. Minor adjustments can be made by repositioning the weight.
- **9.** Turn on mixer and check for and leaks on any connections, ensuring the mixer is operating correctly in both normal and spray pattern mode.


NOTE: Do not over tighten hose tail into the mixer. Do not stretch the flexi hoses.

Do not twist hose braiding to tighten hoses. Do not excessively bend hoses.

Do not use Teflon tape or thread locking compound on any of the threaded connections.




Solus Pull Out Sink Mixer (4 Star)

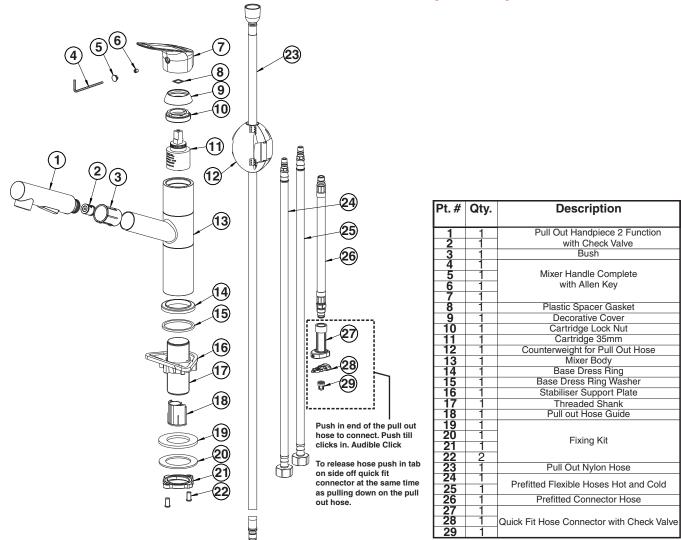

Cartridge Replacement

- Remove Decorative Cover from Handle then unscrew grub screw using allen key.
- 2. Lift off Mixer Handle and remove Cartridge Dome. Unscrew Lock Nut.
- 3. Remove the old mixer cartridge and replace with a new unit.

To re-assemble, follow above steps in reverse.

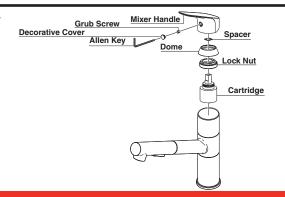

Care Details

We recommend the use of soapy water or approved cleaners. This product should not be cleaned with abrasive materials. Damage caused by any improper treatment is not covered by the product warranty. Refer to Warranty Conditions

Plumbers, please ensure a copy of the installation instruction is left with the end user for future reference.

