
mız U

STREAM BASIN MIXER BRUSHED NICKEL



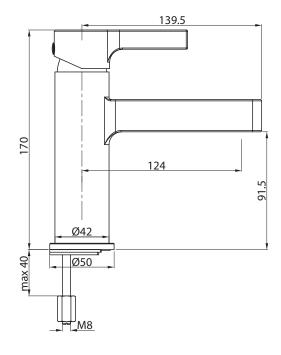

Dimensions are nominal measurements only.

SPECIFICATIONS		
Recommended Use	Domestic, Hotel & Commercial	
Colour	Chrome, Matte Black or Brushed Nickel	
Pressure Rating	Maximum continuous operating pressure1000kPa.	
	Note: As per AS/NZS3500 pressure must be limited to 500kPa on any new home, extension or renovation.	
	Note: For best performance and longer life we recommend an operating pressure between 150 - 500kPa.	
Temperature Rating	Maximum Continuous Working Temperature	65°C
Suitable Hot Water Units	Storage Tank Continuous Flow Gravity Feed	Yes Yes No
Cartridge Type	Ceramic Disc	



To see the complete MIZU range go to www.reece.com.au/bathrooms

CLEANING RECOMMENDATIONS

We recommend the use of soapy water or approved cleaners.

This product should not be cleaned with abrasive materials.

Damage caused by any improper treatment is not covered by the product warranty. Refer to Warranty Conditions.













STREAM BASIN MIXER BRUSHED NICKEL

INSTALLATION INSTRUCTIONS

Note

Mixer must be installed by a licenced plumber

Important

Your mixer comes to you already factory assembled and tested. We do not recommend the dismantling of any internal part of the mixer. The mixers are factory tested and sealed so as to give the best performance.

Installation Procedure

- 1. Please flush out new pipe work prior to connecting the new mixer
- 2. All mixers should be installed with isolating stop cocks (Arco)
- 3. This tap is suitable for high pressure applications where both hot and cold water supply pressures are at 150kPa or above
- 4. Place the base washer & dress ring (16) into position
- 5. Fit the tap body into the basin hole making sure first that the flexible connectors are firmly tightened into base of the body
- 6. Do not use teflon tape on threads
- 7. From underneath apply your washer prior to positioning the horse shoe plate
- 8. Lock the mixer into position by tightening the lock nut

Servicing - Replacement of Cartridge

- 1. Remove cap and unscrew grub screw using allen key
- 2. Lift off handle and remove cartridge dome, unscrew brass locking nut and lift out cartridge
- 3. Replace cartridge, replace brass locking nut and replace handle. Tighten grub screw and push in indicator cap

Servicing - Flow Regulator (If flow rate drops)


- 1. Remove cartridge as outline above.
- 2. Remove flow regulator (7) and flush with water or replace.



mız U

STREAM BASIN MIXER BRUSHED NICKEL

COMPONENT LISTING

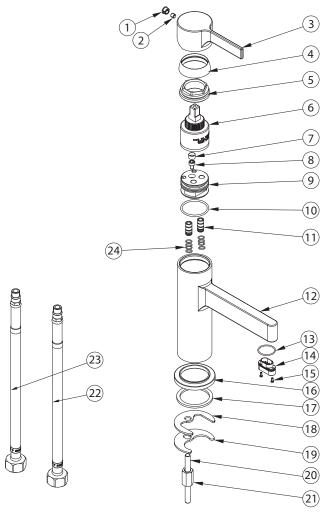

No.	Description
1	
2	Handle Complete
3	
4	Cartridge Dome
5	Cartridge Locknut
6	Cartridge
7	Flow Controller
8	Grub Screw
9	Cartridge Seat
10	O-Ring
11	Water Inlet Connector
12	Mixer Body

No.	Description	
13		
14	Aerator Complete	
15		
16	Dress Ring	
17		
18		
19	Fixing Kit	
20		
21		
22	Flexible Hose (Hot)	
23	Flexible Hose (Cold)	
24	O-Ring	

