


MILLI GLANCE FLOOR BATH OUTLET

INSTALLATION INSTRUCTIONS

Important Note

Mixer must be installed to the requirements of AS/NZS 3500 by a qualified plumber. Your mixer comes to you already factory assembled and tested. We do not recommend the dismantling of any internal part of the mixer. The mixers are factory tested and sealed so as to give the best performance.

INSTALLATION INSTRUCTIONS MILLI GLANCE FLOOR MOUNTED BATH OUTLET IN0324 REV A

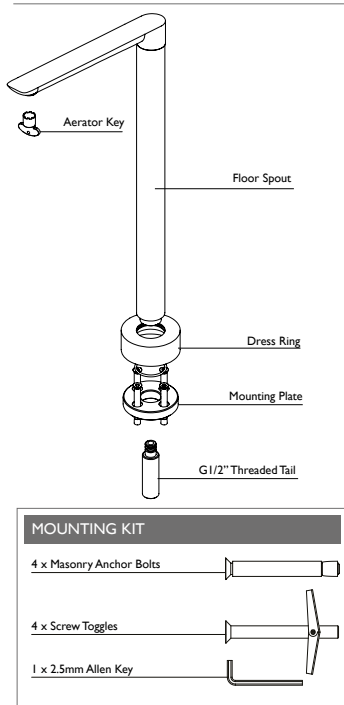

WOOD FLOOR INSTALLATION

Drill a 25mm hole in the required position through the floor.

Connect G 1/2" Threaded Tail to water supply and ensure tail protrudes above the floor between 21mm and 28mm.

Push Dress Ring onto Floor Spout tube.
Screw Mounting Plate onto Floor Spout tube.
Screw Floor Spout Assembly onto G 1/2" Threaded Tail.


Using the hole locations of the Mounting Plate, mark and drill holes.

Unscrew Floor Spout Assembly. Insert toggles through Mount Plate and drilled holes. Tighten Toggle screw firmly.

Push Dress Ring down on to Mounting Plate and tighten firmly.

Remove aerator with key provided and flush system to remove all debris.

Re-install aerator.

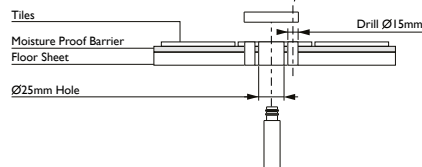

CONCRETE FLOOR INSTALLATION

Drill a 25mm hole in the required position through the floor.

Connect G 1/2" Threaded Tail to water supply and ensure tail protrudes above the floor between 21mm and 28mm.

Push Dress Ring onto Floor Spout Tube.


Tighten Mounting Plate onto threaded tail and mark hole positions for Masonry Anchor Bolts.

Remove Mounting Plate and drill holes, now re-install Mounting Plate and fasten Masonry Anchor Bolts.

Screw Floor Spout onto the Mounting Plate. Push Dress Ring down onto Mounting Plate and screw firmly in place.

Remove aerator with key provided and flush system to remove all debris.

Re-install aerator.

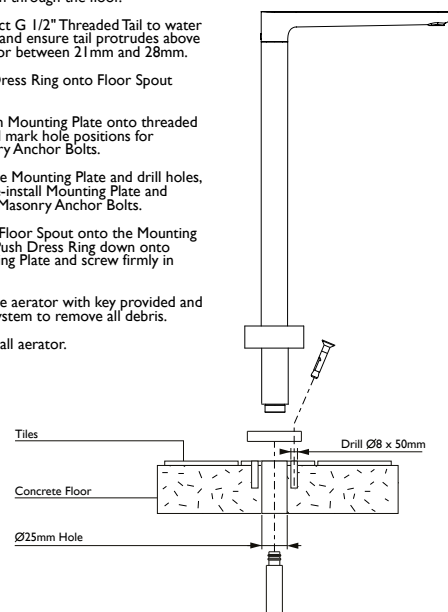

NOTE:

- If the pressure exceeds or is likely to exceed 550kPa, an approved pressure limiting device must be installed.
- Flush out all pipe work prior to installation.
- If the water temperature exceeds 75°C, an approved tempering valve must be fitted.
- Installation should comply with Australian standard AS3500.1 or relevant local authority requirements.
- Showers may not be suitable for use within:
 - Gravity-fed water systems
 - Some instantaneous hot water systems; or

MAINTENANCE AND CARE:

- Products should be cleaned with mild liquid detergent or soap and water.
- Do not use cream cleaners or citrus based cleaning products, as they are abrasive.
- Use of unsuitable cleaning agents may damage the surface. Any damage caused in this way will not be covered by warranty.

WARRANTY:

Please refer to the full warranty statement enclosed with the product before installing.

DISCLAIMER:

While we aim to ensure the specifications shown are correct at the time of printing, we reserve the right to make modifications without prior notice. Always use the physical product measurements for mark-ups and roughing-in as the line drawing shown may differ from the actual product over time.

*All measurements are shown in millimeters.

Plumbers, please ensure a copy of the installation instructions is left with the end user for future reference

