CAROMA

Forma II 500

Ceramic Inset Vanity Basin with Tap Landing

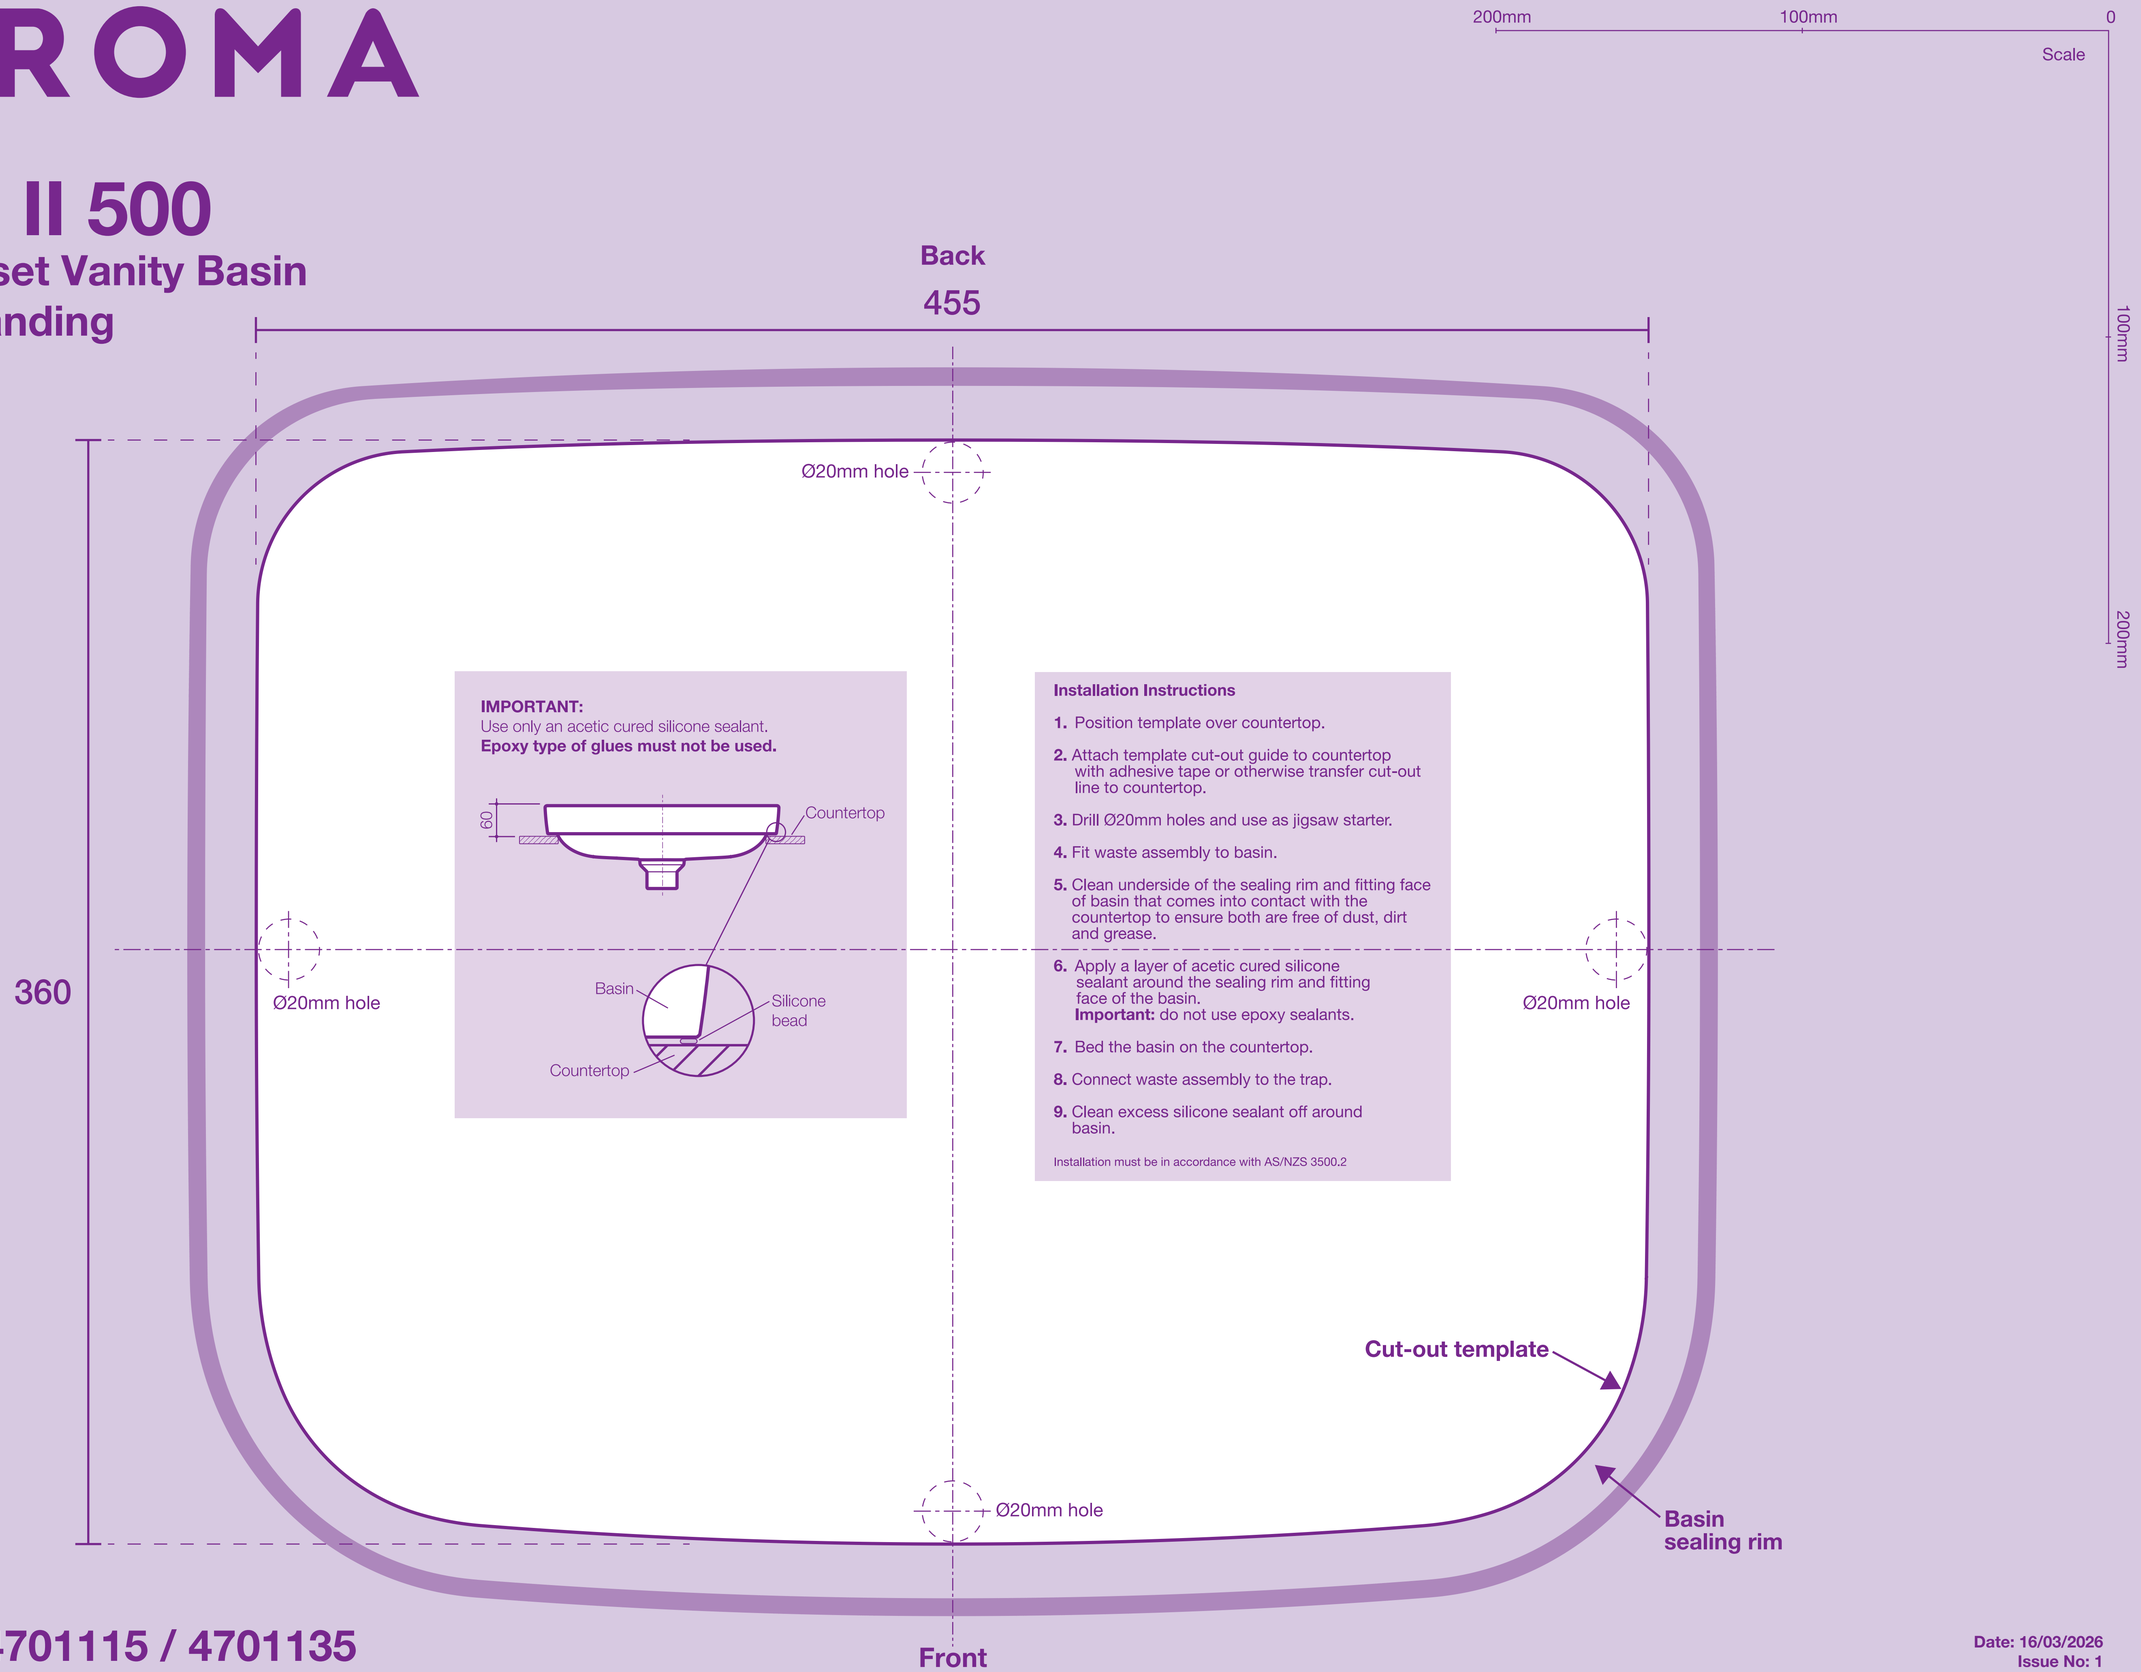

IMPORTANT:
Use only an acetic cured silicone sealant.
Epoxy type of glues must not be used.

Installation Instructions

1. Position template over countertop.
2. Attach template cut-out guide to countertop with adhesive tape or otherwise transfer cut-out line to countertop.
3. Drill Ø20mm holes and use as jigsaw starter.
4. Fit waste assembly to basin.
5. Clean underside of the sealing rim and fitting face of basin that comes into contact with the countertop to ensure both are free of dust, dirt and grease.
6. Apply a layer of acetic cured silicone sealant around the sealing rim and fitting face of the basin.
   Important: do not use epoxy sealants.
7. Bed the basin on the countertop.
8. Connect waste assembly to the trap.
9. Clean excess silicone sealant off around basin.

Installation must be in accordance with AS/NZS 3500.2

4701105 / 4701115 / 4701135

Date: 16/03/2026
Issue No: 1