


FyreWrap® Access Panel

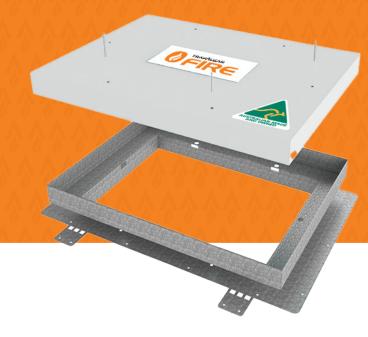

FyreWrap® Access Panels are a patented system designed for use on ducts protected by the innovative FyreWrap® system. These panels form part of a fully certified system to AS1530.4 to provide fire ratings on ducts and allow access easily and quickly. The patented design allows for easy installation and use and with various stock and custom sizes available the product can be widely used.

·

KEY FEATURES

- Provides fast clean and easy access to fire protected ducts
- Sized to fit over existing duct access panels
- FRL up to 180/180/180
- Welded steel frame with flexible fastening tabs
- Screw fixing with machine screws for robust access
- Available in custom sizes



APPLICATIONS

Provides access to duct work for:

- Inspection
- Service
- Repair
- Replacement of internal equipment:
 - Filters
 - Volume Control Devices
 - Dampers
 - Fans



TRADES









FyreWrap® is a registered Trademark of Unifrax

TABLE OF CONTENTS



S	Sectio	n	Page
Р	Produc	1	
F	Fire Re	3	
S	Specifi	4	
	lation	FyreWrap® Access Panels - Profile Detail	5
	Installation	FyreWrap® Access Panels	6
S	System Range		7
F	-AQ	8	
	ngs	Access Panel Details	9
	Technical Drawings	Fan Enclosure - Front View	10
		Fan Enclosure - Side View	11
		Out of Line Damper	12





FyreWrap® Access Panel

Fire Rating – How is fire performance measured?

An FRL (fire resistance level) is a handy way of summarising the performance of a building element. It consists of 3 numbers, all given in minutes. Ductwork uses a different FRL than other applications, shown below:

FRL 180/180/180



Structural Adequacy

The duct will maintain its size and shape allowing operation.



Integrity

The ability of an element to prevent the passage of flames and hot gases.

ie: no gases or flame passing in or out of the duct.



Insulation

The ability of an element to resist heat transfer from the exposed face to the unexposed face.

ie: the temperature inside or outside the duct (dependency on test type) staying below the limit.

Structural Adequecy

FyreWrap® will allow structural adequacy up to 3 hours (external fire) or 3 hours (internal fire). Unprotected supports are possible with FyreWrap® due to its lightweight nature.

Integrity

The FyreWrap® system will achieve the integrity performance of 3 hours (external fire) or 3 hours (internal fire)

Insulation (Temperature Rise)

FyreWrap® can achieve up to 3 hours insulation performance for internal and external fires with options for one or more layers depending on the FRL requirement.




Note: FyreWrap® Access Panels are tested for internal fire applications only.





FyreWrap® Access Panel

- Patented design with features that ensure complete flexibility and ease of installation.
- Are simply installed by fitting directly over the existing 'non-rated duct access panel' and fixed to the duct using rivets through a series of pre-drilled holes.
- Provide additional flexibility on site as they can be either pre-installed or easily retro-fitted.
- Include patented, bendable fastening tabs for slimline ducts to allow access without the need for a full box encasement.

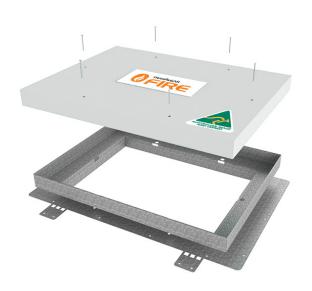

SPECIFICATIONS

Fire Rating	180/180/180				
Door Panel	Paint grade white hardboard incorporating FyreBOARD Maxilite® high performance fire rated board.				
Frame	Welded galvanised steel featuring patented and bendable fastening tabs.				
Fixing	Screw fixed using reusable machine screw fixings which are an integral part of the design.				
Sizes	708mm x 558mm 558mm x 433mm 433mm x 301mm 304mm x 214mm Custom up to 708mm x 558mm				







INSTALLATION

FyreWrap® ACCESS PANELS



PROFILE DETAIL

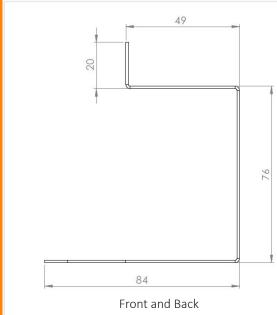

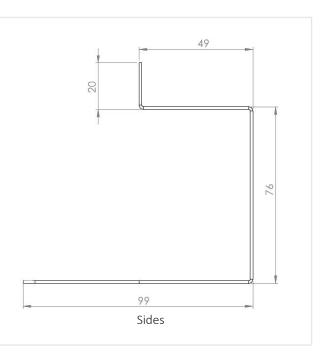

PREPARE

Apply FyreFLEX Sealant around the perimeter of the duct access panel to form a 'gasket' where the FyreWrap® access panel will sit.





Using the preformed holes in the FWAP frame, drill and fix (using steel rivets or self-tapping screws only) the frame to the ductwork.

- * Fixings are required at maximum 150mm spacing.
- * If required for low profile ductwork, the top and bottom fold-over tabs can be folded over and fixed through the top/bottom side of the ducting.





INSTALLATION

FyreWrap® ACCESS PANELS



Install FyreWrap® Elite 1.5 according to FyreWrap® installation instructions, ensuring that the material fits snugly into the provided recess in the FWAP frame on all sides. See the FyreWRAP® Ductwork Technical Manual for more details.



Install a second layer of FyreWrap® Elite 1.5, 100mm wide on all sides of the FyreWrap® Access Panel, fixing as per the standard FyreWrap® Elite 1.5 installation requirements (steel strapping or welded pins at 200mm centres).



Tape the edges of both layers of FyreWrap® Elite 1.5 together.



Finish the installation with a fillet of FyreFLEX Sealant to the perimeter of the FyreWrap® Access Panel, ensuring that none of the metal frame remains exposed.



FyreWrap® ACCESS PANEL

- Provides fast clean and easy access to fire protected ducts
- Sized to fit over existing duct access panels
- FRL up to 180/180/180
- Welded steel frame with flexible fastening tabs
- Screw fixing with machine screws which are an integral part of the product design
- Available in custom sizes



Item Number	Size	To Suit	FyreWrap [®] System	Qty	Pallet Qty
FW-AP-2L-AP0	708mm x 558mm	AP0	2 Layer	1	10 Panels
FW-AP-2L-AP1	558mm x 433mm	AP1	2 Layer	1	10 Panels
FW-AP-2L-AP2	433mm x 301mm	AP2	2 Layer	1	30 Panels
FW-AP-2L-AP3	304mm x 214mm	AP3	2 Layer	1	40 Panels
FW-AP-2L-CUSTOM	Custom Up to 708mm x 558mm	Custom	2 Layer	1	-

FyreWrap® ACCESS PANEL SYSTEM

Item Number	Size	Thickness	Qty	Pallet Qty
FyreFLEX 300W FyreFLEX 300G	FyreFLEX Sealant Cartridge 300ml White or Grey	-	20	1440
FyreFLEX 600W FyreFLEX 600G	FyreFLEX Sealant Sausage 600ml White or Grey	-	18	810
FyreWrap® Elite 610	610mm wide x 7620mm long	38mm	1 roll	12 rolls
FyreWrap® Elite 1220	1220mm wide x 7620mm long	38mm	1 roll	6 rolls





FAQ?

Q What sizes do the panels come in?

A There are a number of stock sizes to suit typical applications (APO, AP1, etc...), however custom sizes are also available.

Q Do I need any other products?

A Simply FyreFLEX® Sealant for use in installation.

Q Do I need to remove the existing duct access panel?

A No, the FyreWrap® Access Panel fits directly over the existing panel.

Q How hard is it to open the panel?

A The panel is secured to the framing using steel machine screws for quick and easy access.

Q Can FyreWrap® Access Panels be used on ducts that have been treated with a spray product?

A No, the FyreWrap® Access Panel must be used in conjunction with FyreWrap® Elite. See the FyreWrap® Ductwork Technical Manual for more information.



SOCIAL MEDIA








Contents


FyreWrap® Access Panel Details

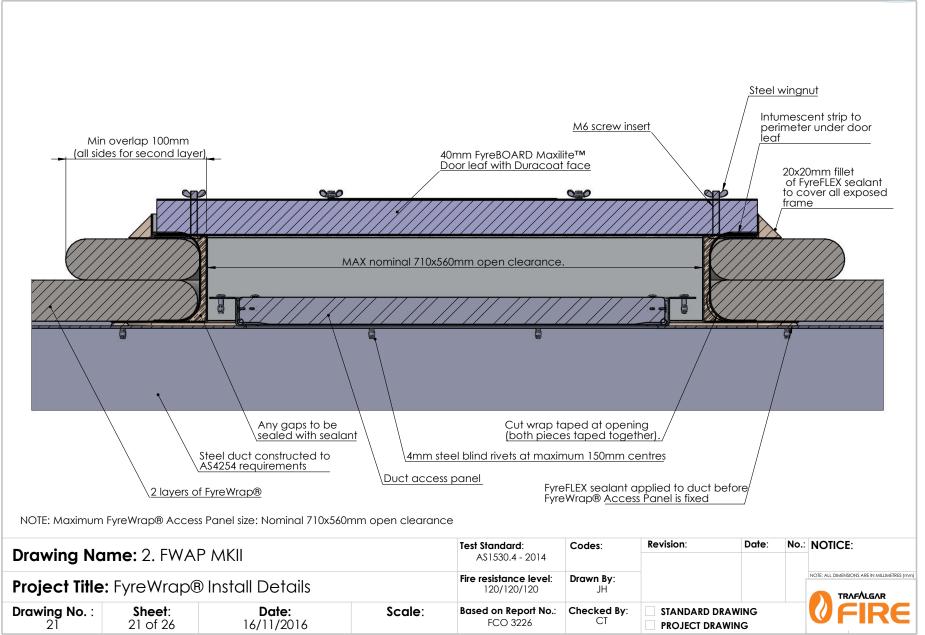



Click here to go back to Contents


FWAP Fan Enclosure - Front View

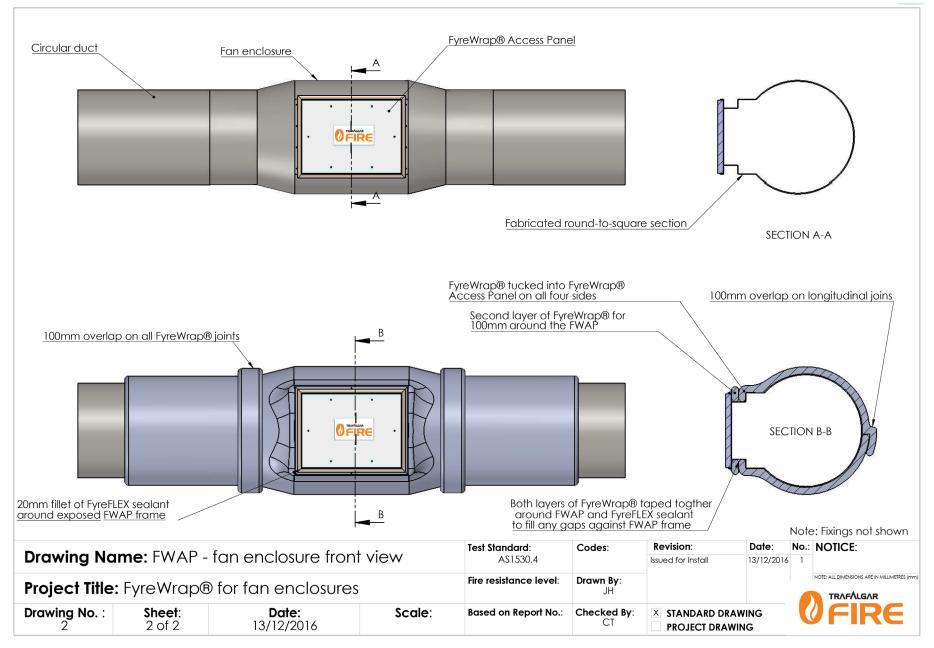





FWAP Fan Enclosure - Side View

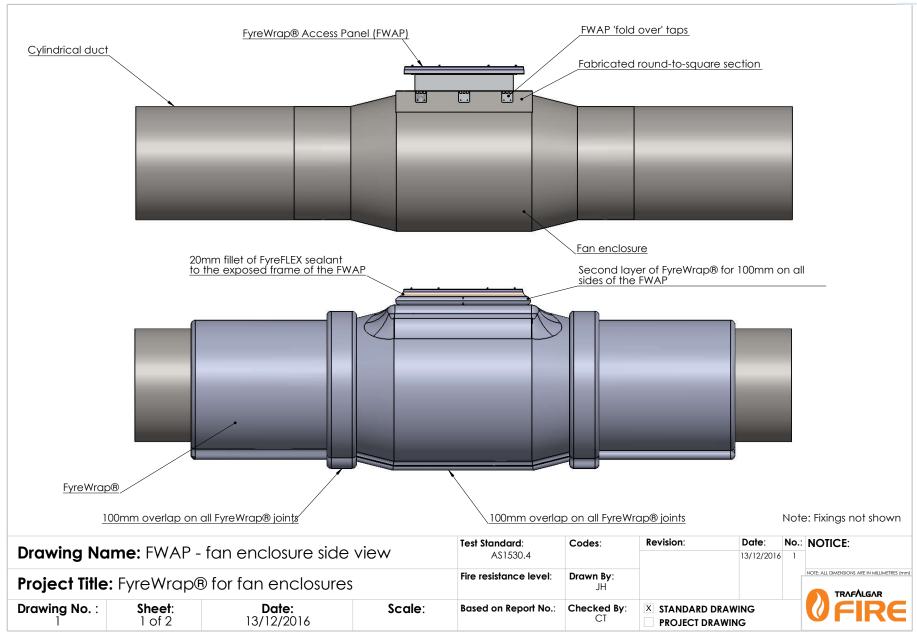





Out of Line Damper

