


Solus Pill Mirror Cabinet 450mm x 900mm




Check

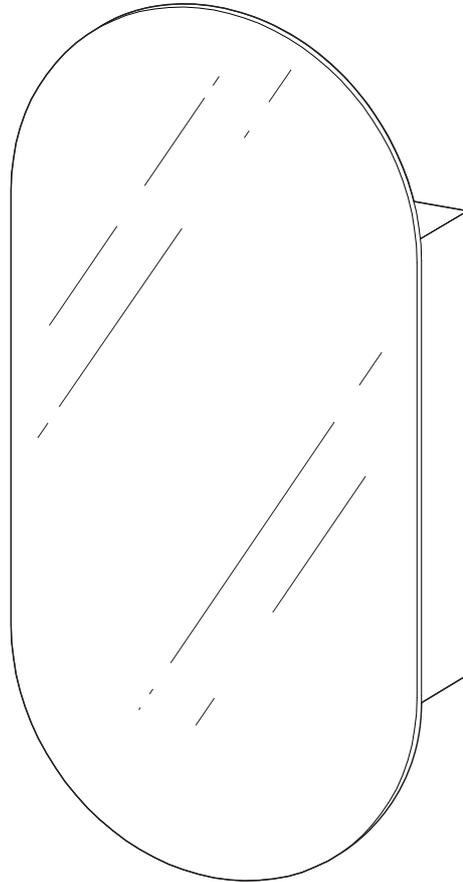


Prior to installation it is important to unpack & inspect your products to ensure no damage has occurred in transit and that the product IS CORRECT and all parts have been supplied. If damage has occurred, or a visible defect exists, do not proceed with installation and contact supplier IMMEDIATELY.

Parts Supplied


Note: Place all wooden furniture parts on a clean and flat surface, such as carpet or a rug to prevent damage prior to installation.



Cabinet x1



Shelf x1

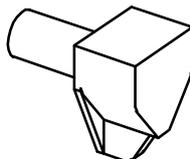


Shelf Support x4




Bracket x4



Screw x8

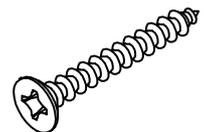

Screw x4

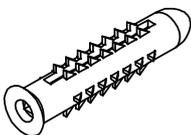


Anchor x4

Solus Pill Mirror Cabinet 450mm x 900mm


Installation Instructions

Note: Mirror Cabinet Door is reversible .Can be mounted with hinges on Left or Right hand side, Hinges are soft closing.

1. Locate timber noggins or reinforced fixing points in wall to provide solid timber for mounting screws.

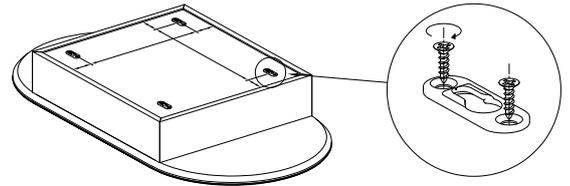

2. Drill pilot holes in cabinet to line up with pre-determined timber support located in the wall.

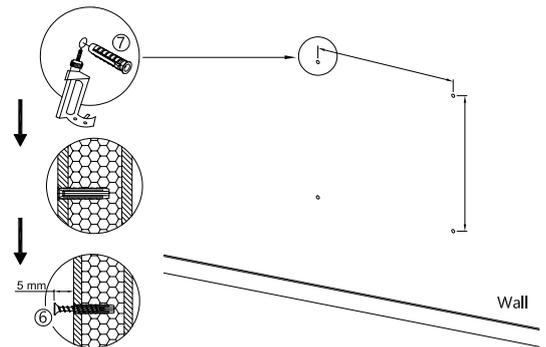


3. Fix cabinet to wall using appropriate screws for the relevant wall material. Take care not to over tighten screws.

Note: To make installation of cabinet easier remove door(s) for both on wall and inset installation.



Important

Ensure finished wall is plumb and level.

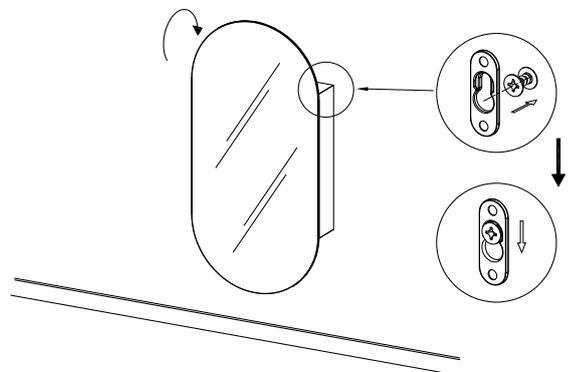

Solus Pill Mirror Cabinet 450mm x 900mm

- If installed in a wall cavity, ensure that the mirror cabinet is securely fixed to framework.
- Refer to next page for cabinet assembly.

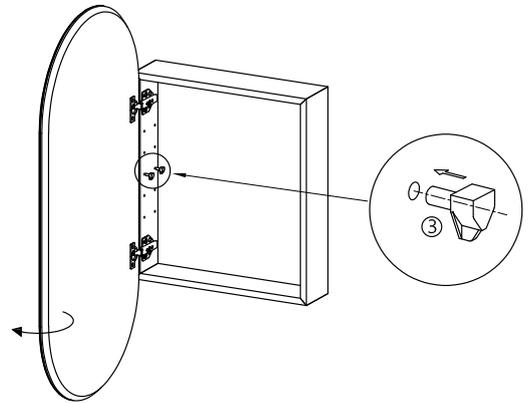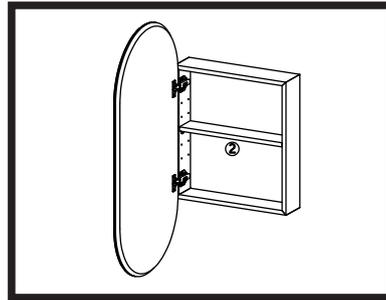


Recessing Mirrored Shaving Cabinet (Optional)

- Complete Step 1, cut a hole 4mm bigger than the overall cabinet carcass in the wall. Position and secure cabinet in cut out, go to Step 2.


Note: Make sure the hole has sufficient noggings to fix top and bottom of carcass.

Note: Give 2mm clearance to fit cabinet.

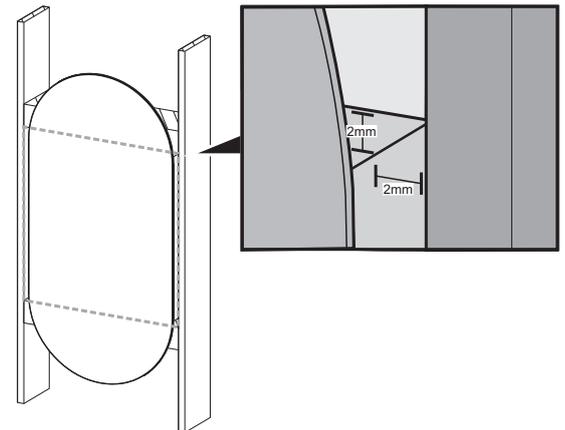

- Ensure the cabinet carcass protrudes by a minimum of 20mm from the wall (including tiles) to allow for finger pull on the door.

Note: Once Mirror cabinet is fitted caulk around all edges that meet the finished wall.

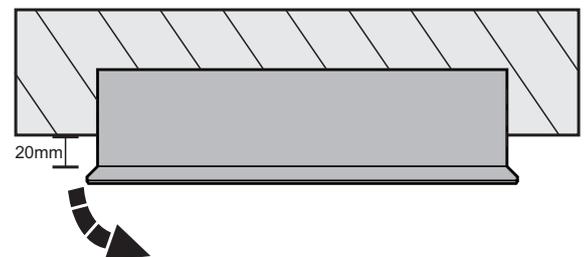


Solus Pill Mirror Cabinet 450mm x 900mm

Hinge Adjustment Instructions


Front and rear adjustment in three dimensions.

- The clearance between door board and cabinet side board can be changed only by adjusting screw **(A)**.

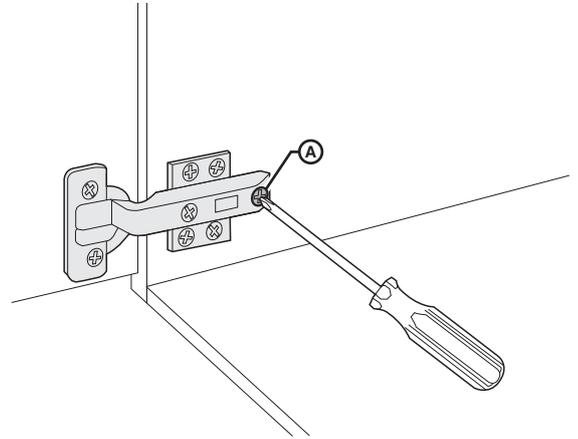


Adjustable screw (B)

- Left and right adjustments in three dimensions.

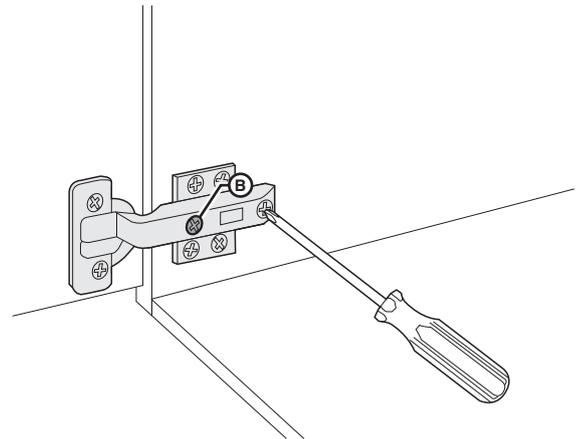

Vertical adjustments in three dimensions.

- Vertically and clearance between top and bottom can be corrected by adjusting screw **(C)** on hinge base board.

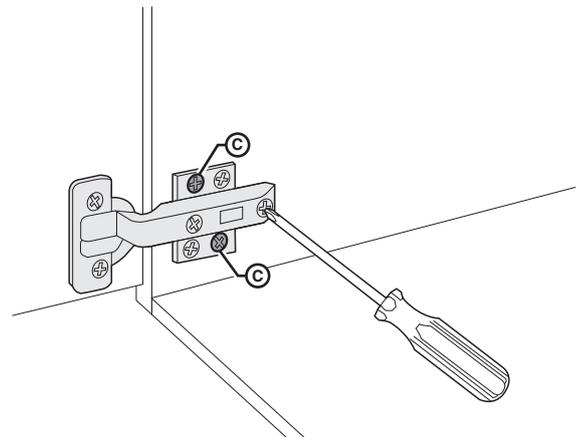

Care Details

We recommend the use of soapy water or approved cleaners. This product should not be cleaned with abrasive materials. Damage caused by any improper treatment is not covered by the product warranty - refer to Warranty Conditions on the last page.

Plumbers, please ensure a copy of the installation instruction is left with the end user for future reference.