



To see the complete CUSTOM GLASS range go to www.reece.com.au/bathrooms

| SPECIFICATIONS | |
|-----------------------------|---|
| Recommended use | Domestic, Hotel, and Commercial |
| Material | Screen-6mm Clear Toughened Glass. Glass Infill-5mm Clear Toughened Glass. Return Panel -5mm Clear Toughened Glass. Australian Safety Standards Compliant. |
| Floor Suitability | Shower Base Installation |
| Door Opening Option | Left or Right |
| Handle | Standard Knob |
| Frame & Support Rail Colour | Polished Silver |
| Optional Extras | 1789912 - Installation Charge |
| | 1791295 - Shower Screen Removal |
| Standard Height | 1950mm |

| SIZE VARIATIONS | | | | | |
|-----------------|-------------|-----------|-----------|--------------|------------|
| Code | SIZE | ADJ FRONT | DOOR SIZE | INFILL GLASS | ADJ RETURN |
| 1790433 | 820 x 820 | 760-840 | 643 | 180 | 770-790 |
| 1789799 | 900 x 900 | 820-900 | 702 | 180 | 850-870 |
| 1789800 | 1000 x 1000 | 901-980 | 702 | 260 | 950-970 |
| 1789802 | 1200 x 900 | 1140-1220 | 702 | 500 | 850-870 |

CLEANING RECOMMENDATIONS


We recommend the use of soapy water or approved cleaners.


This product should not be cleaned with abrasive materials.


Damage caused by any improper treatment is not covered by the product warranty - refer to Warranty Conditions.


Please refer to detailed Cleaning Instructions on page 19.



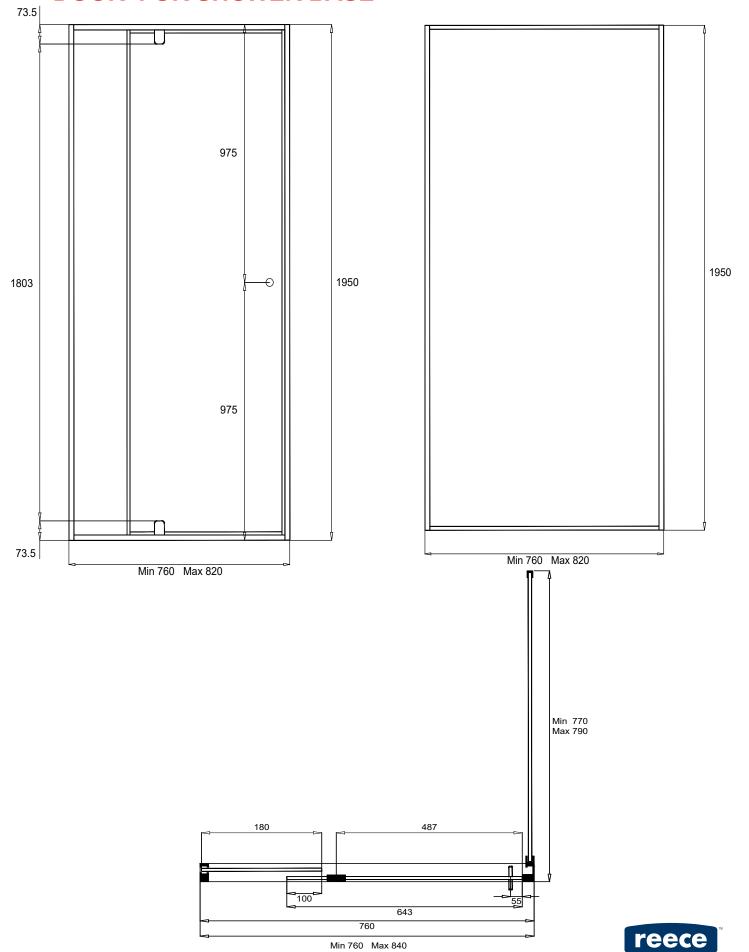

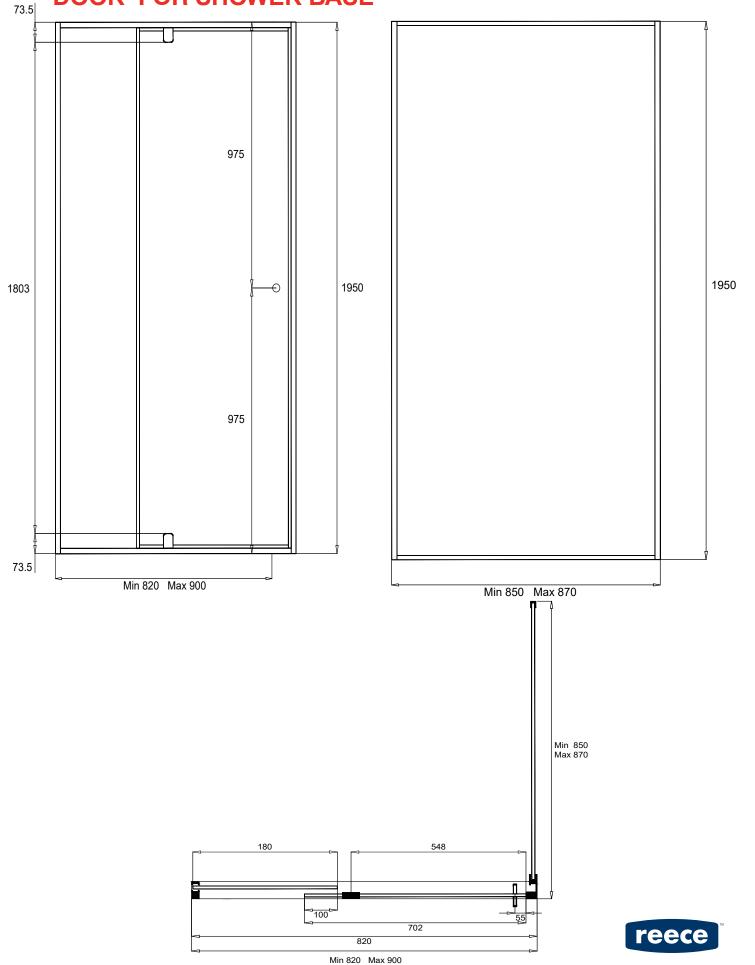

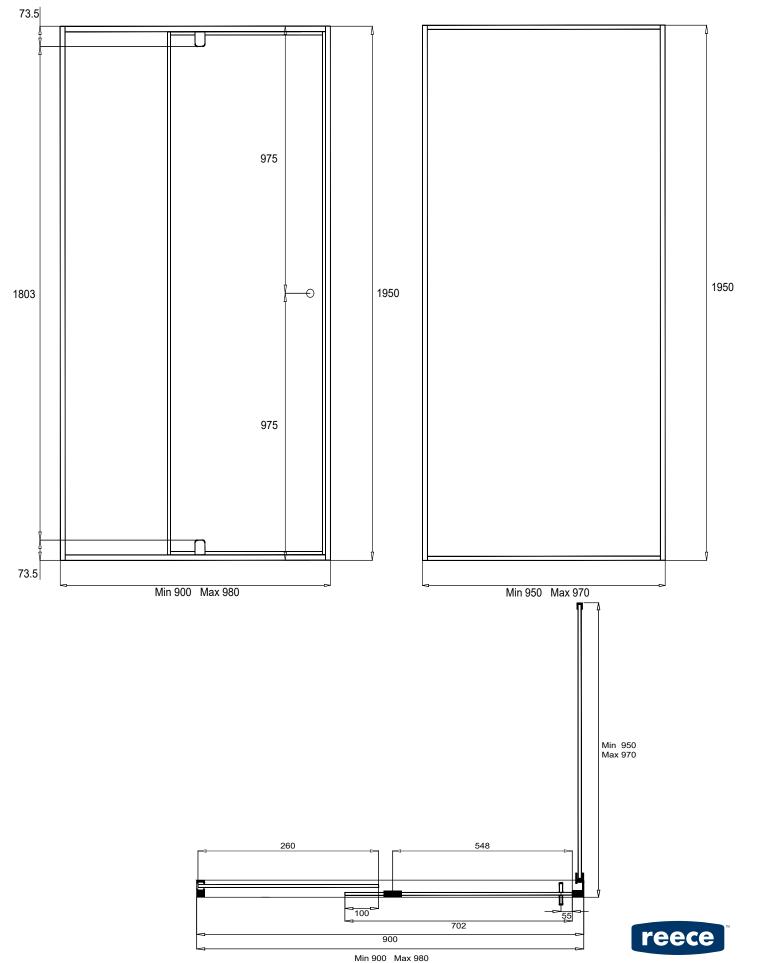

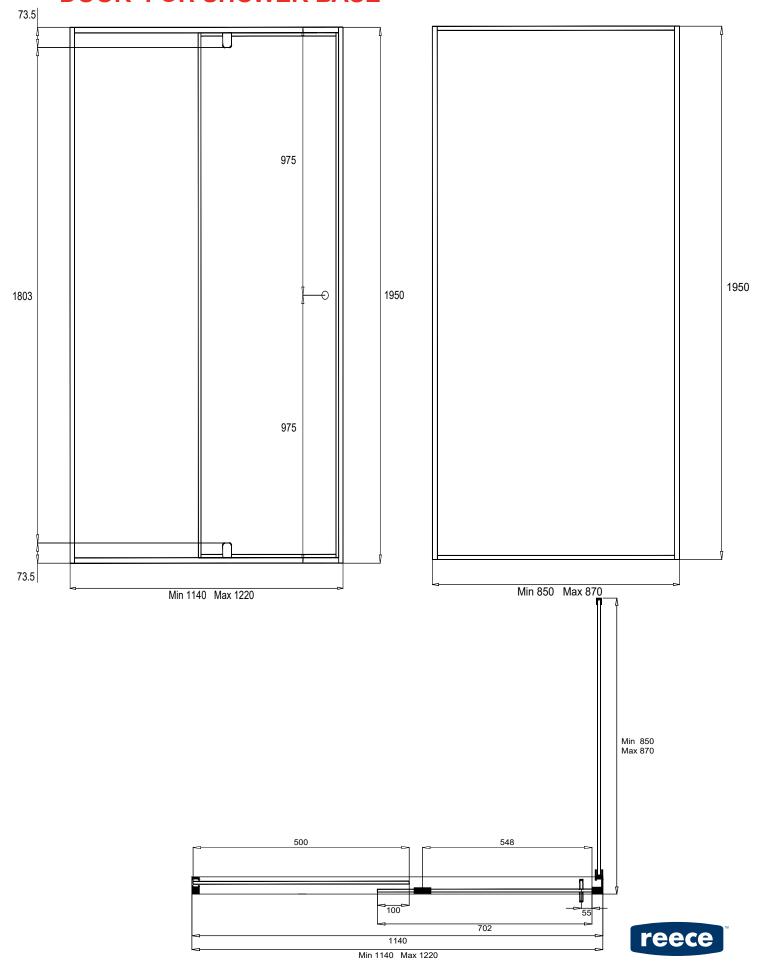

Important Pre-Installation Information

- Please read this entire instruction book before commencing installation.
- A licensed tradesman must be used for the installation.
- Leave the plastic protectors on the glass corners until the last possible moment and handle with care.
- _ Please ensure all the tiles are grouted and silicone work is completed before attempting to install this product.

Maintenance

If water alone is not enough to clean the glass, Custom Glass recommends the use of mild detergent solutions only.


Silicone Sealant Drill Level Rubber Mallet Pencil Phillips Screwdriver Tape Measure Cutting Pliers Utility Knife Safety Goggles Gloves



^{*} Use the correct type of drill bit for the material being drilled, with 6mm required for anchor fixing and 3mm used for screwing directly into the wall studs.


^{**} As with all toughened glass, take care while handling and wear safety goggles and gloves for personal protection.



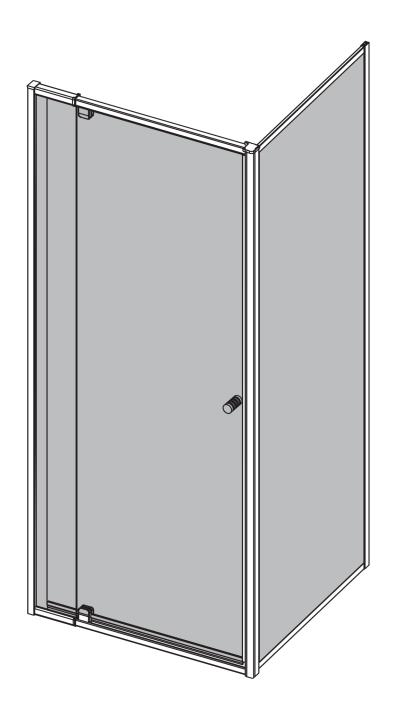





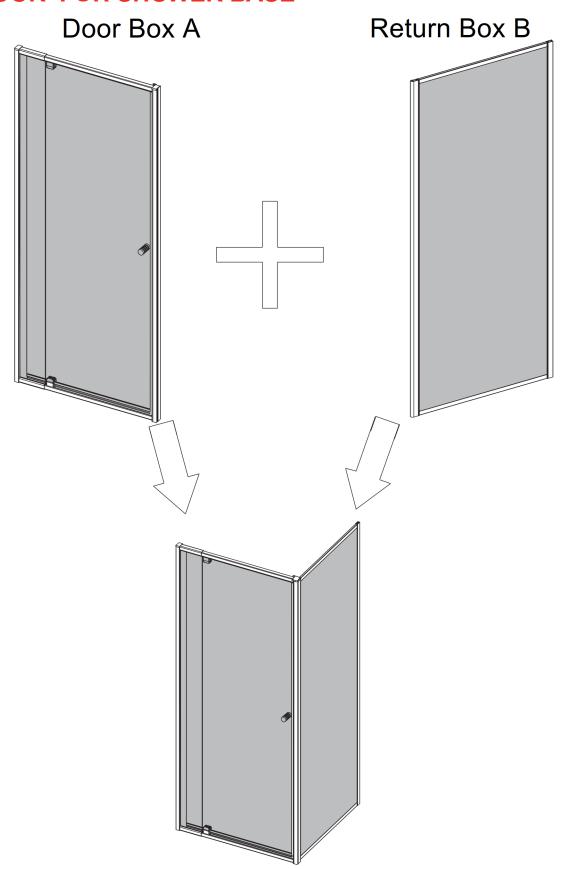







SEMI FRAMED ADJUSTABLE FRONT & RETURN PIVOT DOOR FOR SHOWER BASE

Return Box B Items

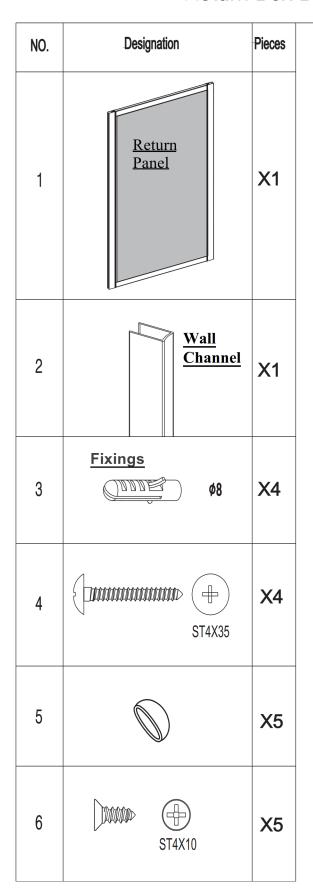

| N | 10. | Designation | Pieces |
|---|-------------|--------------|--------|
| 7 | ' .1 | | X1 |
| _ | etu . 2 | arn Top Caps | X1 |
| 8 | A | Return Jamb | X1 |
| | | Not Supplied | |

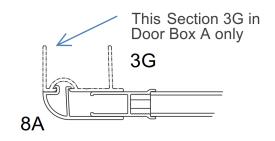


Slide these 2 sections together





Determining Wall Channel Location

When commencing step 1 on the following page, please refer to this drawing and the tabulated dimensions for your size of system to assist in the correct location of the wall channels.

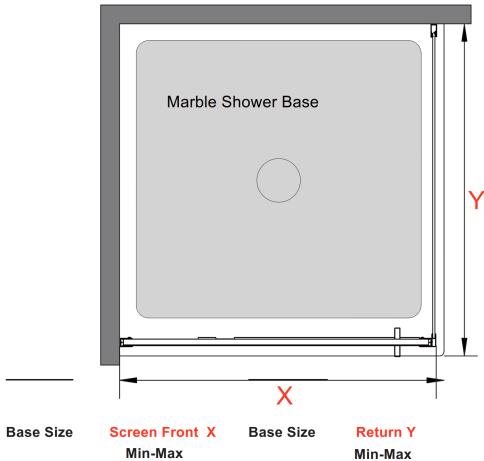

| Base Size | Screen Front X | Base Size | Return Y |
|-----------|----------------|-----------|----------|
| | Min-Max | | Min-Max |
| 820 | 760-820 | 820 | 770-790 |
| 900 | 820-900 | 900 | 850-870 |
| 1000 | 900-980 | 1000 | 950-970 |
| 1200 | 1140-1220 | 900 | 850-870 |

- Locate the size of your shower screen and use the value for X and Y on the same line to find the distance from the shower wall to the outside edge of the wall channels.


reece


⁻ If your wall and shower base are not at right angles the glass will not push fully into the wall channel at the top or bottom. This misalignment is acceptable if not exceeding 10mm, however the overall shower size will then increase by the amount of this misalignment.




SEMI FRAMED ADJUSTABLE FRONT & RETURN PIVOT DOOR FOR SHOWER BASE


BOX B RETURN INSTRUCTIONS

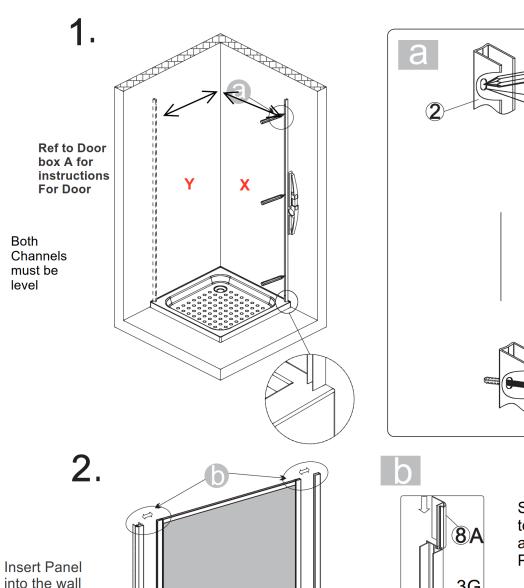

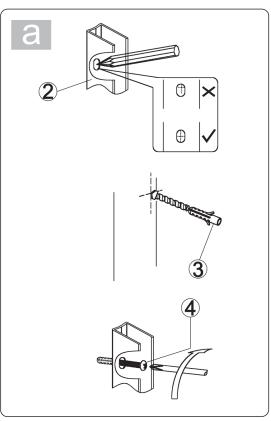


into the wall Channel X1, and the attach 8A and 3G

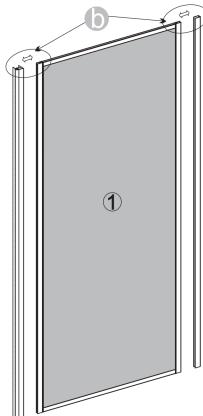




Slide both section together then attach to return Panel

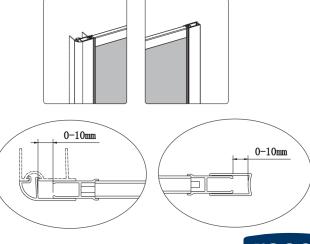






BOX B RETURN INSTRUCTIONS

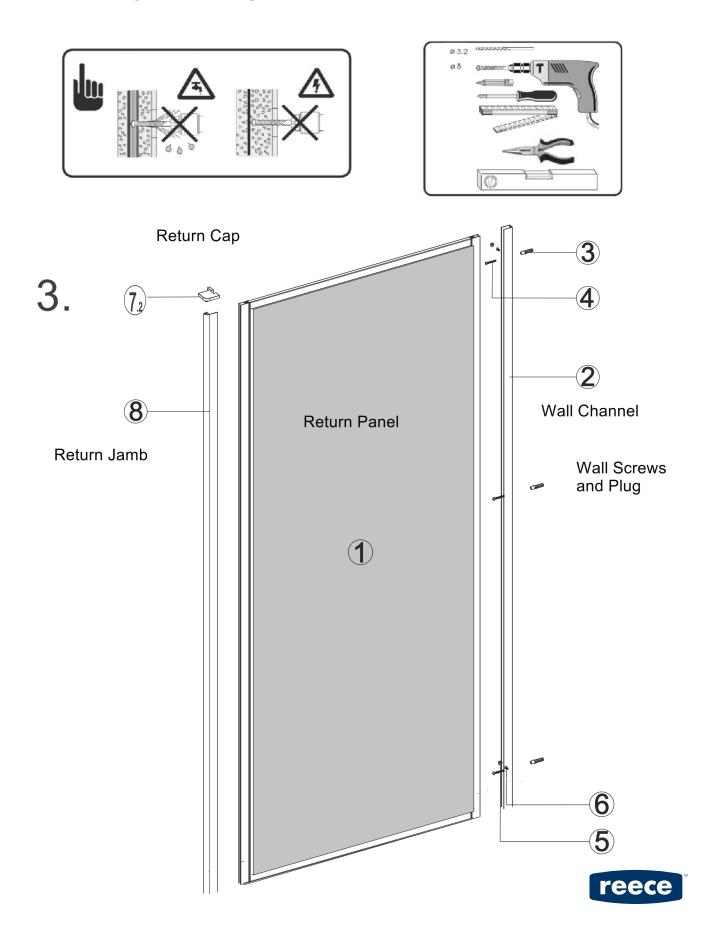

BOX B RETURN INSTRUCTIONS

4.

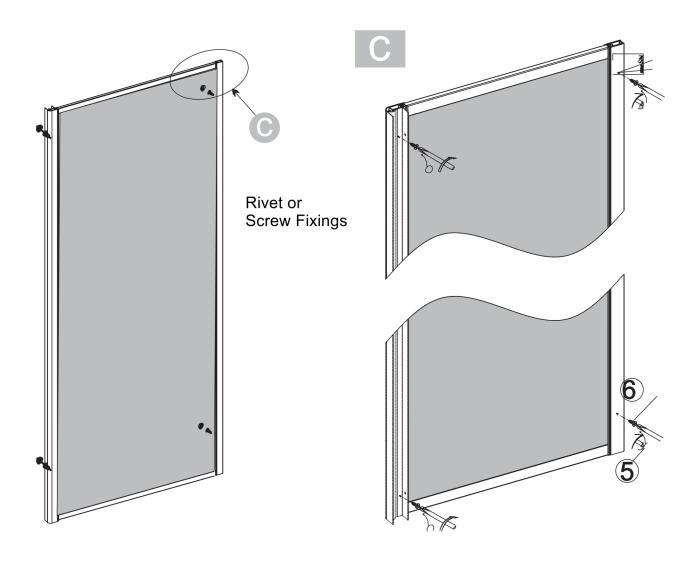








SEMI FRAMED ADJUSTABLE FRONT & RETURN PIVOT DOOR FOR SHOWER BASE

Door Box A Items

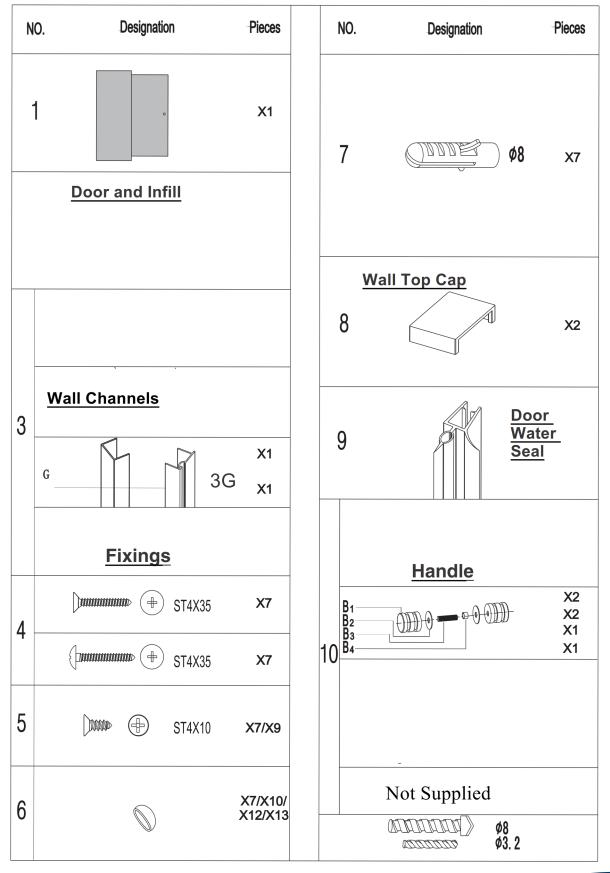



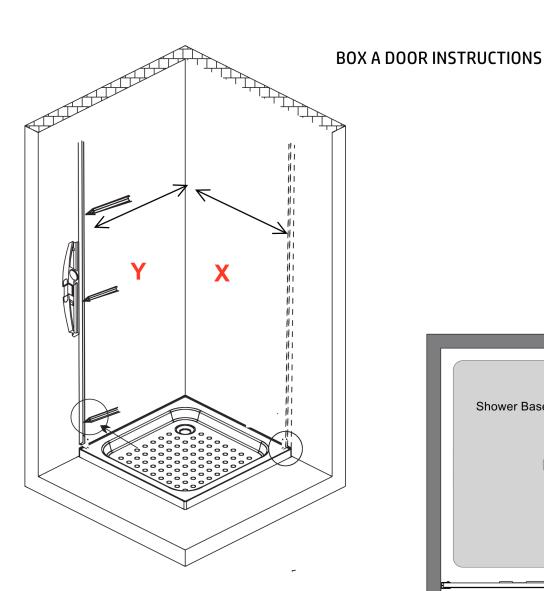

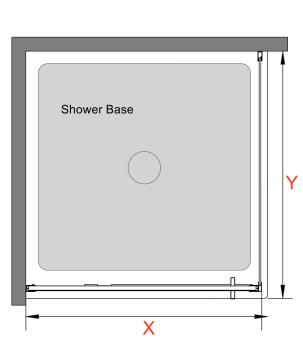


| Base Size | Screen Front X | Base Size | Return Y |
|-------------|----------------|-----------|----------|
| | Min-Max | | Min-Max |
| 820 x 820 | 760-820 | 820 | 770-790 |
| 900 x 900 | 820-900 | 900 | 850-870 |
| 1000 x 1000 | 900-980 | 1000 | 950-970 |
| 1200 x 900 | 1140-1220 | 900 | 850-870 |






SEMI FRAMED ADJUSTABLE FRONT & RETURN PIVOT DOOR FOR SHOWER BASE

BOX A DOOR INSTRUCTIONS

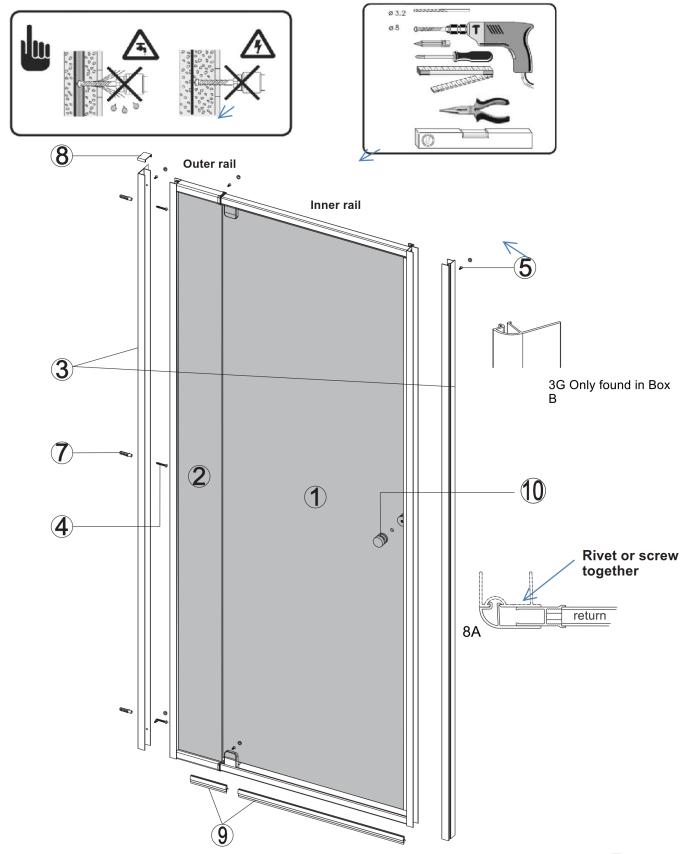






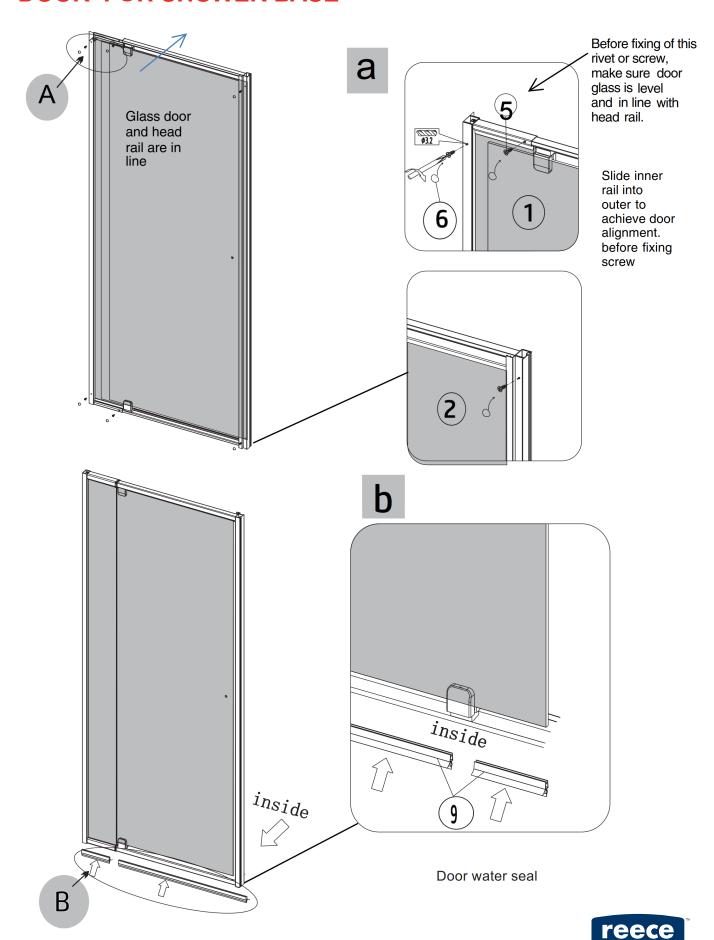

SEMI FRAMED ADJUSTABLE FRONT & RETURN PIVOT DOOR FOR SHOWER BASE

Inside View

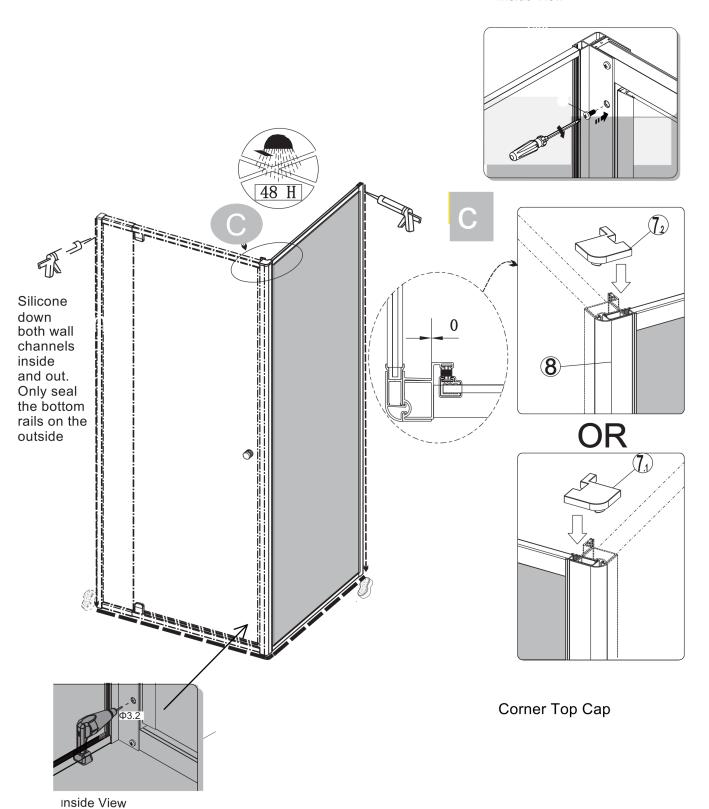



DETAILED CLEANING INSTRUCTIONS

Easy Clean Treated Glass

After showering we strongly recommend you squeegee the glass to remove water from the surface.

A weekly clean using water and 30% Vinegar or a mild detergent is all it takes to remove dirt, soap scum and other contaminants.

Spray the vinegar and water on the glass and wipe with a soft cloth, leave this on the surface for several minutes before rinsing and drying the glass.

Aluminium Frame and Metal Components

The simplest and most preferred method of cleaning your unit is by washing with clean water and drying with a soft cloth.

Do not use Abrasive powders, steel and Teflon pads or dirty and gritty rags. The anodised coating on the Aluminium is one of the hardest substances known, however, it will be damaged by strong acidic or alkaline solutions. These solutions may dull and discolour the finish.

The most reliable preventative measure to preserve your screen is to wipe the surface dry with a soft cloth after each use.

