

henden™

pH Dosing Pump
HPHDB

INSTALLATION & OWNERS MANUAL



IMPORTANT
Please read carefully



WARNING:
Failure to follow these instructions and comply with all applicable codes may cause serious bodily injury and/or property damage.

The installation of this product should be carried out by a person knowledgeable in swimming pool plumbing requirements following the installation instructions provided in this manual.

Please pass these instructions on to the operator of this equipment

Contents

pH Dosing Pump

INSTALLATION

1. WARNINGS AND TIPS	4
1.1 Proper use of the pump	4
1.2 Risks	4
1.3 Toxic and/or Dangerous Liquid Dosage	4
1.4 Instruction for Diluting Pool Acid	4
2. PUMP DESCRIPTION	5
2.1 Parts Description	5
2.2 Pump Interface	5
3. INSTALLATION AND RECOMMENDATION	6
3.1 Recommendations	6
3.2 Mounting the pump	6
3.2.1 Bracket	6
3.2.2 Mounting of the Clamp	6
3.2.3 Mounting of the Probe on the Probe Holder	6
3.2.4 Mounting of Injection Valve	6
3.2.5 Mounting of the Tube into the Injection Valve	7
4. CONNECTING THE POWER AND POOL PUMP TO YOUR PH CONTROLLER	7

OWNERS MANUAL

5. COMMISSIONING AND OPERATION	8
5.1 Calibration Procedure	8
5.2 Important Points	8
5.3 Settings	9
5.3.1 Adjustment of the Set Point	9
5.4 Operating Principle	9
6. MAINTENANCE	9
6.1 Replacement of the Peristaltic Tube	9
6.2 Maintenance of the Peristaltic Tube	10
6.3 Maintenance of the Electrode	10
6.4 Controller Winterising	10
6.5 Probe Winterising	10
7. TROUBLE SHOOTING	10
Henden™ Repair and Replacement Guarantee	11

INSTALLATION



In accordance with AS/NZS 60335.2.41 we are obligated to inform you that this pump is not to be used by children or infirm persons and must not be used as a toy by children.

1. WARNINGS AND TIPS

Please read the warning notices very carefully because they provide important information regarding safety in installation, maintenance and use of the Henden pH Dosing Pump.

- Keep this manual in a safe place, so that it will always be available for further consultation.
- The device complies with EMC:2004/108/EEC "electromagnetic compatibility" and LVD:2006/95/EC "low voltage" and also the subsequent modifications.

Note: This pump has been constructed in accordance with best practice. Product life, electrical and mechanical reliability will be enhanced if it is correctly used and regularly maintained.



WARNING Any intervention or repair to the internal parts of the pump must be carried out by qualified and authorised personnel.

1.1 Proper use of the Pump

The Henden pH Dosing Pump should be used only for the purpose for which it has been expressly designed namely the dosing of liquids. Any different use is to be considered dangerous. The pump should not therefore be used for applications that were not allowed for in its design. In case of doubt, please refer to the details listed within this document, or contact your point of purchase or Henden for further information. Henden will not be liable for damage deriving from improper, erroneous or unreasonable use of the Henden pH Dosing Pump.

1.2 Risks

- After unpacking the pump, make sure that it is completely sound. In case of doubt, do not use the Henden pH Dosing Pump and contact Henden.
- The packing materials (plastic bags, polystyrene, etc.) should be kept out of the reach of children: As they may constitute a potential source of danger.
- Before you connect the Henden pH Dosing Pump make sure that the voltage ratings correspond to your particular voltage supply. You will find this value on the rating plates attached to the Henden pH Dosing Pump.
- The electrical installation to which the Henden pH Dosing Pump is connected must comply with the local standards enforced in the state or country under consideration.
- Use of electrical equipment always implies observance of some basic rules. In particular:
 - Do not touch with wet or damp hands or feet
 - Do not operate the Henden pH Dosing Pump with bare feet (example: swimming pool equipment)
 - Do not leave the equipment exposed to atmospheric agents
 - Do not allow the Henden pH Dosing Pump to be used by children or unskilled individuals without supervision



Never connect your pH pump direct to mains power. Always connect it to the chlorinator power supply so it operates during the preset filtration time cycles.

- In case of breakdown or improper functioning of the pump, switch it off, but do not touch. Contact Henden for technical assistance for any necessary repairs and insist on the use of original spares. Failure to respect this condition could render the Henden pH Dosing Pump unsafe to use.
- When the Henden pH Dosing Pump is not in use for a substantial period of time, or use is to be discontinued, disconnect the unit from any power supply.

Before carrying out any service on the Henden pH Dosing Pump:

- 1 Disconnect the mains power from the unit and
- 2 Relieve all the pressure from the pump head or the injection tube

In the event of possible losses on the hydraulic system of the pump (breakage of the o-ring, the valves or the hoses), stop the pump immediately and contact Henden.

1.3 Toxic and/or Dangerous Liquid Dosage

To avoid risk from contact with hazardous liquids or toxic fumes, always adhere to the notes in this instruction manual and wear protective clothing (gloves, goggles & overalls). You must:

- Follow the instructions of the dosing liquid manufacturer.
- Check the tubing regularly and use only if there is no damage.
- Contact Henden for technical assistance for any necessary repairs and insist on the use of original spares.
- Before disconnecting the metering pump, make sure to flush out and neutralise the pump head with water.

1.4 Instructions for diluting pool acid

The Henden pH pump automatically doses a diluted acid solution into the pool when the pH level needs to be reduced. The peristaltic pump draws this diluted acid from a container in which the solution is mixed.

Use the table provided to determine what water/acid ratio is recommended for your pool, in an approved 20 litre Hydrochloric Acid container.



IMPORTANT:
KEEP BARE HANDS AWAY FROM POOL ACID AND ALWAYS USE CAUTION WHEN HANDLING POOL CHEMICALS.

Pool Size	Recommended Water/Acid Dilution Ratio		Volumes for a Suitable 20 Litre Container	
	Water (parts)	Acid (parts)	Water (Litres)	Hydrochloric Acid (litres)
Up To 100,000 litres	5	1	17	3
Above 100,000 to 160,000 litres	3	1	15	5

Note: These ratios are based on Hydrochloric Acid strength of 28% and should not be any greater than this percentage. Please ensure that you keep the storage area of the acid well ventilated and ensure you use a suitable container with resistance to Hydrochloric Acid.

2. PUMP DESCRIPTION

The Henden pH Dosing Pump is characterised by its ability to measure pH value (between 0 and 14) with its probe placed on the filtration system that analyses the pool water.

Depending of the measured value, the pump will inject the required amount of product needed to maintain the balance of the pool water.

The pump works in acid (pH-) or basic (pH+) dosage.

2.1 Parts Description

Here are the complete contents of the package you received. All parts will be necessary for the proper operation of your device.



Fig. 1

- A. Peristaltic pump x 1
- B. 4 meters of PVC Cristal tube x 1
- C. Screws for wall mounting x 2
- D. Masonry plugs for wall mounting x 2
- E. Electrode/pH Probe & Protective Cap x 1
- F. Clamp DN40 x 2
- G. Clamp DN50 x 2
- H. Foot filter x 1
- I. Injection valve x 1
- J. Inline electrode holder x 1
- K. Buffer solution pH7 x 1
- L. Shutter washer x 1
- M. Controller mounting bracket x 1

2.2 Pump Interface

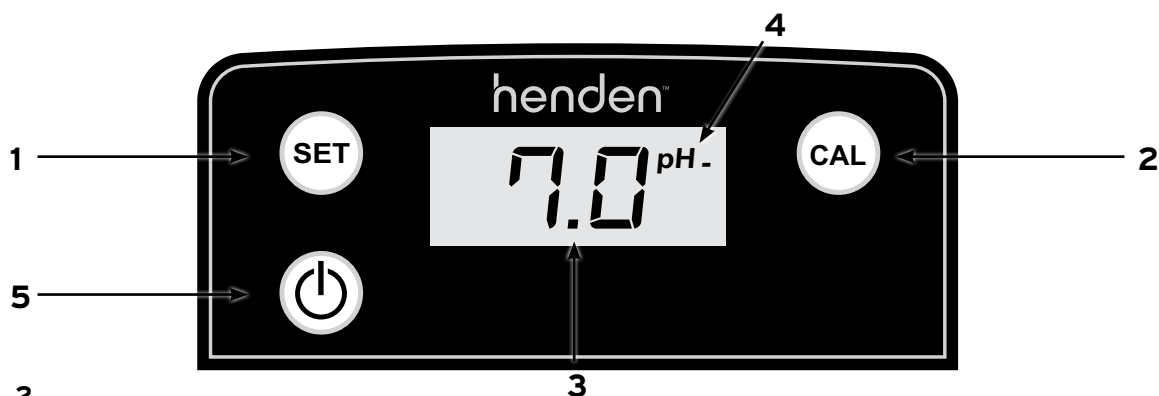


Fig. 2

- 1. Press **SET** to see and adjust the set point.
- 2. Press **CAL** to allow calibration of the pH to pH 7.0 when using the buffer solution pH7.
- 3. Current value of pH being measured, eg 7.0
- 4. **pH -** unit of measurement and indicates that the device must inject acid.
- 5. On/off button to turn on the device. When held down, this button primes the pump.

3. INSTALLATION RECOMMENDATIONS

3.1 Recommendations

- Install the Henden pH Dosing Pump in a dry place and well away from sources of heat and in environments not exceeding 45°C. The operating minimum temperature depends on the liquid to be pumped, bearing in mind that it must always remain in a liquid state.
- Carefully observe any standards in force in your state, territory or country, as to electrical installation regulations and requirements.
- The Henden pH Dosing Pump should be in operation only when your filtration pump is running.

WARNING

- It is important to keep a minimum distance of 200mm between the probe "C" and the injection valve "E"
- The injection valve "E" must be placed last in the pipework hydraulic installation
- In the case of an installation with redox and pH regulation, it is advised to put the two sensors side by side and the pH injection before chlorine injection to minimise the risk of scale deposition on the chlorine injection
- For optimal service life of your peristaltic pump tube, it is advised not to exceed a pressure of 1 bar and under no circumstances exceed a pressure of 1.5 bar
- The pH probe must be located before any other device such as a heater or an electrolyser



3.2 Mounting the Pump

3.2.1 Bracket

1. Locate the bracket in the space chosen and mark the holes
2. Drill the holes as required (3mm for timber walls & 6mm for masonry walls)
3. Fix the bracket to the wall
4. Slide and secure pump into the bracket

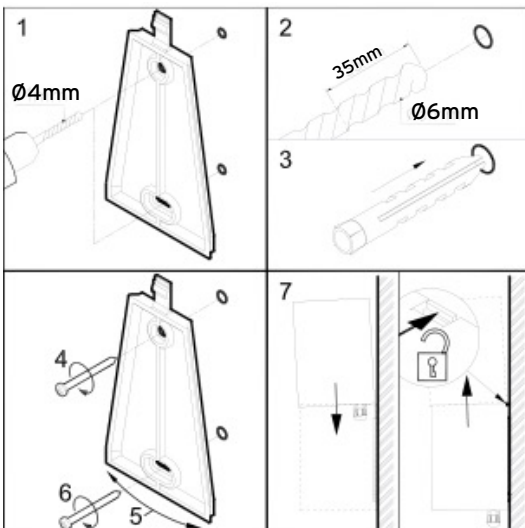


Fig. 4

3.2.2 Mounting of the Probe Clamp

Choose a mounting location on your pipework that is:

1. Prior to your salt cell
2. BEFORE the placement of the acid injection point
3. Ensure the probe clamp lead is within reach of the Henden pH Dosing Pump controller

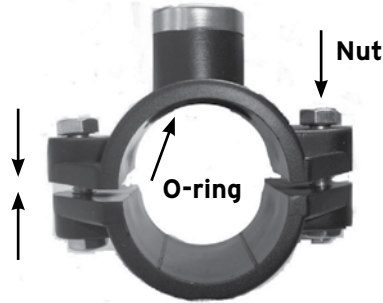


Fig. 5

Pierce the top wall of the pipe work through the clamp: - 14 mm for the electrode/pH probe.



Fig. 6

3.2.3 Mounting of the pH Probe into the Probe Holder

After removing the protective cap from the probe, you need to insert all the parts as shown in the Fig.7.

Before inserting the probe into the pipe make sure you calibrate the probe (refer to 5.1 Calibration Procedure for instructions).

Once the probe has been constructed as indicated in Fig.7, tighten the probe nut without crimping the probe body. Push the probe approximately 20mm into the pipe work so that the probe tip is approximately halfway into the pipe work. Connect the probe lead to the BNC terminal on the pump. (Fig8)

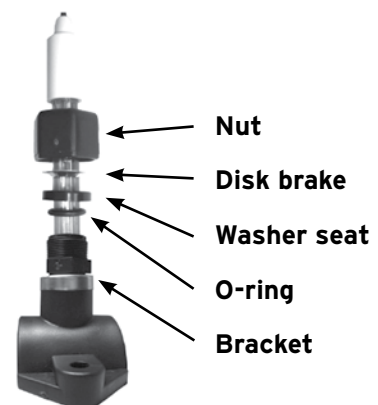


Fig. 7



Fig. 8

3.2.4 Mounting of Injection Valve

Choose a mounting location on your pipework that is:

1. Prior to your salt cell
2. AFTER the placement of the probe clamp
3. Ensure the probe clamp lead is within reach of the pH pump controller.

Pierce the top wall of the pipe work through the clamp:

- Ø 8mm for the injection valve

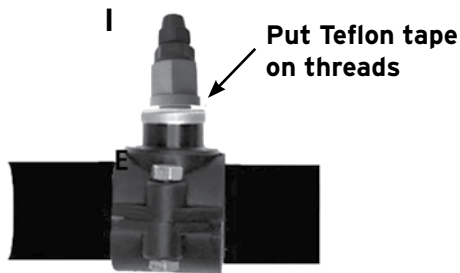


Fig. 9

3.2.5 Mounting of the Tube into the Injection Valve

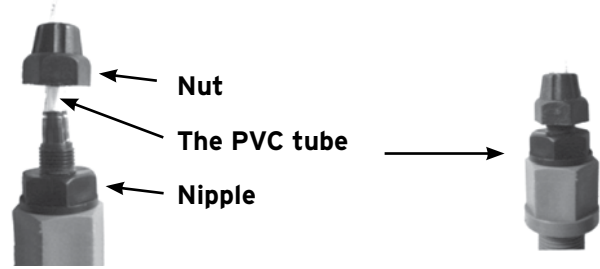


Fig. 10


The hydraulic hose is placed in the same way on the foot filter and on the pump.

1. Slide the tube through the nut
2. Put the tube at the bottom of the conical nipple
3. Screw the nut by hand onto the nipple

4. CONNECTING THE POWER AND POOL PUMP TO YOUR PH CONTROLLER

Connection diagram for the Henden pH Dosing Pump

The Henden pH Dosing Pump system should ideally be plumbed and connected up as shown in the diagram below.

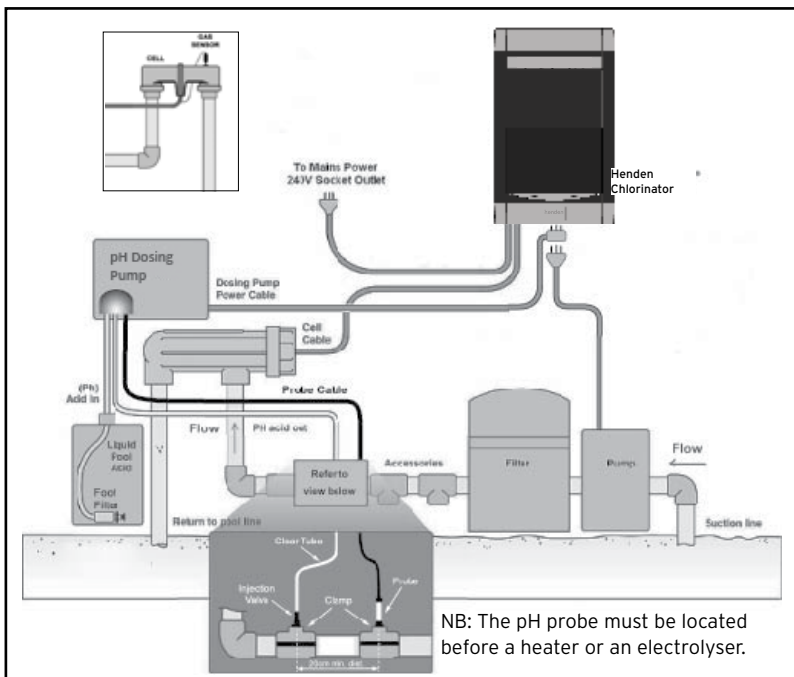

If your pool pump is plugged into your Chlorinator:

1. Remove the pump plug from the Chlorinator pump power socket. (Usually at the bottom of the Chlorinator)
2. Plug the 3 pin male piggy back plug on your pH pump into the Chlorinator pump power socket.
3. Plug your pool pump into the female piggy back socket on the back of the pH pump power socket.

OWNERS MANUAL

5. COMMISSIONING AND OPERATION

5.1 Calibration Procedure

This operation is used to set the sensor response reading of the pH and peristaltic pump.

Before carrying out the calibration of the probe, remember to:

- Stop the filtration pump
- Close the isolation valves, if fitted
- Remove the probe from the probe holder
- Put the shutter washer (fig. 12) in to close off the hole in the probe holder
- Open the isolation valves, if fitted
- Turn on the filtration pump and check that the ON/OFF switch (I/O) of the pump is switched to "I"
- Carry out the calibration of the probe and repeat the previous actions to put the probe back in place. As described in 3.2.3

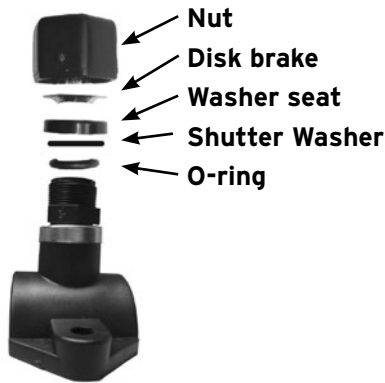


Fig. 11

5.2 Important Points

- To ensure the probe signal remains as accurate as possible, please follow the procedure as listed below during the commissioning of the pool and every 3-4 weeks thereafter, or as required.
 - The procedure is renewed in case of abnormal consumption of chemicals.
1. Remove the protective cap of the probe and keep it for reuse at the time of winterising.




2. Rinse the probe in tap water for at least 20 minutes.



3. Next immerse the probe in the pH 7 solution, stir around in bottle and leave it in the solution being careful not to touch the probe or the cable.



4. After a period of at least one minute, the stabilised value is displayed. Press the CAL button until the display shows CAL flashing then release. The quality of the probe reading is then briefly displayed.

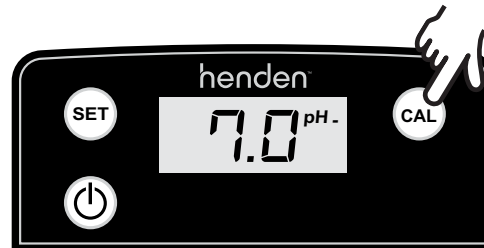


5. The calibration of the Henden pH Dosing Pump is completed: It is now ready to measure the pH of your pool.

5.3 Settings


Functions	Factory Settings
Unit of measure	pH
Set point	7.4
Type of regulation	Acid- reduce the pH by dosage of an acid (pH-)
pH 7 calibration	To an accuracy more than 0.2 pH
Proportional regulation*	Factory function

*Proportional: Dosage adjusted according to different cycles time/breaks. At the approach of the set point, the pump reduces its time of dosing.

5.3.1 Adjustment of the Set Point

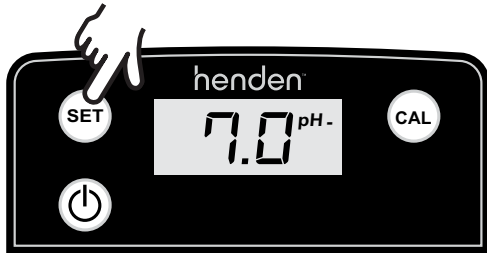

Pressing the SET button displays the current set point value.

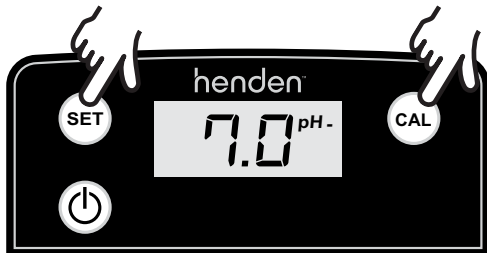

To change the value of the set point, press SET and press CAL by pulse. Each pulse changes the pH value by 0.1 pH, between 7.0 and 7.6.

5.4 Operating Principle

The Henden pH Dosing Pump adjusts its dosage in proportion to the demand. It will dose less if the displayed measure is near the set point. In normal operation, the pump will increase its 'non operational' time period proportional to the required dosage demand. That is why the device often has the pump off. **This is normal.**


Adjust the pH slowly to preserve the natural quality of your water.

After 30 minutes without pressing the keys, the backlight turns off to save energy. A short press on **SET** or **CAL** turns it on again.

6. MAINTENANCE

6.1 Replacement of the Peristaltic Tube

Follow steps 1 to 9 as shown.

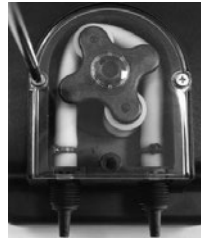

1.




2.




3.



4.

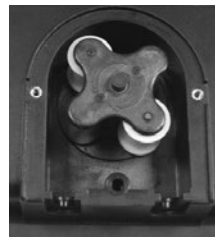


5.

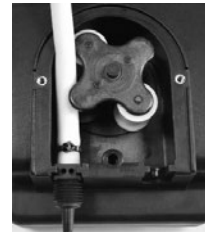

6.



7.

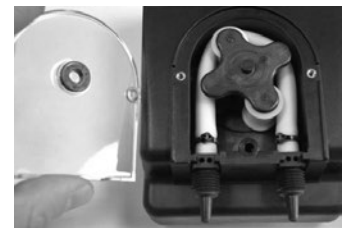

8.



9.

Fig. 13

6.2 Maintenance of the Peristaltic Tube and Roller Holder

The Henden pH Dosing Pump uses a roller holder and a “squeeze” tube to pump the acid into the pool. This tube is perishable and must be replaced periodically. We recommend replacement approximately once per year. The tube should be visually inspected regularly for leaks or damage. It is recommended that the roller holder be periodically inspected and replaced every 2 years.

6.3 Maintenance of the Probe

Over time, in addition to the normal wear of the probe, according to use and water quality that is more or less calcareous, measurement will deteriorate. A thin layer of limestone with other elements present in the pool water will deposit on the sensing element of the probe. For assistance in overcoming this issue, please contact: 1300 HENDEN (1300 436 336).

6.4 Controller Wintering

Only in areas where subzero temperatures are experienced

- During winterising, you must protect the peristaltic tube.
- It is advisable to remove the peristaltic tube and flush it with fresh water. Once complete ensure the tube is completely dry and re-install.

6.5 Probe Wintering

- During winterising, the probe must be removed from of the installation and pipe work.
- The protection cap as shown on page 8, must be filled with fresh water a 1/3 of the way up.
- Place the probe into the protection cap and water and store in a safe place until after the winter period is over. (Re-install as shown on page 8.

7. TROUBLE SHOOTING

Error	Reasons	How to solve it
CAL Err	<p>If this error is displayed during the calibration phase and cycle it is as a result of:</p> <ol style="list-style-type: none"> 1. Your pH probe is not working properly 2. Your buffer solution is polluted 3. You have water/oxidisation in the probe connector 	<ol style="list-style-type: none"> 1. Change the probe 2. Change the buffer solution 3. Change over the probe
Alarm Alr Err	<p>If the pH is lower than pH 5 or above pH 9, this alarm will be displayed and dosing will be stopped.</p>	<p>Adjust your water parameter manually so that it comes back to the required value of these parameters:</p> <ul style="list-style-type: none"> - Total alkalinity - TH (hardness) - pH <p>The dosing pump will restart as soon as the pH reading</p>

If trouble persists, please contact Henden (1300 HENDEN) or your local Reece Irrigation & Pools branch. For assistance in locating your nearest branch visit reece.com.au/storefinder

HENDEN™ REPAIR OR REPLACEMENT GUARANTEE

Henden Guarantee Period
Two Years

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Should you experience any difficulties with your Henden product, we suggest in the first instance that you contact the installer of the product or your local Reece Irrigation & Pools branch.

Alternatively you can phone Henden. On receipt of your claim, Henden will seek to resolve your difficulties, if the product is faulty or defective, advise you on how to have your Henden product repaired, obtain a replacement or a refund.

Henden does not cover normal wear or tear, or damage resulting from misuse or negligent handling, improper use for which the product was not designed or advertised, failure to properly follow the provided installation and operating instructions, failure to carry out maintenance, corrosive or abrasive water or other liquid, lightning or high voltage spikes, or unauthorized persons attempting repairs. Where applicable, your Henden product must only be connected to the voltage shown on the nameplate.

Henden does not cover freight or any other costs incurred in making a claim. Please retain your receipt as proof of purchase; you MUST provide evidence of the date of original purchase when making a claim.

Henden shall not be liable for any loss of profits or any consequential, indirect or special loss, damage or injury of any kind whatsoever arising directly or indirectly from Henden products.

Should your Henden product require repair or service after the guarantee period; contact your nearest Reece Irrigation & Pools branch or phone the number below.

For a complete list of Reece Irrigation & Pools branches visit our website reece.com.au/storefinder or contact:

TECHNICAL AND AFTER SALES SUPPORT:

1300 HENDEN (1300 436 336)

MAILING/MANUFACTURER ADDRESS:

Davey Water Products
6 Lakeview Drive, Scoresby,
Victoria, 3179

henden™

